 
 


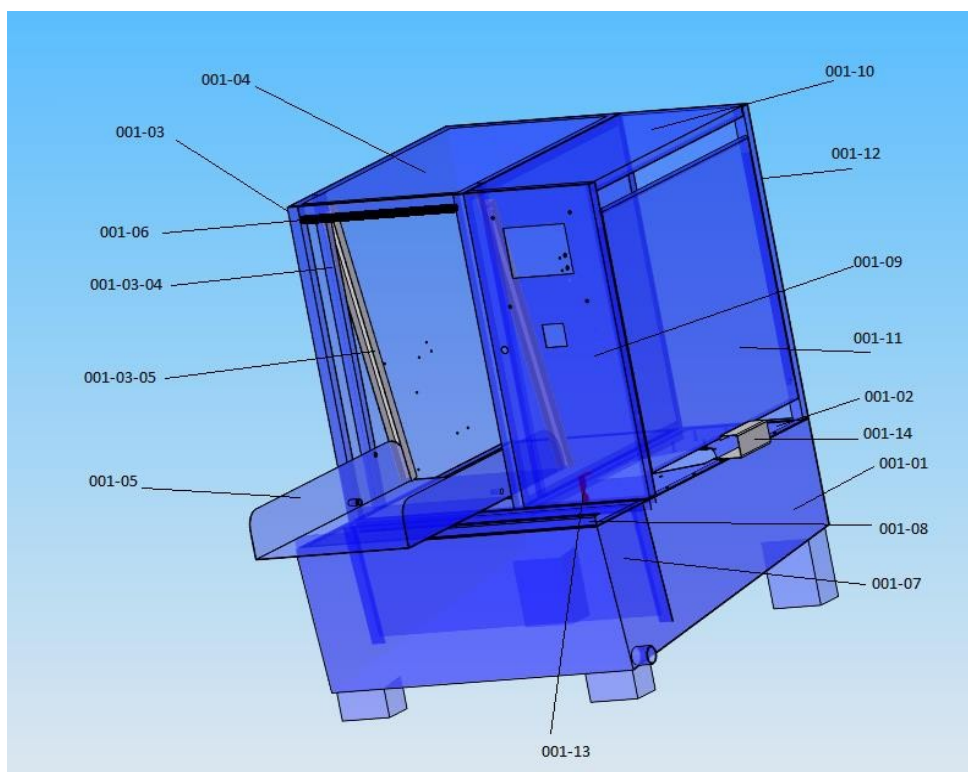


Pos.	PART NAME	NUMBER	
1	Tank 200	001-01-200	
2	Tank 300, 300H	001-01-300	
3	Tank 360P, 360HP, 4x4P, 4x4HP, Combo Q	001-01-360	
4	Tank F1	001-01-450	
5	Tank 500, 500H	001-01-500	
6	Tank 500HP	001-01-600	
7	Tank mounting plate 200, 300, 360P, 4x4P	001-02-200	
8	Tank mounting plate 300H, 360HP, 4x4HP, Combo, F1	001-02-360	
9	Tank mounting plate 500	001-02-500	
10	Tank mounting plate 500H	001-02-600	
11	Washing chamber 200	001-03-200	
12	Washing chamber 300, 300H	001-03-300	
13	Washing chamber 360P, 360HP	001-03-360	
14	Washing chamber 4x4P, 4x4HP, Combo Q	001-03-400	
15	Washing chamber F1	001-03-450	
16	Washing chamber 500, 500H	001-03-500	
17	Washing chamber 500HP	001-03-600	
18	Washing chamber rubber mat left 200	001-03-01-200	
19	Washing chamber rubber mat left 300, 300H	001-03-01-300	
20	Washing chamber rubber mat left 360P, 360HP	001-03-01-360	
21	Washing chamber rubber mat left 4x4P, 4x4HP, Combo Q	001-03-01-400	
22	Washing chamber rubber mat left strona F1	001-03-01-450	
23	Washing chamber rubber mat left 500, 500H	001-03-01-500	
24	Washing chamber rubber mat left 500HP	001-03-01-600	
25	Washing chamber rubber mat rear 200, 300, 300HP	001-03-02-200	
26	Washing chamber rubber mat rear 360P, 360HP	001-03-02-360	
27	Washing chamber rubber mat rear 4x4P, 4x4HP, Combo Q	001-03-02-400	
28	Washing chamber rubber mat rear F1	001-03-02-450	

29	Washing chamber rubber mat rear 500, 500H	001-03-02-500	
30	Washing chamber rubber mat rear 500HP	001-03-02-600	
31	Washing chamber rubber mat right 200	001-03-03-200	
32	Washing chamber rubber mat right 300, 300H	001-03-03-300	
33	Washing chamber rubber mat right 360P, 360HP	001-03-03-360	
34	Washing chamber rubber mat right 4x4P, 4x4HP, Combo Q	001-03-03-400	
35	Washing chamber rubber mat right F1	001-03-03-450	
36	Washing chamber rubber mat right 500, 500H	001-03-03-500	
37	Washing chamber rubber mat right 500HP	001-03-03-600	
38	Washing chamber post left/right 200, 300	001-03-04-300	
39	Washing chamber post left/right 360, 4x4	001-03-04-400	
40	Washing chamber post left/right 500	001-03-04-500	
41	Protective hanger 200, 300	001-03-05-300	
42	Protective hanger 360, 4x4	001-03-05-400	
43	Protective hanger 500	001-03-05-500	
44	Washing chamber top cover 200	001-04-200	
45	Washing chamber top cover 300, 300H	001-04-300	
46	Washing chamber top cover 360, 4x4, Combo Q	001-04-360	
47	Washing chamber top cover F1	001-04-450	
48	Washing chamber top cover 500, 500H	001-04-500	
49	Washing chamber top cover 500HP	001-04-600	
50	Top cover rubber mat 200	001-04-01-200	
51	Top cover rubber mat 300, 300H	001-04-01-300	
52	Top cover rubber mat 360, 4x4, Combo Q	001-04-01-360	
53	Top cover rubber mat F1	001-04-01-450	
54	Top cover rubber mat 500, 500H	001-04-01-500	
55	Top cover rubber mat 500HP	001-04-01-600	
56	Washing chamber flap 200, 300, 300H	001-05-300	
57	Washing chamber flap 360P, 360HP	001-05-360	
58	Washing chamber flap 4x4P, 4x4HP, Combo Q	001-05-400	
59	Washing chamber flap F1	001-05-450	
60	Washing chamber flap 500, 500H	001-05-500	
61	Washing chamber flap 500HP	001-05-600	
62	Flap handle (complete set) 500, 500H, 500HP	001-05-651	
63	Flap handle (all)	001-05-100	
64	Flap rubber mat 200, 300, 300H	001-05-01-300	
65	Flap rubber mat 360P, 360HP	001-05-01-360	
66	Flap rubber mat 4x4P, 4x4HP, Combo Q	001-05-01-400	
67	Flap rubber mat F1	001-05-01-450	
68	Flap rubber mat 500, 500H	001-05-01-500	
69	Flap rubber mat 500HP	001-05-01-600	
70	Flap bushing	001-05-01	
71	Flap bushing 500	001-05-02	
72	Protective apron 200, 300, 300H	001-06-200	
73	Protective apron 360P, 360HP	001-06-360	
74	Protective apron 4x4P, 4x4HP, Combo Q	001-06-400	
75	Protective apron F1	001-06-450	
76	Protective apron 500, 500H	001-06-500	
77	Protective apron 500HP	001-06-600	
78	Compartment 300, 300H	001-07-300	

79	Compartment 360, 4x4, Combo Q	001-07-360	
80	Compartment F1	001-07-450	
81	Compartment 500, 500H	001-07-500	
82	Compartment 500HP	001-07-600	
83	Service hatch of the settling tank 300, 300H	001-08-300	
84	Service hatch of the settling tank 360, 4x4, Combo Q	001-08-360	
85	Service hatch of the settling tank F1	001-08-400	
86	Service hatch of the settling tank 500, 500H	001-08-500	
87	Service hatch of the settling tank 500HP	001-08-600	
88	Service hatch bumper	001-08-01	
89	Front panel 200,300, 360P	001-09-300	
90	Front panel 4x4P	001-09-420	
91	Front panel 300H, F1	001-09-450	
92	Front panel 360HP	001-09-360	
93	Front panel 4x4HP, Combo Q	001-09-400	
94	Front panel 500	001-09-500	
95	Front panel 500H, 500HP	001-09-600	
96	Control compartment top cover 200	001-10-200	
97	Control compartment top cover 300, 360, 4x4	001-10-300	
98	Control compartment top cover 500	001-10-500	
99	Control compartment side cover 200	001-11-200	
100	Control compartment side cover 300, 360, F1	001-11-300	
101	Control compartment side cover 4x4, Combo Q	001-11-400	
102	Control compartment side cover 500	001-11-500	
103	Control compartment rear cover 200, 300, 360, F1	001-12-200	
104	Control compartment rear cover 4x4, Combo Q	001-12-400	
105	Control compartment rear cover 500	001-12-500	
106	Level indicator - working substance	001-13	
107	Drain pipe holder	001-14	
108	Shelf 500	001-15	
109	Adhesive and sealant	001-16	

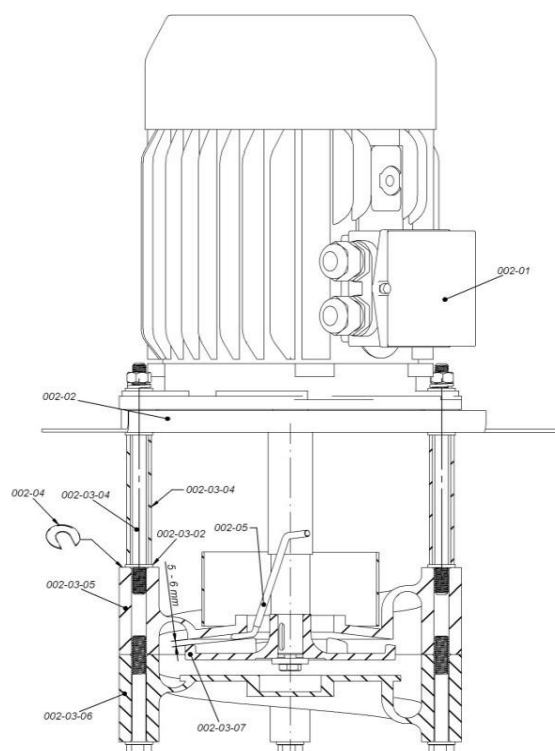


Pos.	PART NAME	NUMBER	
1	Pump motor 400V	002-01-400	
2	Pump motor 230V	002-01-230	
3	Engine shaft seal	002-01-01	
4	Main motor pump mounting sheet	002-02	
5	COMPLETE PUMP (400V motor)	002-03-415	
6	COMPLETE PUMP (230V motor)	002-03-215	
7	Pump repair kit (without motor)	002-03-567	
8	Pump impeller repair kit	002-03-700	
9	Bakelite washer (now steel)	002-03-01	
10	Washer 24x13x2,5	002-03-02	
11	Pin, M12	002-03-03	
12	Spacing sleeve	002-03-04	
13	Pump body, upper	002-03-05	
14	Pump body, lower	002-03-06	
15	Pump impeller	002-03-07	
16	Impeller washer	002-03-08	
17	Impeller fixing bolt	002-03-09	
18	Motor shaft wedge	002-03-10	
19	Bolt, M12	002-03-11	
20	Dosing ring	002-03-12	
21	Washer, M12	002-03-13	
22	Spring washer, M12	002-03-14	
23	Nut, M12	002-03-15	
24	Adjusting spacer included in repair kit	002-04	
25	Gauge / assembly gauge included in repair kit	002-05	

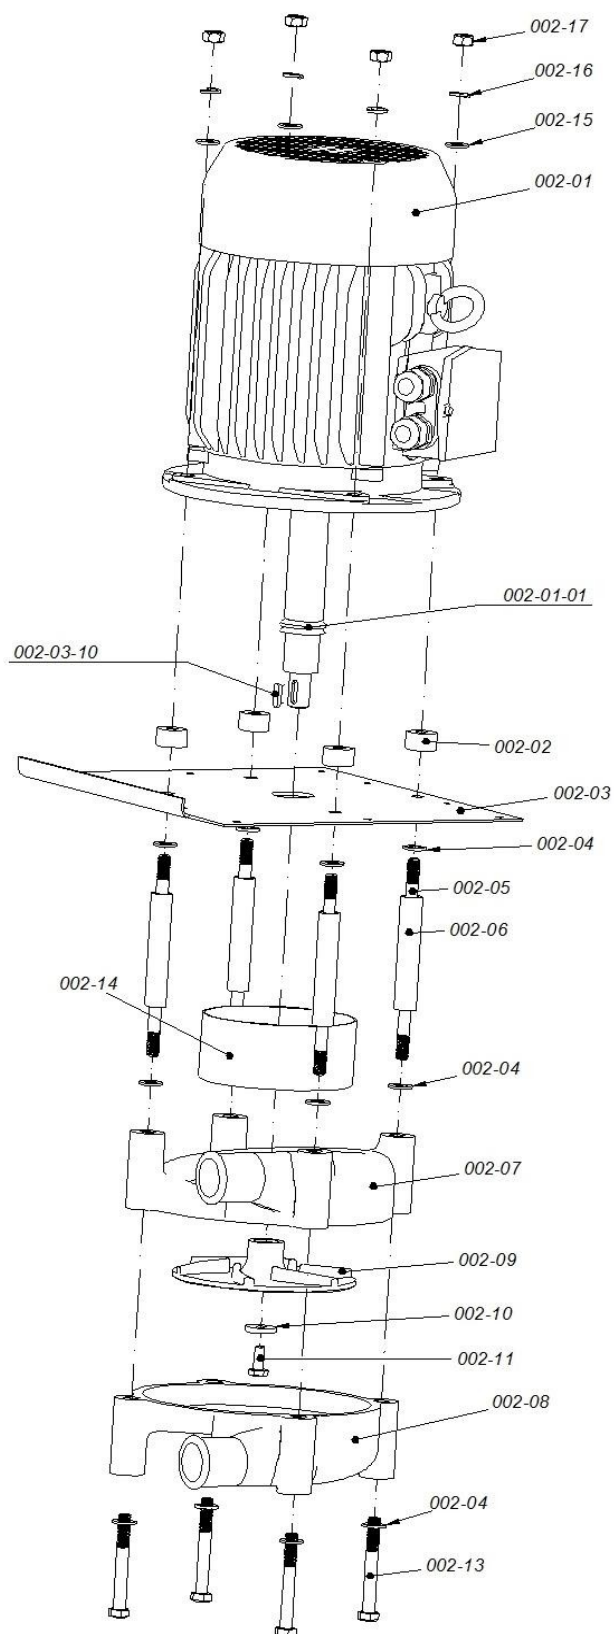 


Standard drive SD (200/300/500)

 up to 2017 (360/4x4)

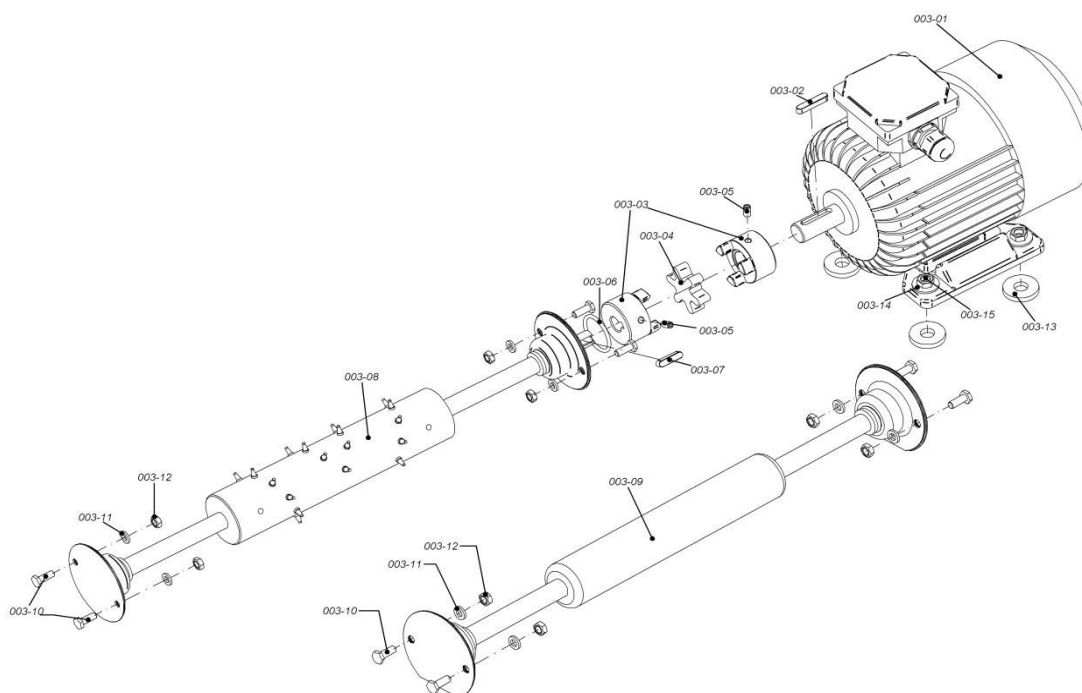

Double drive DD (360/4x4/F1/COMBO)

 
also 300H (DD)

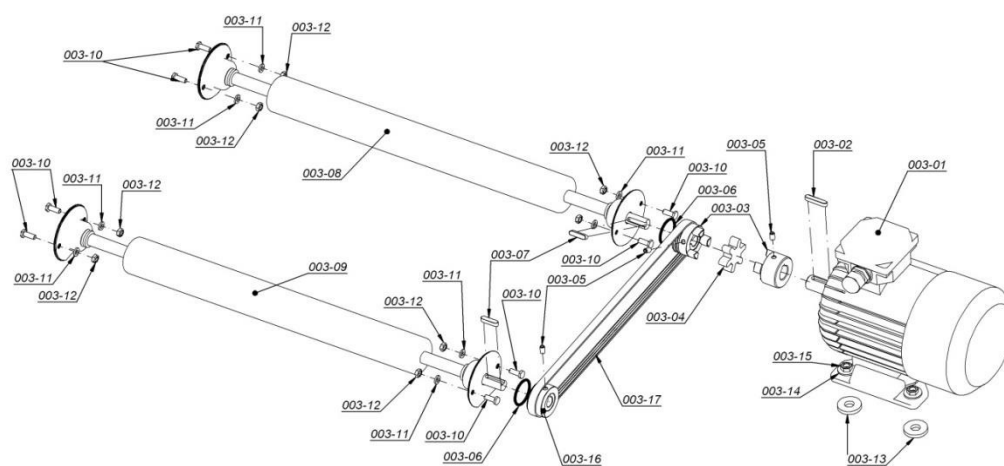

Pos.	PART NAME	NUMBER	
1	Drive motor 0,37 kW (200,300, 360)	003-01	
2	Drive motor 0,55 kW (4x4, F1)	003-01-400	
3	Drive motor 1,1 kW (500)	003-01-500	
4	Motor shaft wedge	003-02	
5	Coupling (200, 300)	003-03	
6	Coupling (DD)	003-03-DD	
7	Coupling (500)	003-03-500	
8	Coupling rubber connector (200, 300, 360, 4x4, F1)	003-04	
9	Coupling plastic connector (500)	003-04-500	
10	Screw	003-05	
11	O-ring seal, pan	003-06	
12	Drive shaft wedge	003-07	
13	Drive shaft (200, 300)(SD)	003-08	
14	Drive shaft (360, 4x4) (SD)	003-08-SD	
15	Drive shaft (DD 300H)	003-08-DD300H	
16	Drive shaft (DD)	003-08-DD	
17	Drive shaft (DD F1)	003-08 450	
18	Drive shaft (500,500H)	003-08 500	
19	Drive shaft (500HP)	003-08 600	
20	Support shaft (200, 300)	003-09	
21	Support shaft (360, 4x4) (SD)	003-09 SD	
22	Support shaft (DD 300H)	003-09 DD300H	
23	Support shaft (DD)	003-09 DD	
24	Support shaft (DD F1)	003-09 450	
25	Support shaft (500 ,500H)	003-09 500	
26	Support shaft (500HP)	003-09 600	
27	Pan fixing screw	003-10	
28	Washer	003-11	
29	Nut	003-12	
30	Spacer	003-13	
31	Nut, M8	003-14	
32	Washer, M8	003-15	
33	Drive pulley (DD)	003-16	
34	Drive belt(DD)	003-17	
35	Bearing with housing, set SD DD	003-18	
36	Bearing with housing, set 500 500HP	003-18-500	


Stabilizations rollers (200, 300)

 Set: 004-10-01

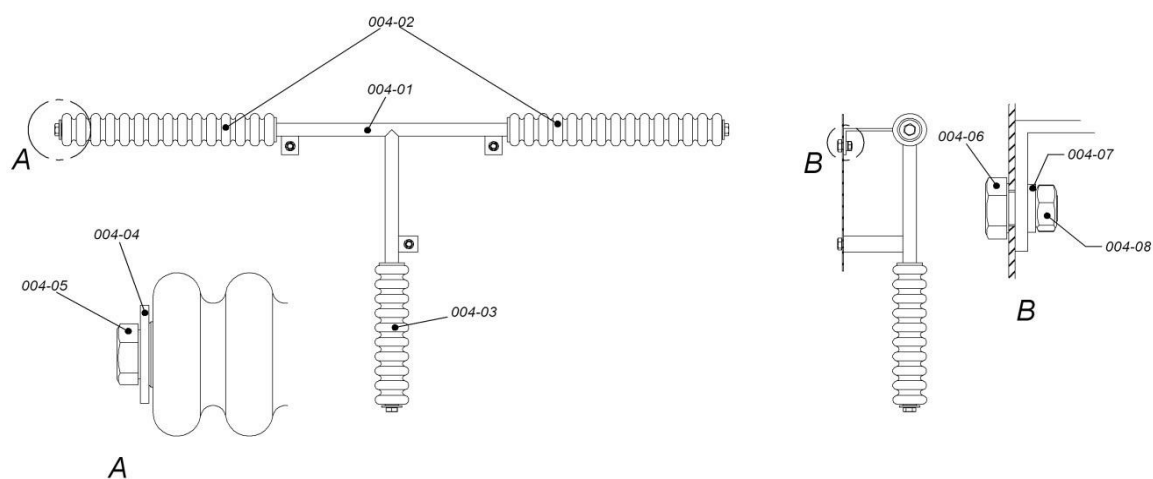


Stabilizations rollers (300H, 360, 4x4, F1, Combo)

 
Set: 004-10-02

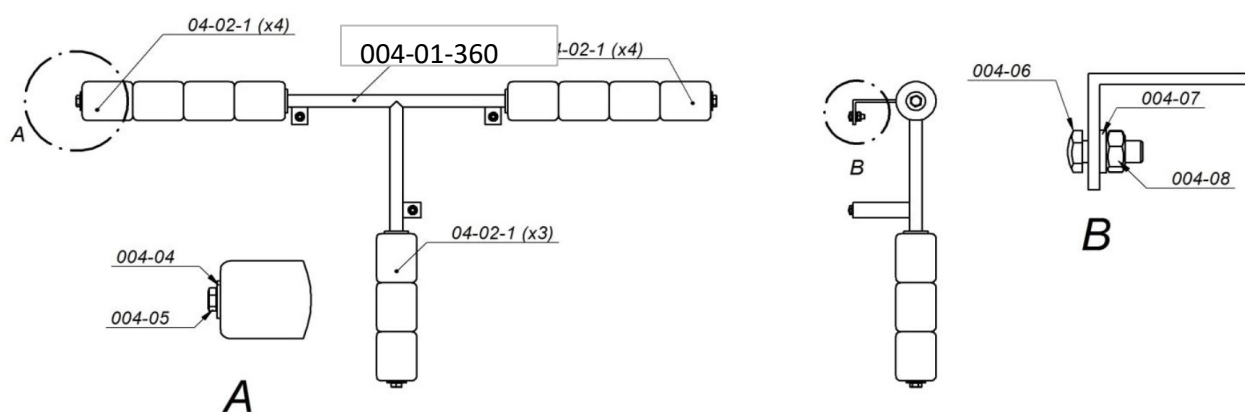

Stabilizations rollers (500)

 
 
incl. 004-01-01, 004-01-02, 004-01-03

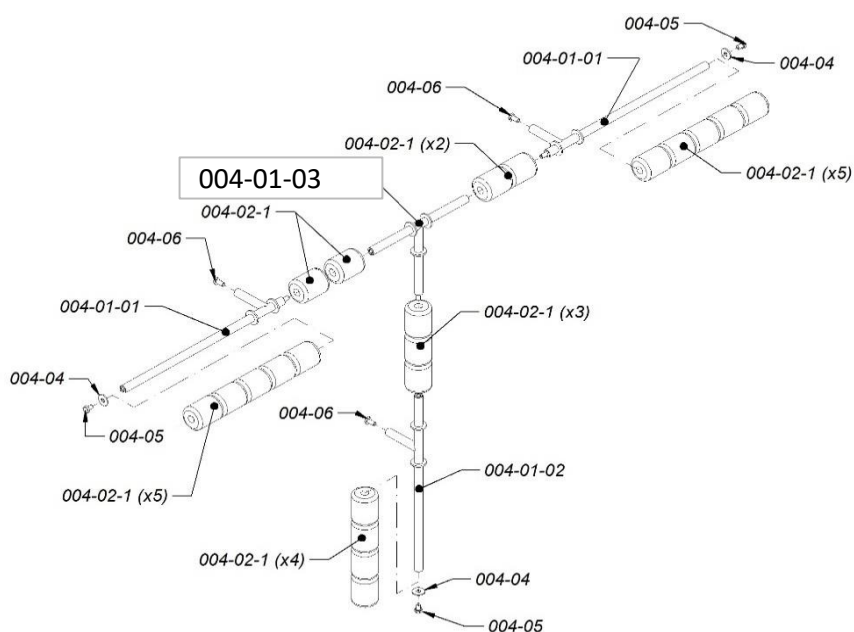

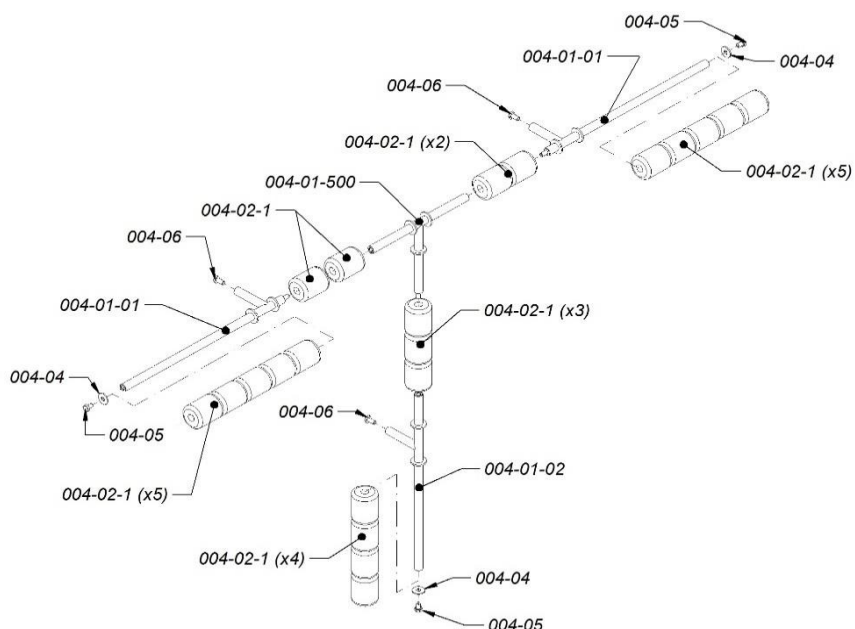


004 Stabilizations Rollers

Pos.	PART NAME	NUMBER	
1	Side rollers cross frame (200, 300)	004-01	
2	Side rollers cross frame (300H, 360, 4x4, F1, Combo Q)	004-01-360	
3	Side rollers cross frame (500, 500HP)	004-01-500	
4	Cross frame left/right (500)	004-01-01	
5	Side rollers bottom cross frame (500)	004-01-02	
6	Side rollers middle cross frame (500)	004-01-03	
7	Side roller long , old type (200,300)	004-02	
8	Side roller short , old type (200,300)	004-03	
9	Side roller segment (1 piece)	004-02-1	
10	Side roller segment (1 piece) complementary	004-02-2	
11	Washer	004-04	
12	Screw M8	004-05	
13	Screw M6	004-06	
14	Washer M6	004-07	
15	Nut M6	004-08	
16	Old type roller set (200, 300) (4x 004-02, 2x 004-03)	004-10-01	
17	New type roller set (300H, 360, 4x4, F1) (26x 004-02-1)	004-10-02	

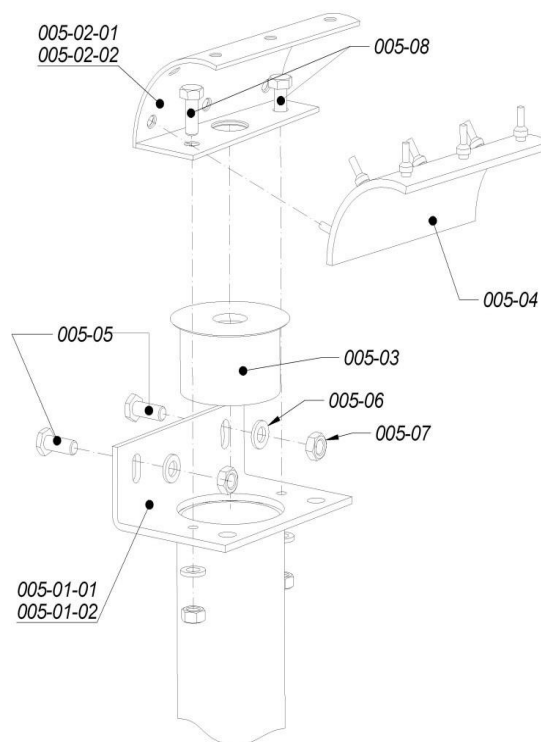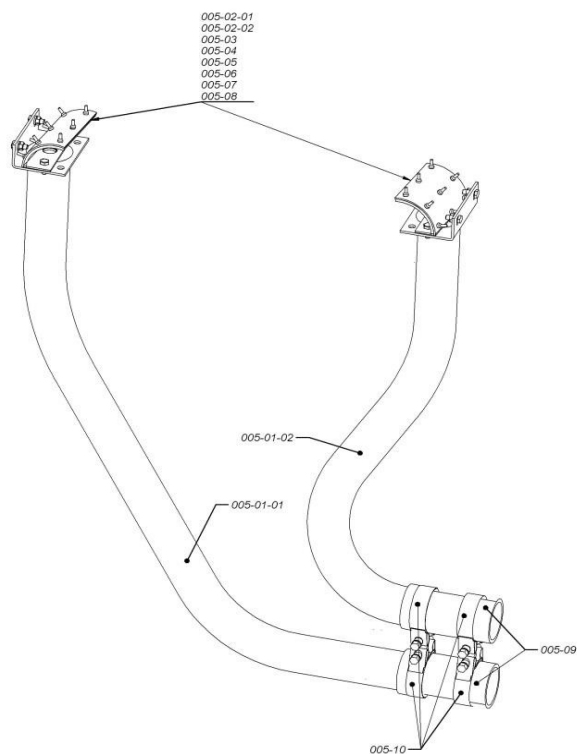  


Pos.	PART NAME	NUMBER	
1	Feeding pipe, left	005-01-01	
2	Feeding pipe, right	005-01-02	
3	Washing fluid guiding vane, left	005-02-01	
4	Washing fluid guiding vane, right	005-02-02	
5	Nozzle rubber	005-03	
6	Washing fluid guiding vane rubber	005-04	
7	Bolt, M6x16, outer	005-05	
8	Washer, M6	005-06	
9	Nut, M6	005-07	
10	Bolt, M6x16	005-08	
11	Flexible connector	005-09	
12	Clamping ring	005-10	
13	Side wing	005-11	
14	Side wing update	005-12	


 
200, 300, 360, 4x4, F1, Combo

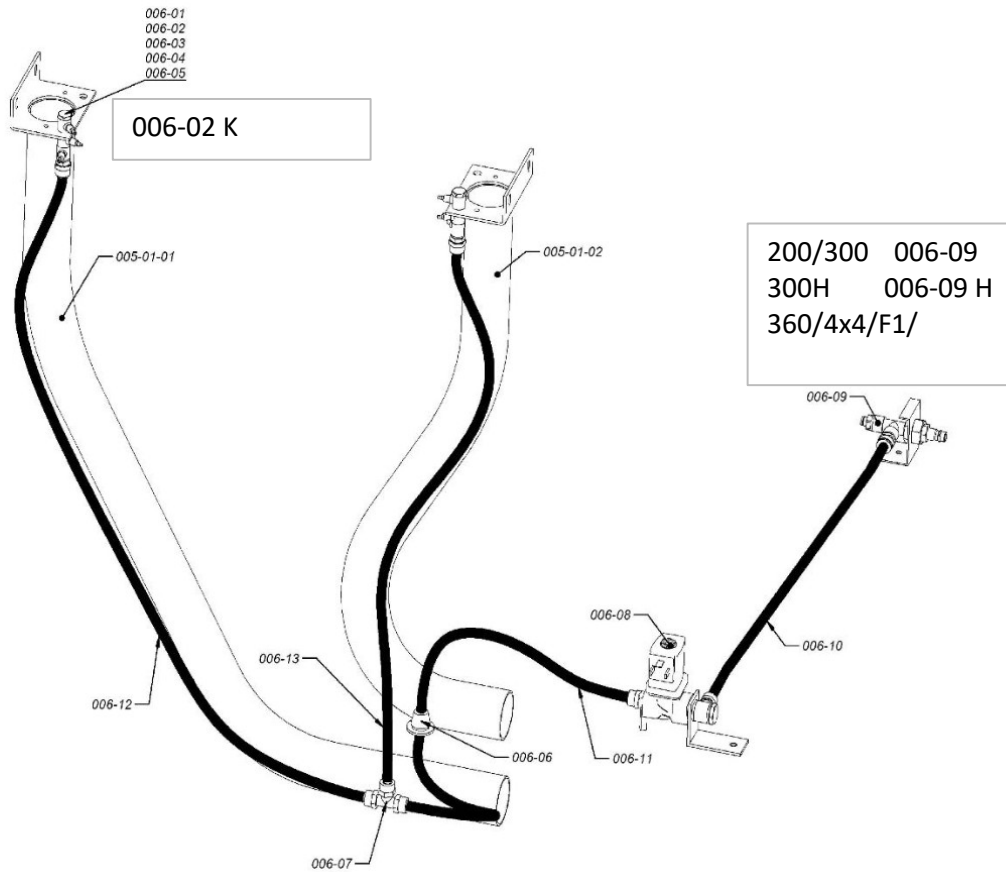


500

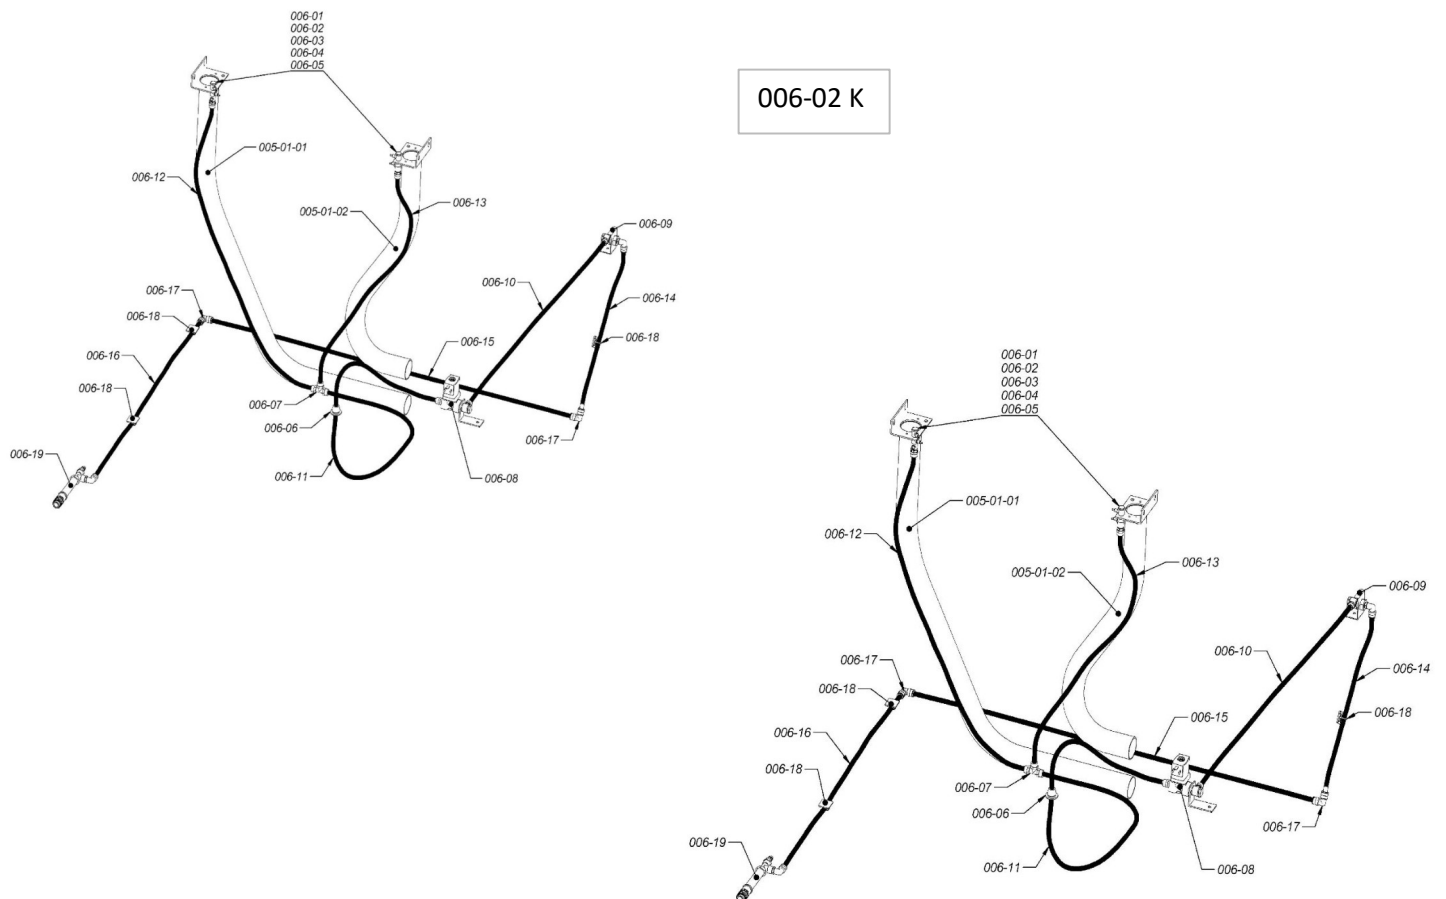 


Pos.	PART NAME	NUMBER	
1	Blow off screw	006-01	
2	Blow off nozzle	006-02	
3	Blow off nozzle set (01-05)	006-02K	
4	Blow off seal	006-03	
5	Blow off reduction	006-04	
6	Blow off nut	006-05	
7	Rubber seal	006-06	
8	3-way connector 1540 10/8	006-07	
9	3-way connector (07,11,12,13) standard	006-07 K	
10	3-way connector (07,11,12,13) 500	006-07 KT	
11	ELECTROVALVE	006-08	
12	Electrovalve fastening	006-08-01	
13	Electrovalve body	006-08-02	
14	Seal 3/8	006-08-03	
15	Pin 01-3/8	006-08-04	
16	Banjo 10-3/8	006-08-05	
17	Connector straight	006-08-06	
18	Air station 200,300	006-09	
19	Air station 300H	006-09 H	
20	Air station 360, 4x4, F1, Combo	006-09 P	
21	Air station 500	006-09 T	
22	Support	006-09-01	
23	Bulkhead connector	006-09-02	
24	Bulkhead connector nut	006-09-03	
25	3-way connector 1/4	006-09-04	
26	Quick coupler, male	006-09-05	
27	Quick coupler, female	006-09-06	
28	Connector straight 10-1/4	006-09-07	
29	Connector straight 4-1/4	006-09-08	
30	Angle connector 10-1/4	006-09-09	
31	Air supply line	006-10	
32	Air supply line 500	006-10T	
33	3-way connector air supply line	006-11	
34	Air line left	006-12	
35	Air line right	006-13	
36	Air supply line right	006-14	
37	Air supply line bottom	006-15	
38	Air supply line left	006-16	
39	Angle connector 10-10	006-17	
40	Air line holder	006-18	
41	Air station lift 500,500H	006-19	
42	Air station lift 500 HP	006-19 HP	
43	Bulkhead sleeve	006-19-01	
44	Sealing washer	006-19-02	
45	Quick coupler	006-19-03	
46	3-way connector air supply line 1/4 1/4	006-19-04	
47	Connectro (male)	006-19-05	
48	Angle connector 10-1/4	006-19-06	

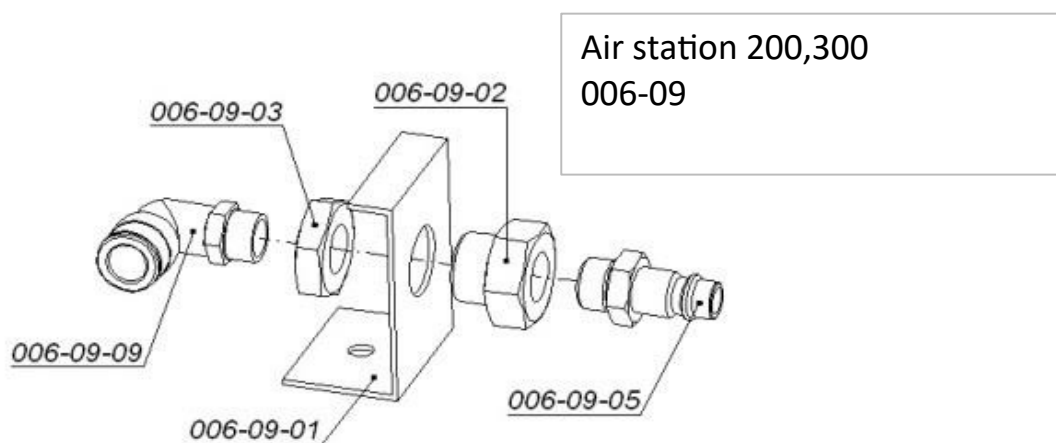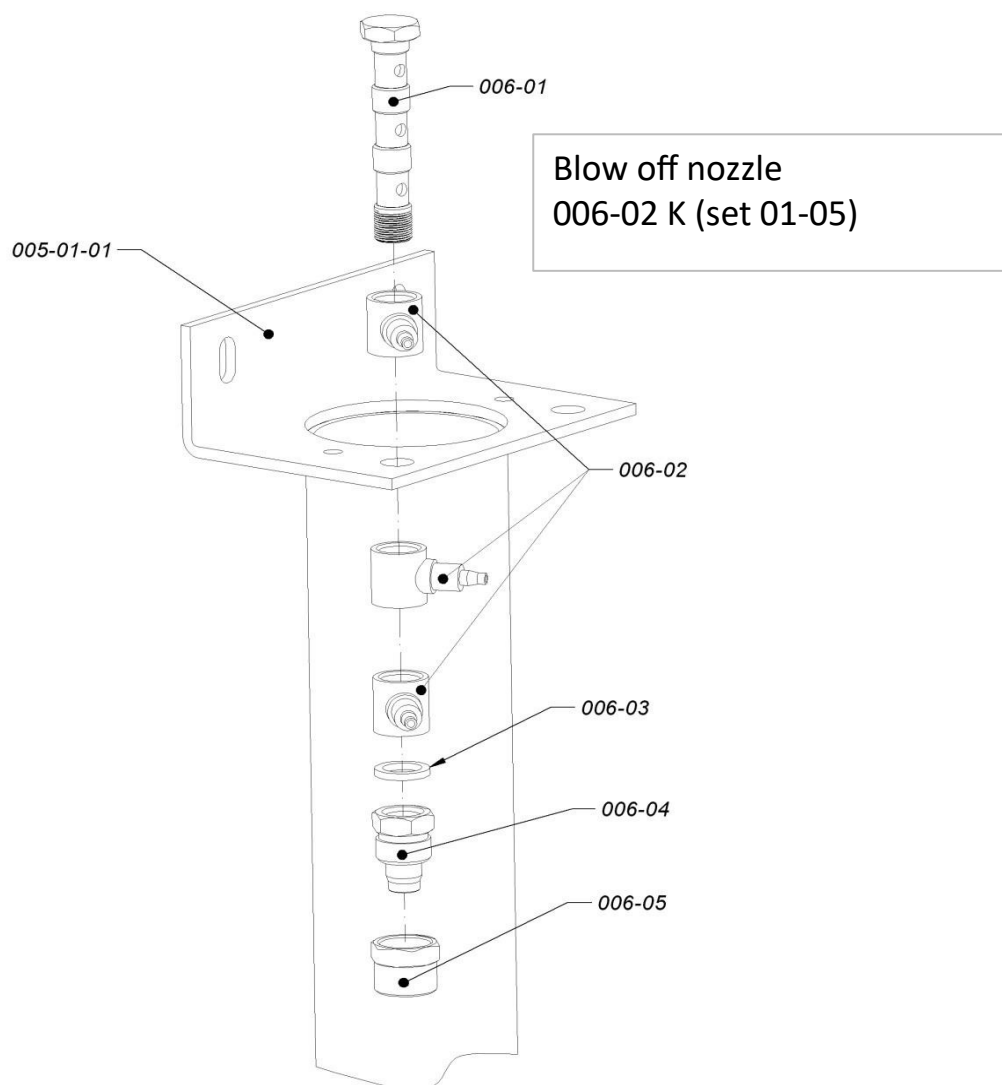  


Air station 300H
06-009 H

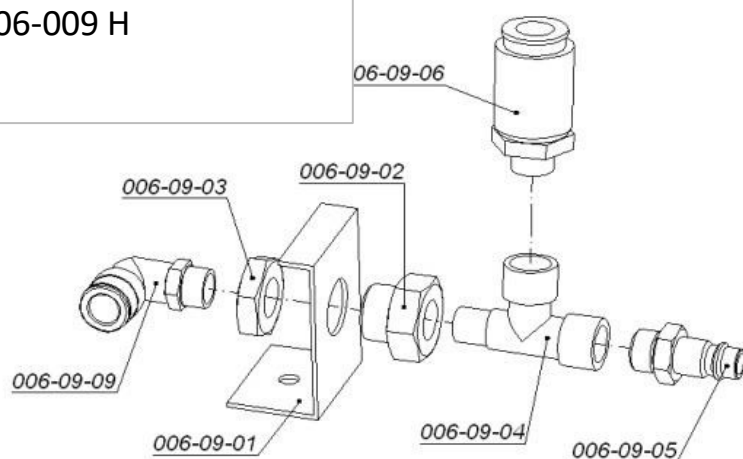 



Air station 360,4x4,F1,Combo
06-009 P

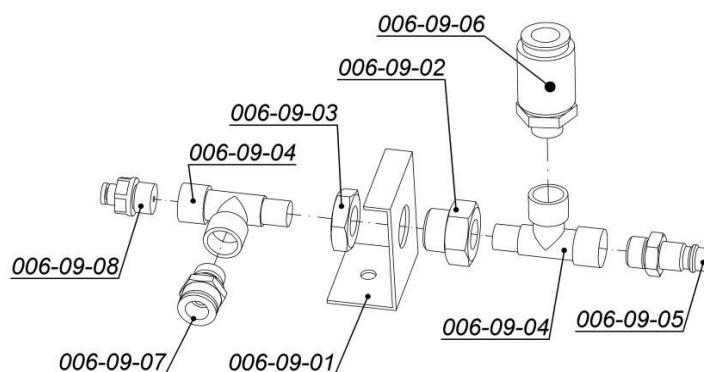 


Air station 500
006-09 T

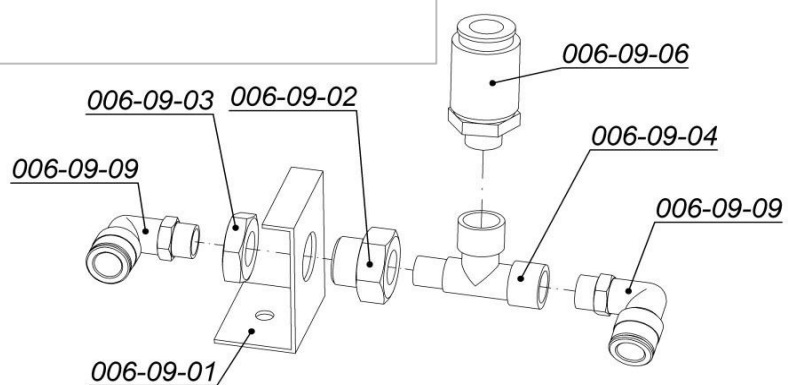 

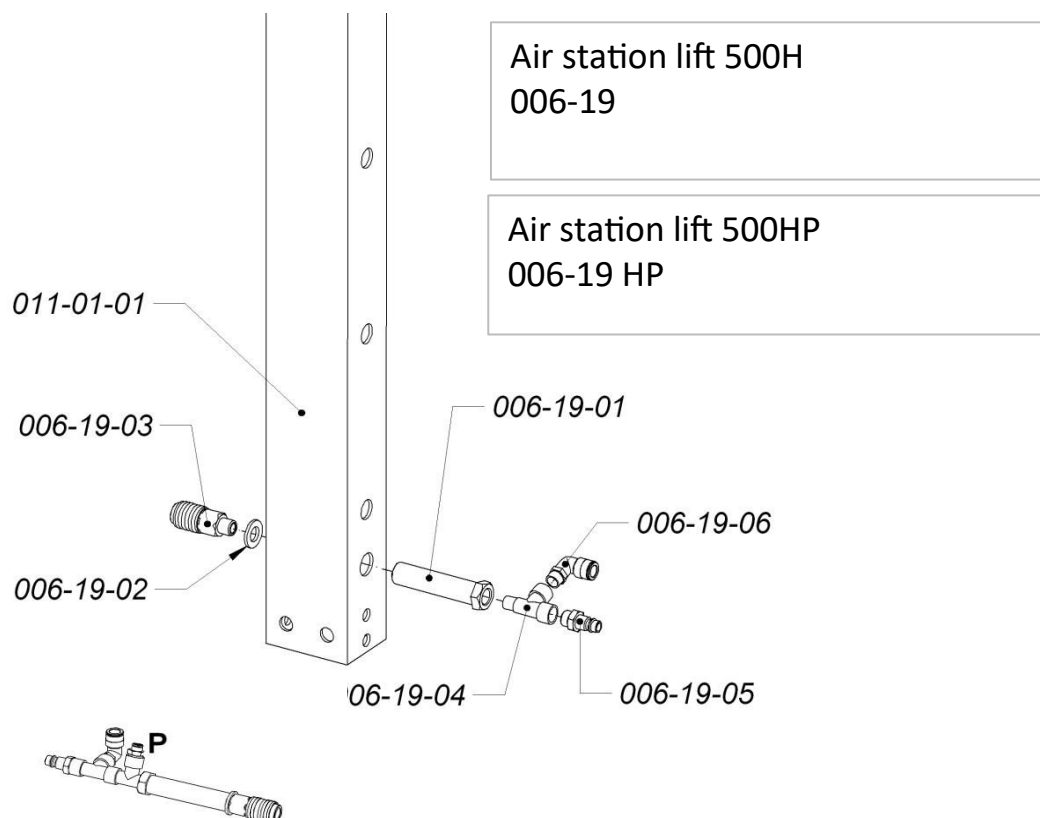 


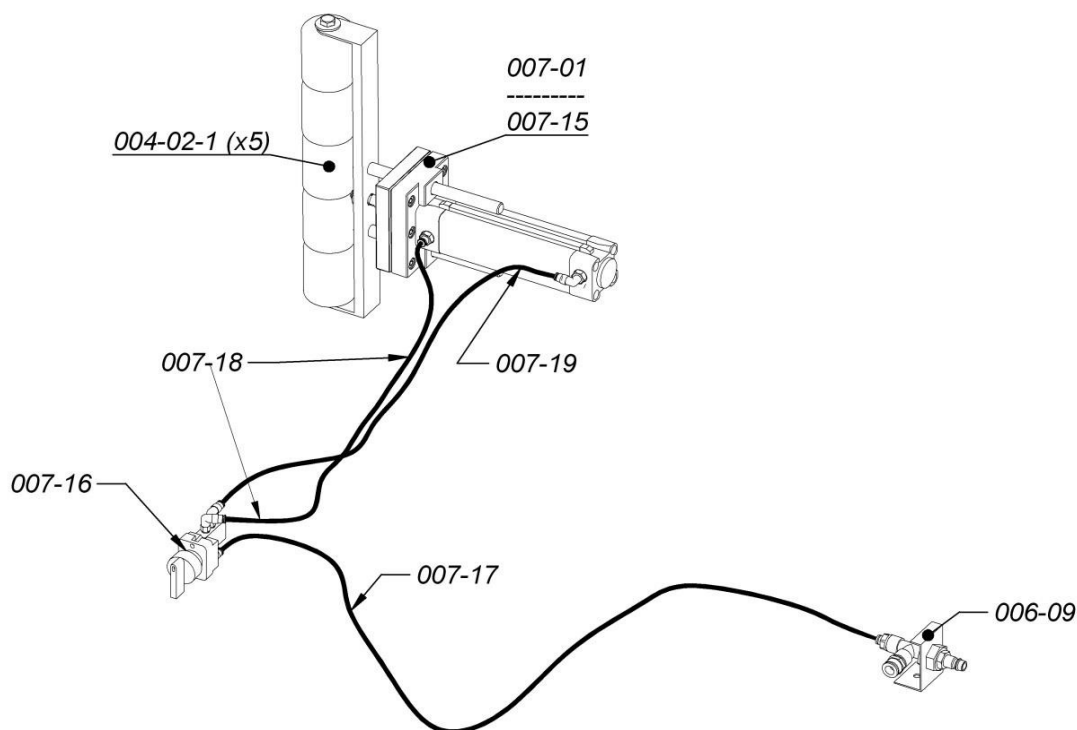 

Pos.	PART NAME	NUMBER	
1	Side roller, segment type (single element)	004-02-1	
2	Air station 360, 4x4, F1, Combo	006-09 P	
3	Servomotor fixing element, outer	007-01	
4	Servomotor D32	007-02	
5	Servomotor fixing element, inner	007-03	
6	Servomotor guiding bar	007-04	
7	O-ring seal	007-05	
8	Scraper ring	007-06	
9	Roller fixing element	007-07	
10	Roller rod 250mm (old type 007-09)	007-08	
11	Roller rod 317mm (new type 007-09)	007-08 N	
12	Side roller long old type	007-09	
13	Washer	007-10	
14	Screw M8	007-11	
15	Nut M10	007-12	
16	Allen screw M6	007-13	
17	Connectro straight	007-14	
18	Angel connector	007-15	
19	Two-way valve	007-16	
20	Air line 4mm 158 cm	007-17	
21	Air line 4mm 48 cm	007-18	
22	Air line 4mm 57 cm	007-19	
23	Bumper rubber	007-20	
24	Roller with mounting (set)	007-07 K	
25	Stabilization module, set (old roller 007-09)	007-01 K	
26	Stabilization module, set (new roller 004-02-01)	007-01 KN	

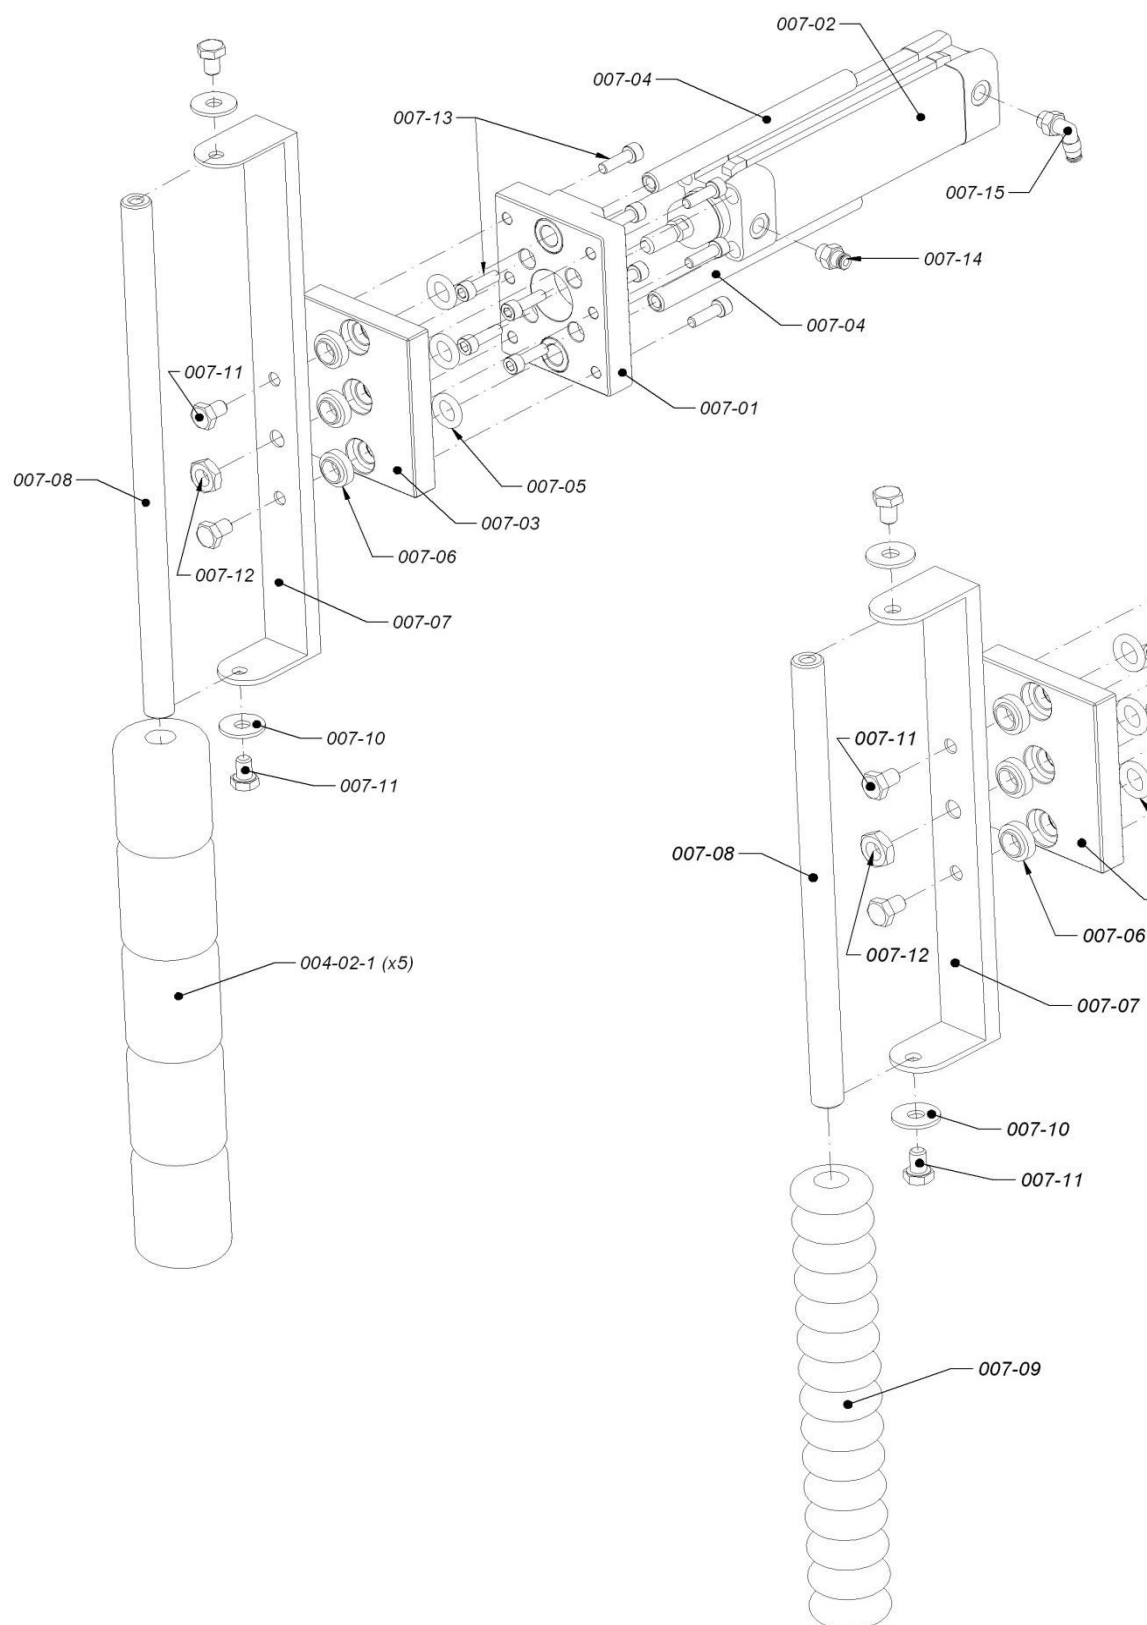 

old version


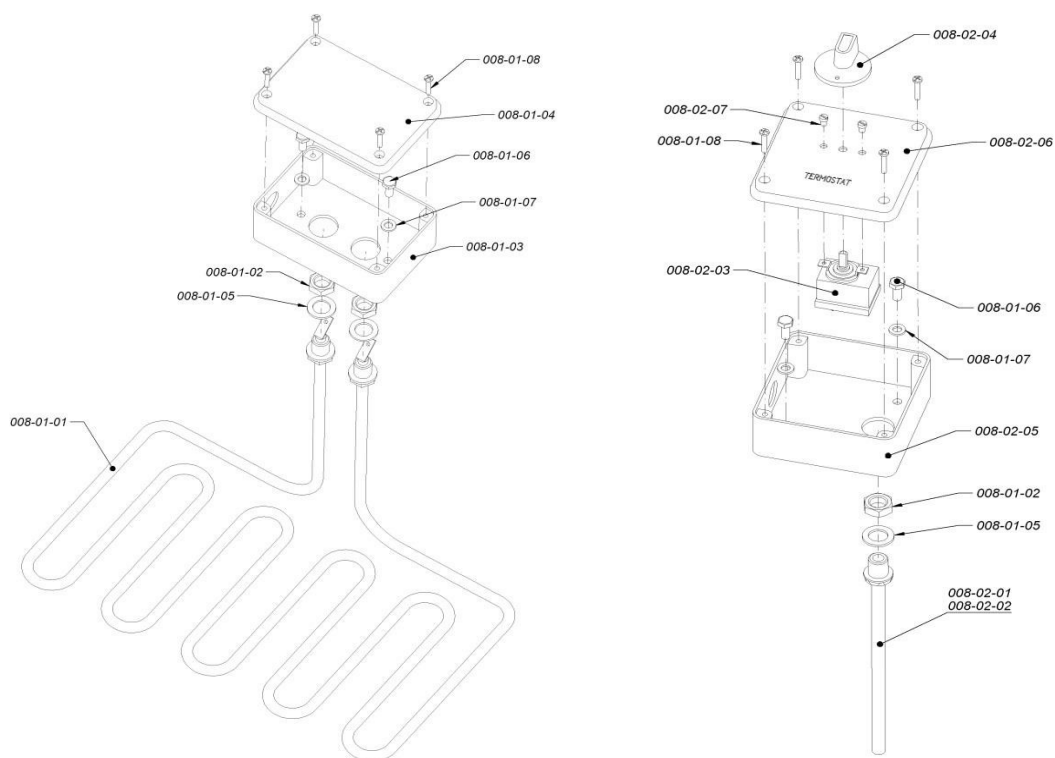 


Pos.	PART NAME	NUMBER	
1	Heater 4kW 230V	008-01-01-230	
2	Heater 4kW 400V	008-01-01-400	
3	HEATER NUT	008-01-02	
4	HEATER BOX	008-01-03	
5	HEATER BOX COVER	008-01-04	
6	Heater seal	008-01-05	
7	Screw M6	008-01-06	
8	Washer	008-01-07	
9	Heater box screw	008-01-08	
10	SENSOR COVER	008-02-01	
11	THERMOSTAT	008-02-03	
12	THERMOSTAT KNOB	008-02-04	
13	THERMOSTAT BOX	008-02-05	
14	THERMOSTAT BOX COVER	008-02-06	
15	KNOB FIXING SCREW	008-02-07	
16	Heater box (whole set)	008-01 K	
17	THERMOSTAT BOX (whole set)	008-02 K	

Manual control (200, 300, 360P, 4x4P)

400V

  without heater

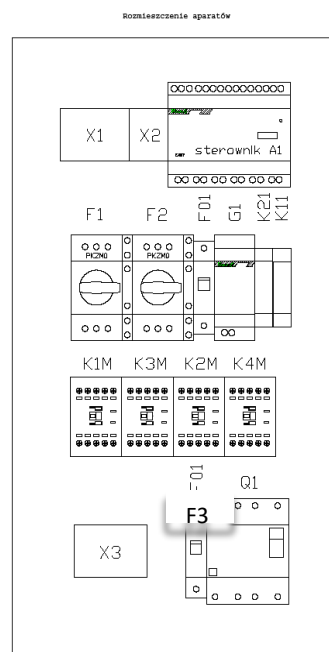
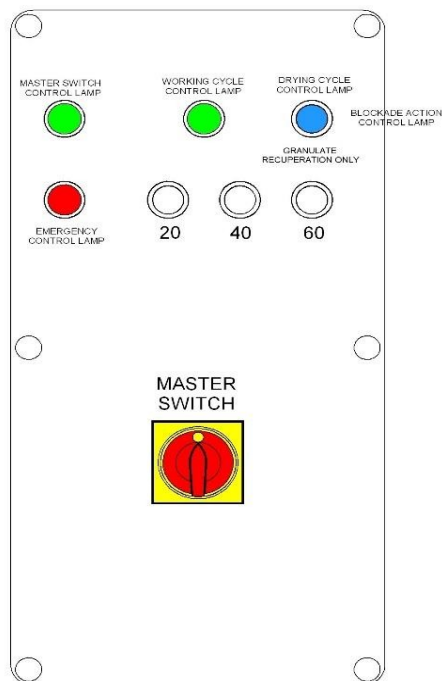


200 300 360P 500 4x4P

Pos.	PART NAME	NUMBER	
1	Electric box without heating(whole set)	009-01	
2	Main switch SG	009-01-01	
3	Programmable controller A1	009-01-17	
4	Power supply for the controller 24VDC G1	009-01-15	
5	1-pole circuit breaker F01	009-01-05	
6	1-pole circuit breaker F3	009-01-07	
7	4-pole residual current circuit breaker Q1	009-01-04	
8	Power contactor 12A 3-Pol DILM12-01 K1M K2M K3M	009-01-12	
9	Power contactor 7A 3-Pol DILM7-10 K4M	009-01-13	
10	Auxiliary contactor block 1Z 1R F1 F2	009-01-29	
11	Auxiliary contactor block 1Z 0R F1 F2	009-01-30	
12	Motor circuit breaker 1,6A 0,37Kw F2	009-01-35	
13	Motor circuit breaker 16A 7,5kW F1	009-01-32	
14	Blue flat button with return S5	009-01-19	
15	Fastening connector S1 S2 S3 S4 S5 H1 H2 H4	009-01-20	
16	Illuminated flat button drive with return S4/H3	009-01-21	
17	Push-button drive white S1 S2 S3	009-01-22	
18	Contactor element 1Z S1 S2 S3 S4 S5	009-01-23	
19	LED blue H3	009-01-24	
20	LED green H1 H2	009-01-25	
21	LED red H4	009-01-26	
22	Green indicator light H1 H2	009-01-27	
23	Red indicator light H4	009-01-28	
24	Relay 1P 230V AC K11	009-01-36	
25	Relay 1P 24V DC K21	009-01-37	
26	Relay soccet K11, K21	009-01-38	
27	Ejector clamp K11 K21	009-01-39	
28	Wash chamber flap sensor CST-220	009-02	
29	Magnet	009-02-01	

Digital control (300H, 360, 4x4, F1, Combo, 500)

 
 
400V

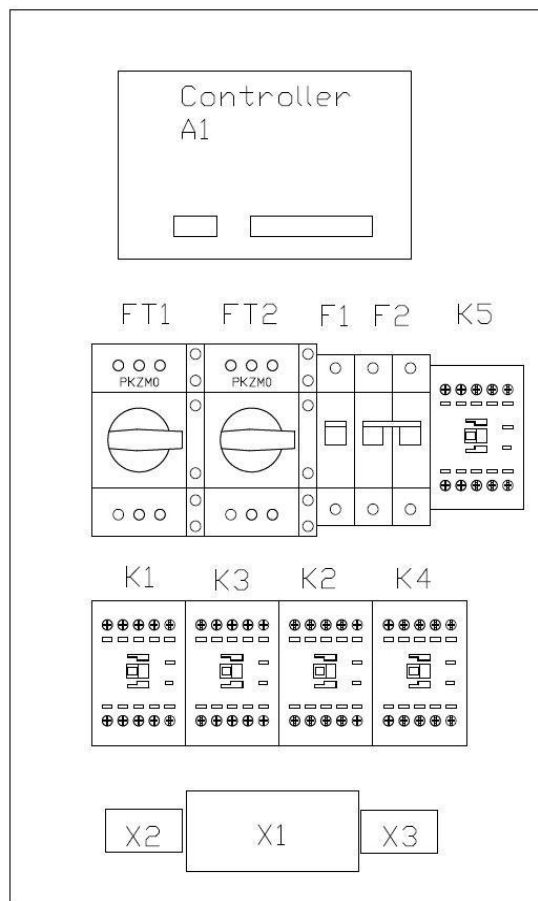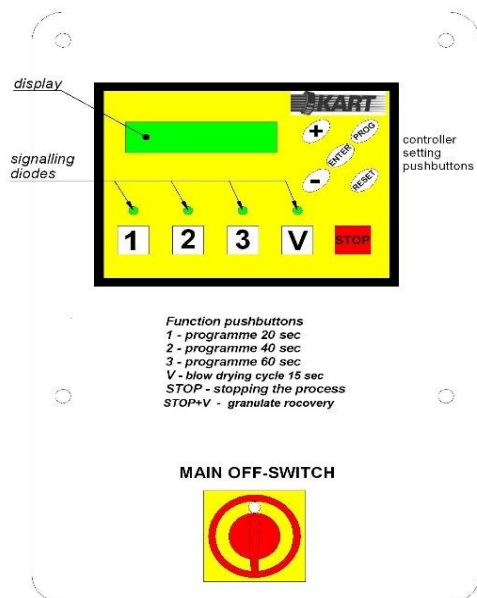

Pos.	PART NAME	NUMBER	
1	Electric box with heating 400V (whole set)	009-01-H-400	
2	Main switch SG	009-01-01	
3	Digital controller A1	009-01-03	
4	1-pole circuit breaker F1	009-01-05	
5	2-pole circuit breaker, heater 400V F2	009-01-41	
6	Power contactor 12A 3-Pol DILM12-01 K1 K2 K3	009-01-12	
7	Contactor 7A 3-Pol DILM7-10 K4 K5	009-01-13	
8	Auxiliary contactor block FT1 FT2	009-01-29	
9	Auxiliary contactor block FT1 FT2	009-01-30	
10	Motor protection switch 16A 7,5kW FT1	009-01-32	
11	Motor protection switch 16A 7,5kW FT2	009-01-35	
12	Display battery CR2032	009-01-40	
13	Wash chamber flap sensor CST220	009-02	
14	Magnet	009-02-01	

Digital control (300H, 360, 4x4, F1, Combo, 500)

  230V

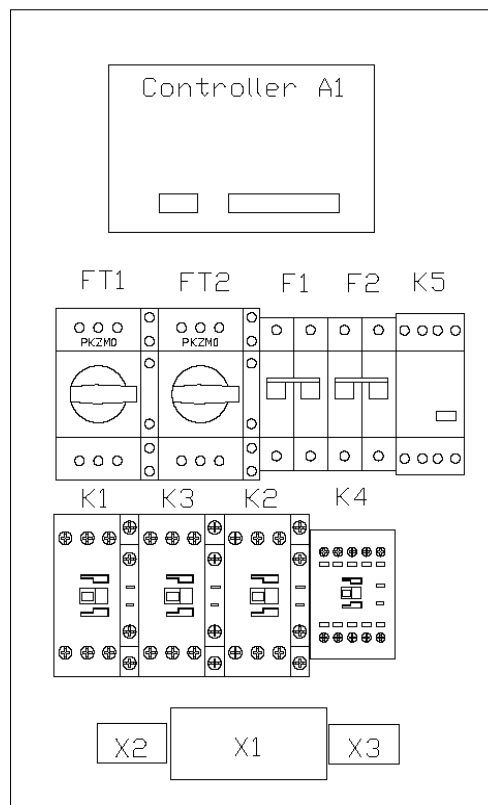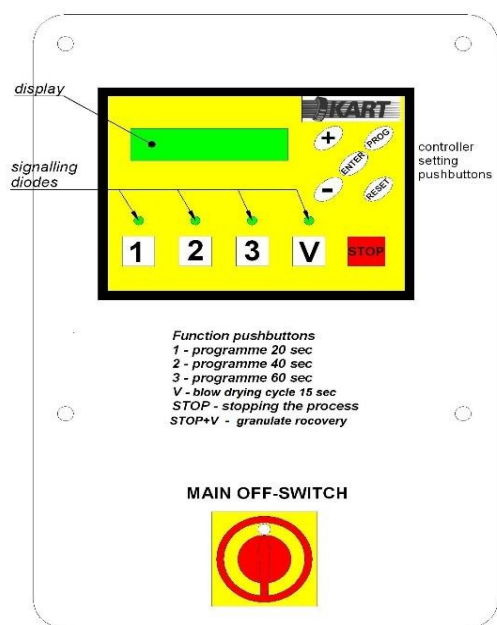

Wheel washer

Pos.	PART NAME	NUMBER	
1	Electric box with heating 230V (whole set)	009-01-H-230	
2	Main switch SG	009-01-02	
3	Digital controller A1	009-01-03	
4	1-pole circuit breaker B6 F1	009-01-08	
5	2-pole circuit breaker C25 F2	009-01-09	
6	Power contactor 25A 3-Pol DILM25-01 K1	009-01-10	
7	Power contactor 17A 3-Pol DILM17-01 K2 K3	009-01-11	
8	Power contactor 7A 3-Pol DILM7-10 K4	009-01-13	
9	Power contactor 230V K5	009-01-14	
10	Auxiliary contactor block FT1 FT2	009-01-29	
11	Auxiliary contactor block FT1 FT2	009-01-30	
12	Motor protection switch 25A 12,5kW FT1	009-01-31	
13	Motor protection switch 2,5A 0,75kW FT2	009-01-34	
14	Display battery typ CR2032	009-01-40	
15	Wash chamber flap sensor CST220	009-02	
16	Magnet	009-02-01	



Ball valve



Washing concentrate WULKAN TURBO 10L



Granulate WULKAN MIX 25 kg



Granulate basket



Protective cover




Anti-slip rubber mat




Air blow gun

Pos.	PART NAME	NUMBER	
1	Perforated mute screen PVC (200, 300)	010-01	
2	Perforated mute screen PVC (od 360)	010-01-360	
3	Granulate basket (200, 300)	010-02	
4	Granulate basket (360, 4x4, Combo Q)	010-02-360	
5	Granulate basket (F1)	010-02-450	
6	Granulate basket (500, 500H)	010-02-500	
7	Granulate basket (500HP)	010-02-600	
8	Granulate WULKAN MIX 25 kg	010-03	
9	Washing concentrate WULKAN TURBO 10 l	010-04	
10	Drain pipe 120 cm (200) + 1 pce. clamp band	010-05-120	
11	Drain pipe 145 cm (300, 360, 4x4, F1) + 1 pce. clamp band	010-05-145	
12	Drain pipe 180 cm (500) + 1 pce. clamp band	010-05-180	
13	Clamp for drain pipe	010-06	
14	Anti-slip rubber mat 100 x 50 cm	010-07	
15	Plastic upper protective cover W200/300	010-08	
16	Plastic upper protective cover W360/4x4	010-08-360	
17	Wash chamber flap spring + 2 pce. „S” hooks (200,300,360,4x4,F1)	010-09	
18	Wash chamber flap spring + 2 pce. „S” hooks (500)	010-09-500	
19	Spring catch for washing chamber flap "S"	010-10	
20	Spring catch for washing chamber flap "S" (500)	010-10-500	
21	Anti-vibration rubber base	010-11	
22	Shut-off ball valve	010-12	
23	Air blow gun with accessories	010-13	
24	Air blow gun without accessories	010-13-1	
25	Coiled cord (without gun)	010-13-2	
26	Washing concentrate WULKAN BOSS 10 l	010-14	
27	Acoustic mat 1 m x 2 m	010-15	
28	Drain plug	010-16	
29	Set of wheels	010-17	

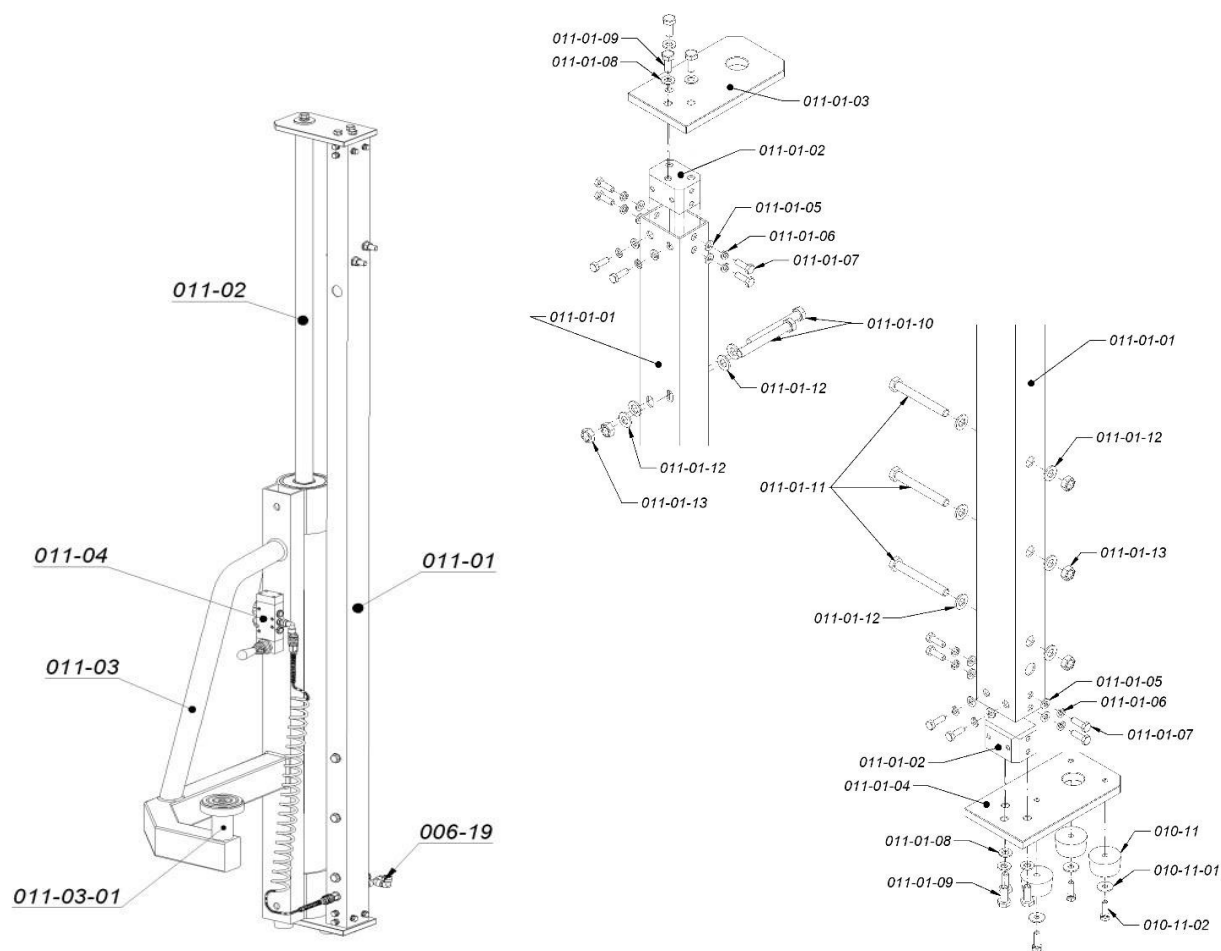 


Pos.	PART NAME	NUMBER	
1	Steel profile	011-01-01	
2	Cube holder	011-01-02	
3	Top mounting	011-01-03	
4	Bottom mounting	011-01-04	
5	Washer	011-01-05	
6	Spring washer	011-01-06	
7	Screw	011-01-07	
8	Washer	011-01-08	
9	Screw	011-01-09	
10	Screw M12x120	011-01-10	
11	Screw M12x	011-01-11	
12	Washer	011-01-12	
13	Nut	011-01-13	
14	Servomotor	011-02	
15	Piston rod	011-02-01	
16	Piston	011-02-02	
17	Guiding band	011-02-021	
18	Piston Oring outer	011-02-022	
19	Piston Oring inner	011-02-023	
20	Meter	011-02-03	
21	Piston rod bushing	011-02-04	


22	Sliding bushing	011-02-04-01	
23	Piston rod bushing Oring outter	011-02-041	
24	Piston rod bushing Oring inner	011-02-042	
25	Scraper ring	011-02-043	
26	Reflective Oring	011-02-044	
27	Cylinder	011-02-05	
28	Screw M10 special type	011-02-06	
29	Washer	011-02-07	
30	Screw	011-02-08	
31	Lift arm	011-03	
32	Rim holder	011-03-01	
33	Rim holder rubber	011-03-01-03	
34	Washer	011-03-02	
35	Screw	011-03-03	
36	Lift control	011-04	
37	Divider	011-04-01	
38	Angle connector	011-04-02	
39	Straight connector	011-04-03	
40	Angle connector	011-04-04	
41	Straight connector	011-04-05	
42	Valve silencer	011-04-06	
43	Valve lever cover	011-04-07	
44	Handle	011-04-08	
45	Ampoule screw M5	011-04-09	
46	Coiled cord	011-04-10	
47	Compressed air line short upper	011-04-11	
48	Compressed air line long bottom	011-04-12	

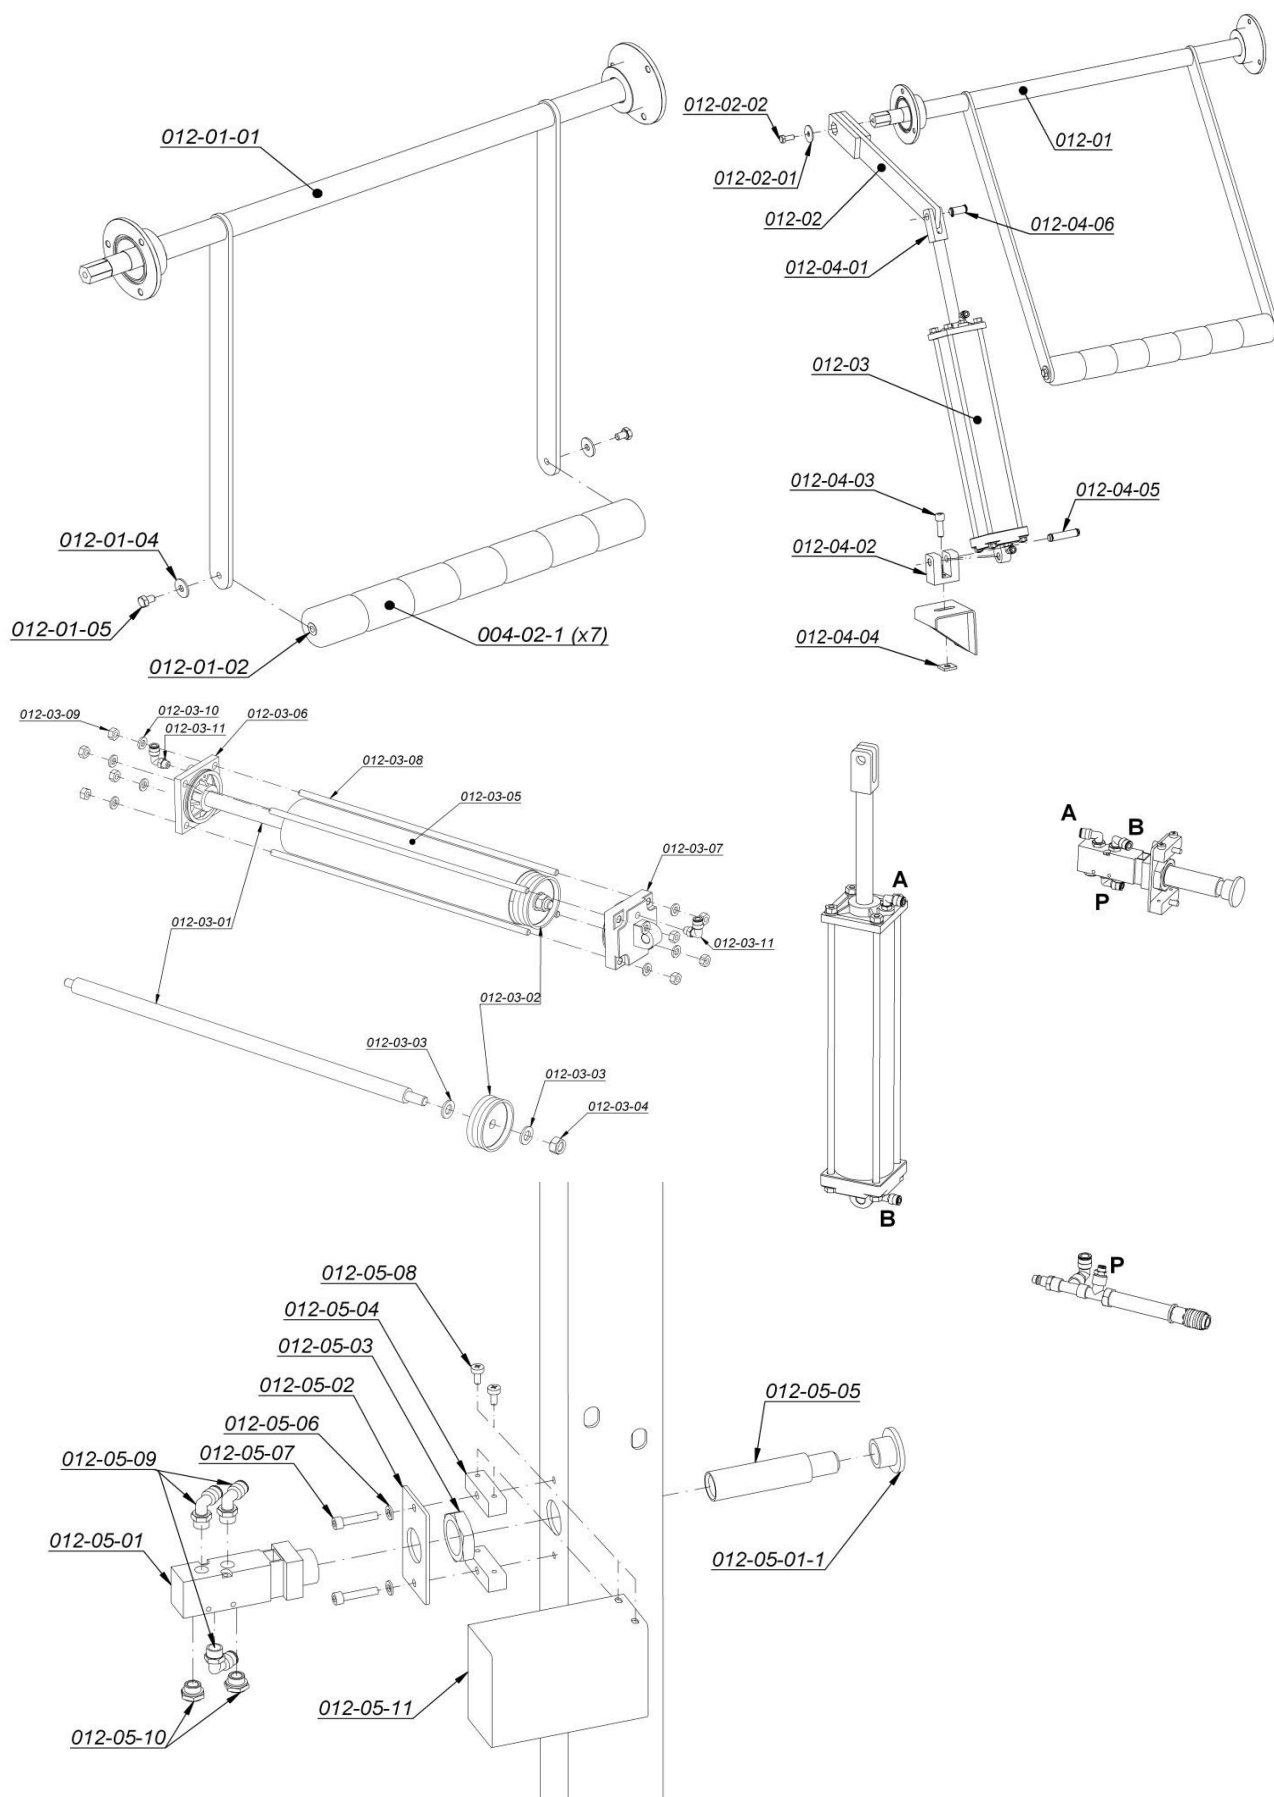 


Pos.	PART NAME	NUMBER	
1	Complete ejector shaft	012-01	
2	Complete shaft with bearings, whiskers and bearing	012-01-01	
3	Roller bar	012-01-02	
4	Rubber rollers	004-02-01	
5	Washer M8 - 2 sztuki	012-01-04	
6	Screw M8 - 2 sztuki	012-01-05	
7	Ejector arm	012-02	
8	Washer	012-02-01	
9	Screw	012-02-02	
10	Servomotor	012-03	
11	Piston rod	012-03-01	
12	Piston	012-03-02	
13	Piston washer	012-03-03	
14	Piston nut	012-03-04	
15	Cylinder upper	012-03-05	
16	Top cover	012-03-06	
17	Bottom cover	012-03-07	
18	Fixing pin	012-03-08	
19	Pin nut	012-03-09	
20	Washer	012-03-10	
21	Cable angle connector D6x4 1/4 inch	012-03-11	
22	Piston rod holder	012-04-01	
23	Servomotor base	012-04-02	
24	Screw M10/25	012-04-03	
25	Square nut M10	012-04-04	
26	Pivot long with meter	012-04-05	
27	Pivot short with meter	012-04-06	
28	Plug switch	012-05	
29	Valve with a plug	012-05-01	
30	Valve mounting plate	012-05-02	
31	Valve mounting nut	012-05-03	
32	Spacing cube	012-05-04	
33	Plug extention	012-05-05	
34	Washer	012-05-06	
35	Valve mounting bolt	012-05-07	
36	Valve housing mounting screw	012-05-08	
37	Angle connector S6520 6-1/4	012-05-09	
38	Suppressor 1/8 cala	012-05-10	
39	Valve cover	012-05-11	

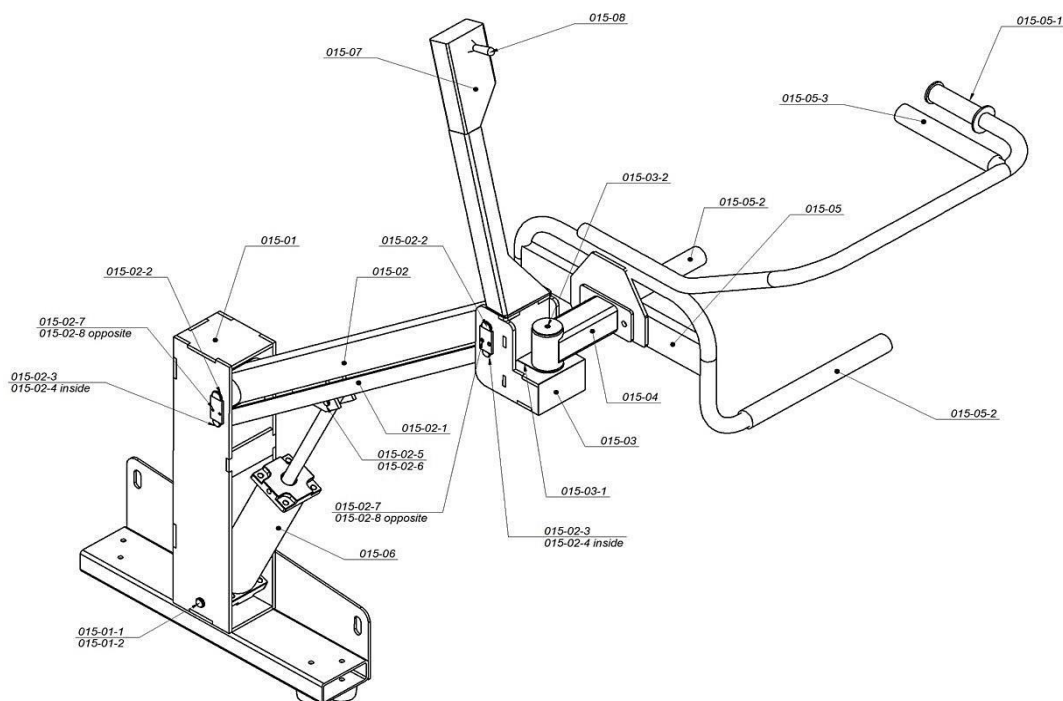 

Pos.	PART NAME	NUMBER	
1	Lift carrier with base	015-01	
2	Servomotor pin	015-01-1	
3	locking ring D16 (2 pce)	015-01-2	
4	Main arm	015-02	
5	Support arm	015-02-1	
6	Pivot D20	015-02-2	
7	Pivot D16	015-02-3	
8	Spacer sleeve	015-02-4	
9	piston rod pivot D12	015-02-5	
10	locking ring D12 (2 pce)	015-02-6	
11	Locking plate	015-02-7	
12	Retaining plate	015-02-8	
13	Head	015-03	
14	Sliding plate	015-03-1	
15	Thrust washer	015-03-2	
16	Basket arm	015-04	
17	Basket	015-05	
18	Basket handle	015-05-1	
19	Bottom protective sleeve	015-05-2	
20	Side protective sleeve	015-05-3	
21	Servomotor	015-06	
22	Valve handle	015-07	
23	Valve	015-08	
24	Seal set	015-6SK	

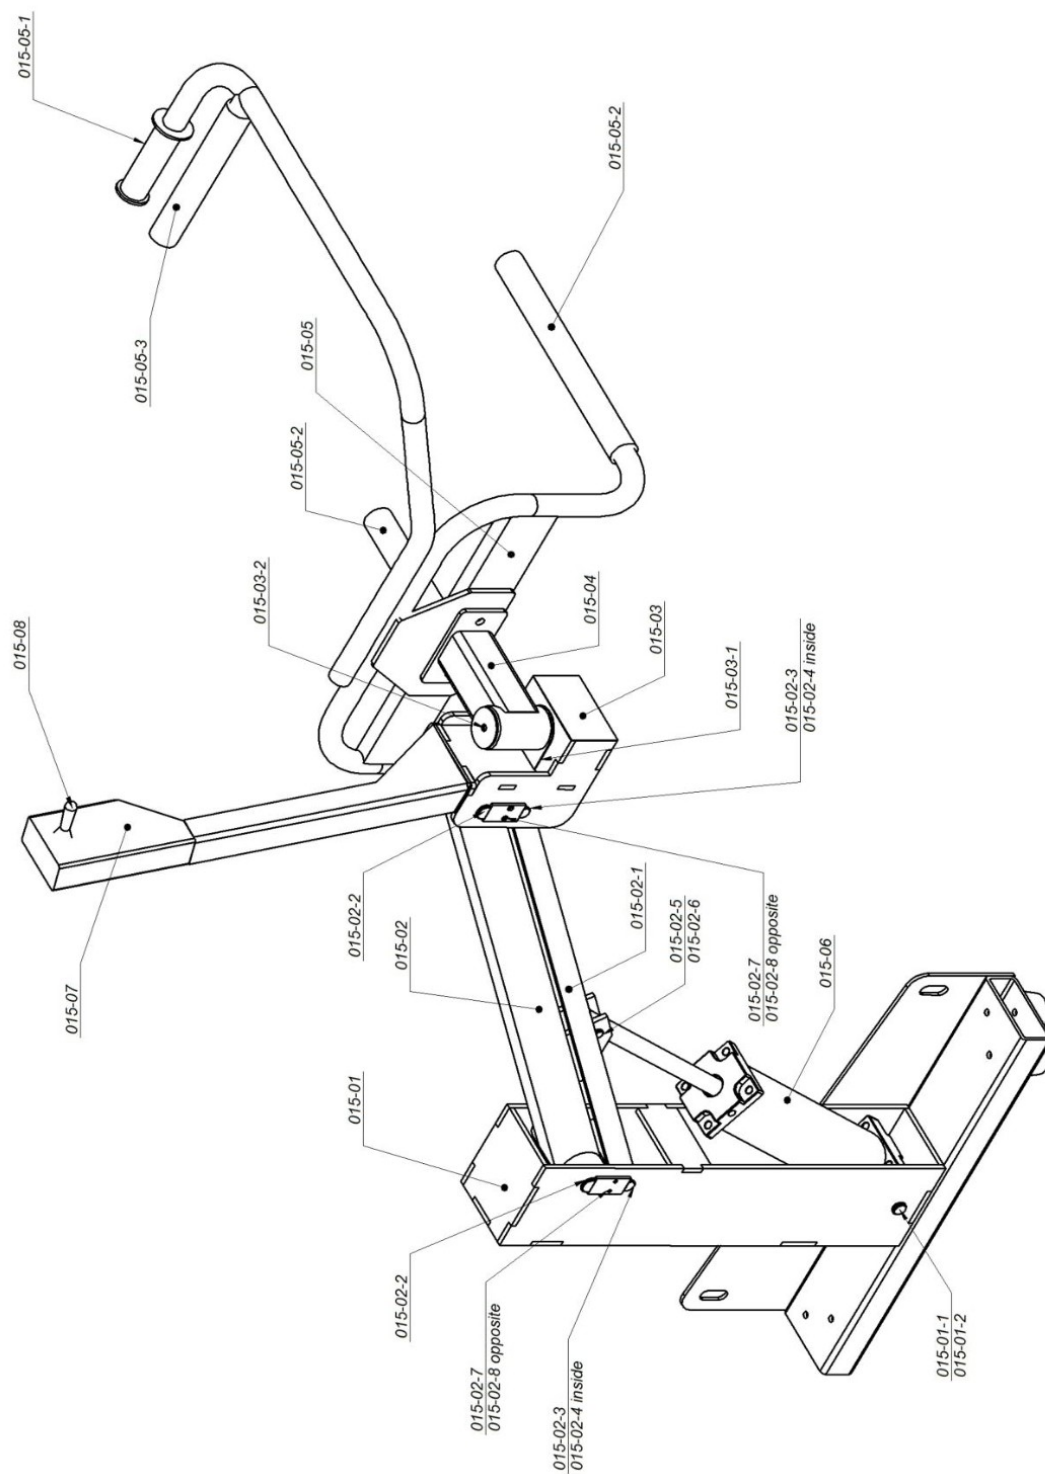 

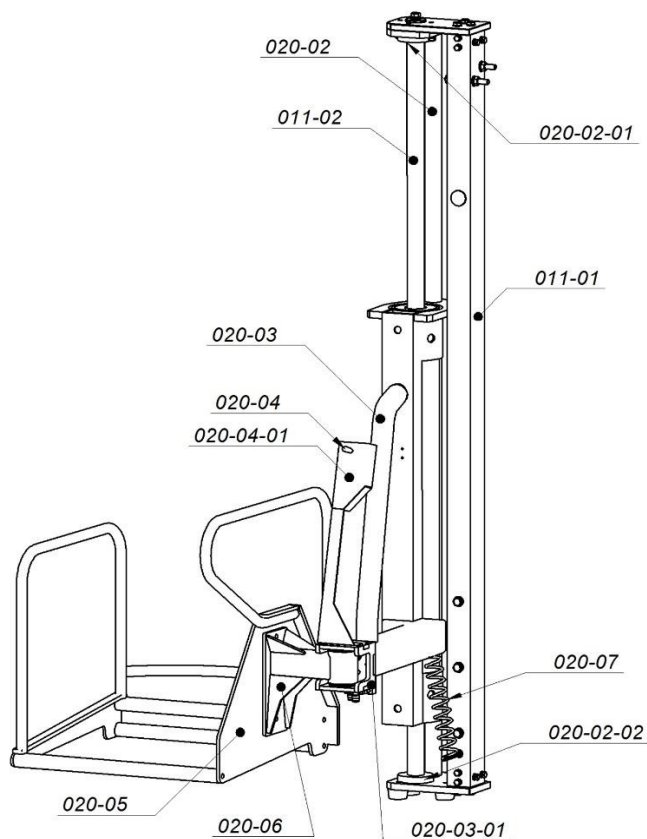 

Pos.	PART NAME	NUMBER	
1	Steel profile	011-01	
2	Servomotor	011-02	
3	Guide arm	020-02	
4	Upper buffer	020-02-01	
5	Bottom buffer	020-02-02	
6	Lift frame	020-03	
7	Lift frame head	020-03-01	
8	Elevator control	020-04	
9	Controller housing	020-04-01	
10	Power cables	020-04-02	
11	Basket	020-05	
12	Basket bracket	020-06	
13	Pivot	020-06-01	
14	Slip washer	020-06-02	
15	Coiled cord	020-07	