 


YTC-1000X



*Thank you and congratulations on your purchase of our YTC-1000X!
Please read through this manual before using the device, and keep this manual for future reference.

Product



D.P. stands for Double Side that can fit into headsets of your instrument easily and securely.

POWER/SEL button

POWER button-Press and hold this button for 2 seconds to turn it ON/OFF.
SEL button-Press this button to select adjustable parameters of this tuner. You can use the **SEL** button to set your desired parameters; afterwards please press this button again to save your settings.

SEL button

Press this button to set the tuning mode.
Press this button continuously after the SEL button is pressed to set your desired reference pitch and the tuninglight will switch under **Auto** or **Basic** mode.

Features

- Chromatic Tuner with Double Side, double user display
- Built-in rechargeable battery allows up to 10 hours of continuous use per charge
- High contrast color display with string and fretboard clip for fast and easy setup
- Auto power off function for maximum battery life

Battery Charging

When the battery level is low, the device will use the included USB charging cable to recharge the unit.



NOTICE:

This device uses a 3.7V battery. To protect the rechargeable battery, the power charge button will only work if the battery will not be used for a long time, please charge it at least once every 1 month to maintain battery health.

Operation

1. Power ON/OFF the tuner

Press the **Power** and hold the **POWER/SEL** button for 2 seconds to turn it ON/OFF. If this tuner is not for 5 minutes, it will shut off automatically to save its battery life.

2. Choose Tuning Mode

Please press **SEL** button to choose the tuning mode. There are 5 built-in tuning modes in this tuner: **Chromatic**, **Scale**, **Basic**, **Double**, **Baritone**.

1. Set the Reference Pitch and the Tuning

Please press the **POWER/SEL** button once to adjust the reference pitch setting. Then use the **SEL** button to set your desired reference pitch, press the **POWER/SEL** button again to save your settings.

Reference Pitch Range: 432Hz-440Hz

For tuning any instrument by **Auto** and **Basic** mode, press **POWER/SEL** button again to adjust the first tuning setting, then use the **SEL** button to set your desired first tuning, press the **POWER/SEL** button again to save other settings.

For **Scale** setting, choose **Scale** tuning + 1-12.

2. Tuning Guide

Chromatic mode is for experienced users, for beginners please choose the tuning mode according to your instrument. The following instructions are tuning steps.



3. Note Selection

- **Chromatic:** C, D, E, F, G, A, B, C
- **Auto:** C, D, E, F, G, A, B, C
- **Scale:** C, D, E, F, G, A, B, C
- **Double:** C, D, E, F, G, A, B, C
- **Basic:** C, D, E, F, G, A, B, C

Specifications

- Tuning range: A440 (39Hz) - 1047 (60Hz)
- Instrument support: Piano/strings
- Auto tuning: ± 4
- Instrument: Electric guitar, Bass guitar, Double bass, Double bass, Baritone
- Tuning precision: ± 1 cent
- Power: Built-in rechargeable Li-Ion battery
- Dimensions: 100 x 100 x 100 mm
- Weight: 150g

Accessories

- Carver: 1 manual
- YTC-1000X charging cable