


SOLAR  
POWERED



WATERS EVERY  
3 HRS

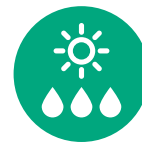

MORE SUN =  
MORE WATER



USE WITH A  
WATER TANK  
OR TAP

# Solar Automatic Watering System

Instructions: Irrigatia Solar Automatic C60, C120 and C180 Watering Kits

Instructions: Kits d'arrosage automatiques Irrigatia Solar C60, C120 et C180

Anleitung: Irrigatia Solar Automatische C60, C120 und C180 Bewässerung Kits

Instrucciones: Irrigatia Solar Automatic C60, C120 y C180 Kits de Riego



Designed  
in Britain



# Contents



Tank series controller with main pump and secondary feed pump



Water level sensor



Solar Panel with 5m lead (model shown is the C120)



1 x inline filter + 2 x 13mm adaptors



1 x foot strainer + 2 x 13mm adaptors & 1 x 13mm end cap



1 x 25m roll of 13mm tube



1 x 2.5m 3.5mm tube and inlet filter



1 x 4mm punch



12 x 4mm joiners



2 x 13mm T-piece



4 x 13mm end plug



4 x 13mm elbow



10 x 13mm stakes



6 x 13mm clamps



2 x 13mm valves



12 x 4mm valves



Battery pack containing 10 x AA rechargeable batteries C60/C120: Battery Pack 2200mAh



Battery pack containing 20 x AA rechargeable batteries C180: Battery Pack 4400mAh

# User Instructions for Irrigatia Tank Series

For video instructions: [irrigatia.com/how-it-works/setuptank-series](http://irrigatia.com/how-it-works/setuptank-series)

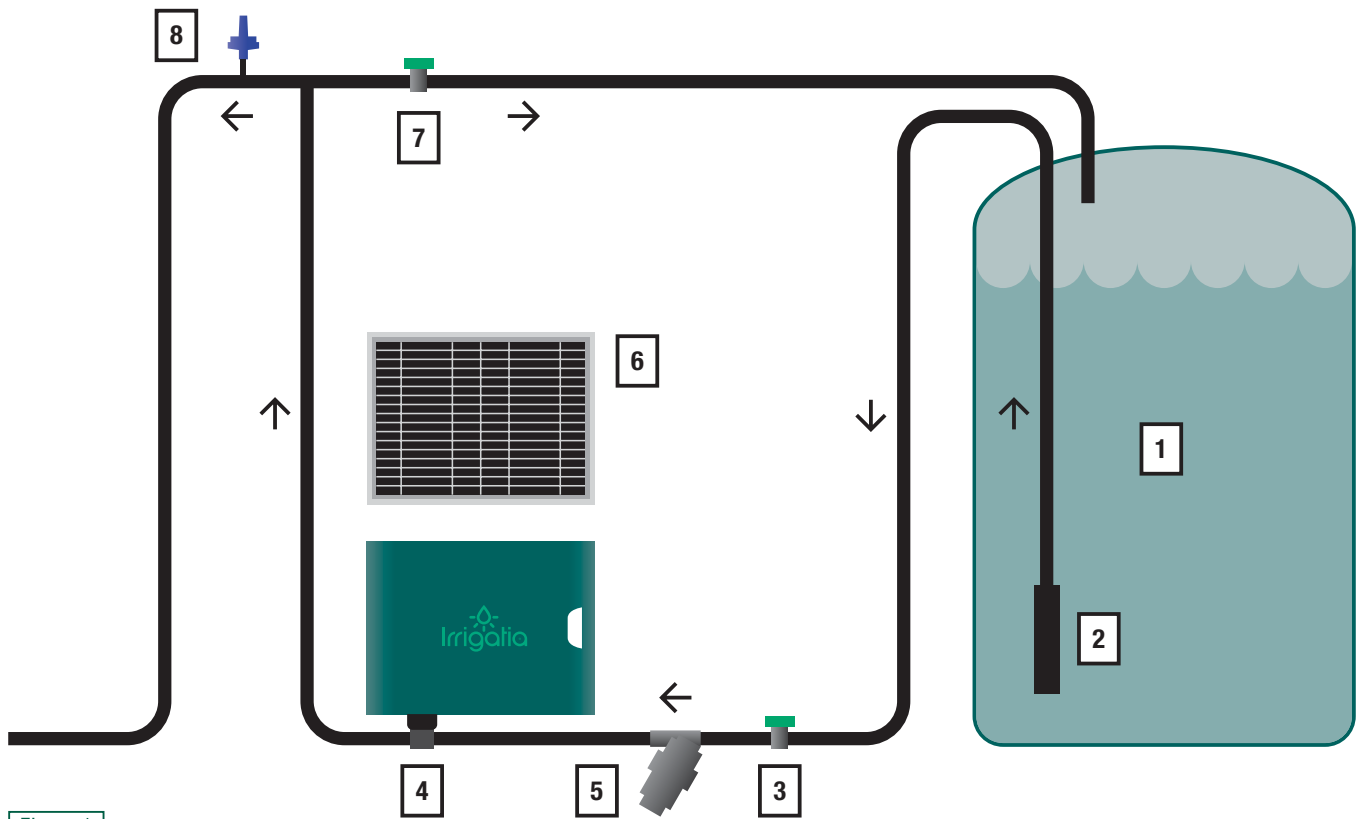


Figure 1

## Key

- |                    |                       |
|--------------------|-----------------------|
| 1. Tank            | 5. Inline filter      |
| 2. Foot strainer   | 6. Solar panel        |
| 3. Isolation valve | 7. Regulating valve   |
| 4. Pump            | 8. Anti-siphon device |

## Postioning

Using the fixing holes indicated by the green arrows, mount the controller close to the water source and low down so that the pump inlet (Standard or submersible) is below the water line in the tank. The controller case is weather resistant but can be mounted inside if desired.

The solar panel should be mounted, facing the midday sun and has a 5m cable, a 5m extension can be added if required. The panel can be connected and screwed tight to the socket hanging from the base of the controller.

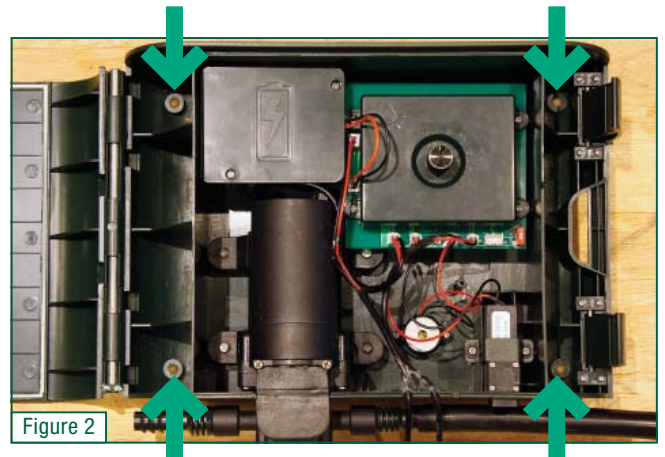


Figure 2

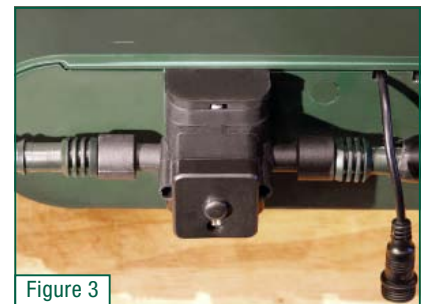


Figure 3

*If using the standard pump screw in the hose connectors to the pump.*

*Small tank gravity fed from main tank*



---

## Foot Strainer

---

### Standard Pump

---

Top entry

---

Vertical

---

Resting on tank bottom (see fig 4)

---

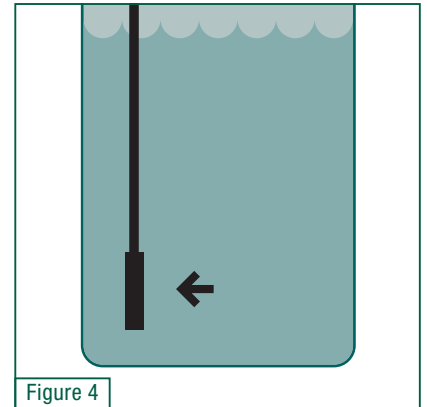


Figure 4

---

## Water Level Sensor

The water level sensor should be secured so that the higher probe is at least 3cm higher than the water inlet. Secure it using cable ties.

During operation, if one of the sensors is out of the water the pump will stop and the beeper will sound. If the beeper

is a nuisance it can be silenced by unplugging it from the circuit board.

The water level sensor comes with a 5m cable – this can be extended by purchasing an extension lead.

---

## Water Outlet Tube & Filter

To protect the drippers from debris, there is a fine mesh filter. This can be fitted on either side of the pump, (fig 2) but a valve must be fitted between it and the tank to turn off the water flow while cleaning. (Valve 3 in fig 1).



---

## Anti-Siphon Device

The anti-siphon is needed to stop the water flow when the pump has stopped if the first emitter is lower than top of the water source. It should be fitted in the delivery tube to the emitters, (it is number 8 in fig1). It can be fitted by making a hole with the punch provided and pushing the blue part of the anti-siphon directly into the tube, threaded end first. Anti-siphon device must be fitted higher than the water source.



Figure 5




## Starting up

Open regulating and isolation valves (3&7 in drawings) fully – handle in line with tube. Ensure there is water flow to the pump.

Open the case.

- Unplug the feed pump from the circuit board – marked as pump 2 on the board.
- Make sure the switch is in the off position.
- Remove 2 screws, open the battery case, install battery, replace lid and plug in connector to terminal marked 'bat' on the circuit board.
- Attach the solar panel in the socket on the bottom of the case.
- Switch on to position 3. If it is reasonable daylight and the water sensors are in water the pump should start.
- As the bypass valve (Valve 7 in fig 1) is wide open most of the water pumped should return to the tank. Wait until all the air has cleared from the system before VERY SLOWLY starting to close the bypass valve. This will push more water towards the drippers. The valve should be gradually closed until the drippers are dripping about once per second, or the microporous hose is full of water but soft, like a soft bicycle tyre. If you are using micro-porous tube, check the adjustment every few days after installation as when it is wetted up it will emit less water than when newly installed.
- Check whole system is working properly and for leaks.
- The duration of the first watering is likely to be long, the pump will not switch off until the batteries fall to 10v, this may take several hours, but after that proper control should be established. If the excess watering is likely to be a problem the bypass valve can be opened until this has happened.

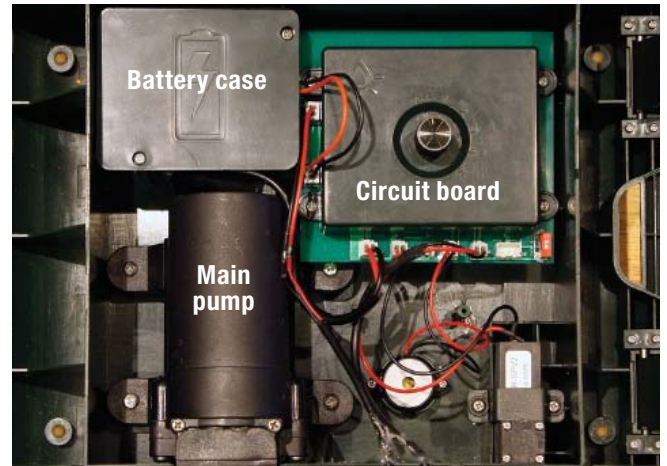

- The switch on the circuit board controls the solar panel. This is charging the battery on a 5 minute cycle. On switch positions 1,2,3,4,5, the solar panel is turned on for 1,2,3,4,5 minutes respectively. Changing the switch position will not affect the current run time or flow rate, but will control the amount of charge available for the subsequent watering cycle, thereby affecting the pumping duration. The application can be fine-tuned with small adjustments to the bypass valve.

Supplementary pump – if the main pump is running, this should run intermittently to dose the water with feed.

After 24-48 hours the unit should have settled down. Monitor the water application, turn the switch up or down accordingly. Once it is set up it will adjust itself for light intensity but you will need to readjust it for your plants as they grow.

Detailed instructions can be found at: [irrigatia.com/how-it-works/setuptank-series](http://irrigatia.com/how-it-works/setuptank-series)



### SOL-C60

20L 60x 60x 120x 25x 60m

### SOL-C120

20L 120x 120x 240x 50x 120m

### SOL-C180

20L 180x 180x 360x 75x 180m

For further information on this or any of the other products in our range, please visit:

[www.irrigatia.com](http://www.irrigatia.com)

