

QSG RUTX50

[Main Page](#) > [RUTX Routers](#) > [RUTX50](#) > **QSG RUTX50**

 English

 日本

This Wiki page contains the online version of the **Quick Start Guide (QSG)** for the **RUTX50 Router**. Here you will find an overview of the various components on the front and back of a RUTX50 device, hardware installation instructions, first login information, device specifications, and general safety information. It is highly recommended to acquaint yourself with the Quick Start Guide before using the device. You can also locate a printed version of the Quick Start Guide in the packaging box of your device.



Safety information

Before starting operating the device, please review recommendations and precautions to minimize the possibility of accidents. Safety precautions presented are supplementary and subject to the local safety regulations. When various operations are executed on the device, the user must fully follow the safety instructions and recommendations provided with the device.

General

Radio specifications	
RF technologies	3G, 4G, 5G, GNSS, Wi-Fi 2.4 GHz: IEEE 802.11 b/g/n, Wi-Fi 5 GHz: IEEE 802.11 a/n/ac
Max RF power	24 dBm@WCDMA, 23 dBm@LTE, 23 dBm@5G, 20 dBm@WiFi 2.4G, 23 dBm@WiFi 5G
Bundled accessories specifications*	
Power adapter	Input: 0.6 A@100-240 VAC, Output: 12 VDC, 1.5 A, 4-pin plug
Mobile antenna	617~960 / 1710~2690 / 3300~6000 MHz, 50 Ω, VSWR<3, gain** 4 dBi, omnidirectional, SMA male connector
GNSS antenna	1575.42~1602 MHz, 2.2~5 VDC, VSWR<1.5, active total gain** 28 dB (typ.), RHCP polarization, SMA male connector
WiFi antenna	2400~2500 MHz / 4950~5850 MHz, 50 Ω, VSWR<2, gain** 3 dBi, omnidirectional, RP-SMA male connector

RUTX50 *3****

Radio specifications	
RF technologies	3G, 4G, 5G, GNSS, Wi-Fi 2.4 GHz: IEEE 802.11 b/g/n, Wi-Fi 5 GHz: IEEE 802.11 a/n/ac
Max RF power	25 dBm@WCDMA, 25 dBm@LTE, 28 dBm@LTE(HPUE:B38/41/42/43), 25 dBm@5G, 28 dBm@5G(HPUE:B38/41/77/78), 28 dBm@5G(MIMO:B38/40/41/77/78) 20 dBm@WiFi 2.4G, 23

	dBm@WiFi 5G
Bundled accessories specifications*	
Power adapter	Input: 0.6 A@100-240 VAC, Output: 12 VDC, 1.5 A, 4-pin plug
Mobile antenna	617~960 / 1710~2690 / 3300~6000 MHz, 50 Ω , VSWR<3, gain** 4 dBi, omnidirectional, SMA male connector
GNSS antenna	1575.42~1602 MHz, 2.2~5 VDC, VSWR<1.5, active total gain** 28 dB (typ.), RHCP polarization, SMA male connector
WiFi antenna	2400~2500 MHz / 4950~5850 MHz, 50 Ω , VSWR<2, gain** 3 dBi, omnidirectional, RP-SMA male connector

* Order code dependant.

** Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.

RUTX50 router must be used in compliance with any and all applicable national and international laws and with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.

CE Declaration of Conformity

[BG] Bulgarian	С настоящето, TELTONIKA NETWORKS декларира, че RUTX50 е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 2014/53/EU
[HR] Croatian	Ovim TELTONIKA NETWORKS izjavljuje da je ovaj RUTX50 u skladu s bitnim zahtjevima i ostalim relevantnim odredbama Direktive 2014/53/EU
[CZ] Czech	TELTONIKA NETWORKS tímto prohlašuje, že RUTX50 splňuje základní požadavky a všechna příslušná ustanovení Směrnice 2014/53/EU
[DK] Danish	Undertegnede TELTONIKA NETWORKS erklærer herved, at følgende udstyr RUTX50 overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU
[NL] Dutch	Hierbij verklaart TELTONIKA NETWORKS dat het toestel I RUTX50 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU
[EE] Estonian	Käesolevaga kinnitab TELTONIKA NETWORKS seadme RUTX50 vastavust direktiivi 2014/53/EU põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele
[FI] Finish	TELTONIKA NETWORKS vakuuttaa täten että RUTX50 tyyppinen laite on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen
[FR] French	TELTONIKA NETWORKS déclare que cette RUTX50 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU
[DE] German	Hiermit erklärt TELTONIKA NETWORKS, dass dieser RUTX50 den grundlegenden Anforderungen und anderen relevanten Bestimmungen der Richtlinie 2014/53/EU entspricht
[GR] Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Ο ΚΑΤΑΣΚΕΥΑΣΤΗΣ ΤΗΛΤΟΝΙΚΑ ΝΕΤΟΥΡΚΣ ΔΗΛΩΝΕΙ ΟΤΙ Η ΡUTX50 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU
[HU] Hungarian	A TELTONIKA NETWORKS ezzennel kijelenti, hogy a RUTX50 típusú berendezés teljesíti az alapvető követelményeket és más 2014/53/EU irányelvben meghatározott vonatkozó rendelkezéseket
[IE] Irish	Leis seo, dearbhaíonn TELTONIKA NETWORKS go gcomhlíonann an RUTX50 seo bunriachtanais agus forálacha ábhartha eile Threoir 2014/53/EU
[IT] Italian	Con la presente, TELTONIKA NETWORKS dichiara che questo RUTX50 è conforme ai requisiti essenziali e ad altre disposizioni pertinenti della Direttiva 2014/53/EU
[LV] Latvian	Ar šo TELTONIKA NETWORKS deklarē, ka RUTX50 atbilst Direktīvas 2014/53/EU būtiskajām prasībām un citiem ar to saistītajiem noteikumiem
[LT] Lithuanian	Šiuo dokumentu UAB TELTONIKA NETWORKS deklaruoja, kad šis RUTX50 atitinka esminius reikalavimus ir kitas 2014/53/EU Direktyvos nuostatas
[MT] Maltese	Hawnhekk, TELTONIKA NETWORKS tiddikjara li dan I-RUTX50 huwa konformi mar-rekwiżiti essenzjali u dispożizzjonijiet rilevanti oħra tad Direttiva 2014/53/EU
[NO] Norwegian	TELTONIKA NETWORKS Erklærer herved at RUTX50 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/EU
[PL] Polish	Niniejszym TELTONIKA NETWORKS deklaruje że RUTX50 jest zgodny z zasadniczymi wymaganiami i innymi właściwymi postanowieniami Dyrektywy 2014/53/EU
[PT] Portuguese	Eu, TELTONIKA NETWORKS declaro que o RUTX50 cumpre os requisitos essenciais e outras provisões relevantes da Directiva 2014/53/EU
[RO] Romanian	Prin prezenta, TELTONIKA NETWORKS declară că aparatul RUTX50 este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 2014/53/EU
[SK] Slovak	Spoločnosť TELTONIKA NETWORKS týmto vyhlasuje, že smerovač RUTX50 je v súlade so základnými požiadavkami a ďalšími príslušnými ustanoveniami smernice 2014/53/EU
[SI] Slovenian	TELTONIKA NETWORKS izjavlja, da je ta RUTX50 v skladu z bistvenimi zahtevami in drugimi relevantnimi določili direktive 2014/53/EU
[ES] Spanish	Por la presente, TELTONIKA NETWORKS declara que este RUTX50 cumple con los requisitos esenciales y otras exigencias relevantes de la Directiva 2014/53/EU
[SE] Swedish	Härmed intygar TELTONIKA NETWORKS att denna RUTX50 är i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU

Detailed compliance information is available at the following internet address: wiki.teltonika-networks.com/view/Certificates (<https://wiki.teltonika-networks.com/view/Certificates>).



device.



_____ This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.



Hereby, TELTONIKA NETWORKS declares that this RUTX50 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://wiki.teltonika-networks.com/view/RUTX50_CE/RED



Hereby, TELTONIKA NETWORKS declares that the radio equipment type RUTX50 is in compliance with Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet address: https://wiki.teltonika-networks.com/view/RUTX50_UKCA

RF exposure

This device meets the official requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by authorized agencies. The device must be used with a minimum separation of 20 cm from a person's body to ensure compliance with RF exposure guidelines. Failure to observe these instructions could result in your RF exposure exceeding the applicable limits.

External antennas used with RUTX50 must be installed to provide a distance of at least 20 cm from any people and must not be co-located or operated in conjunction with any other antenna or transmitter.

Any external antenna gain must meet RF exposure and maximum radiated output power limits of the applicable rule section.

Operating Frequency / Maximum transmission power		
WCDMA	B1	1920-1980, 2110-2170 MHz, 24 dBm
	B5 ¹	824-849, 869-894 MHz, 24 dBm
	B8	880-915, 925-960 MHz, 24 dBm
LTE-FDD	B1	1920-1980, 2110-2170 MHz, 23 dBm
	B3	1710-1785, 1805-1880 MHz, 23 dBm
	B5 ¹	824-849, 869-894 MHz, 24 dBm
	B7	2500-2570, 2620-2690 MHz, 24 dBm
	B8	880-915, 925-960 MHz, 23 dBm
	B20	832-862, 791-821 MHz, 23 dBm
	B28	703-748, 758-803 MHz, 23 dBm
LTE-TDD	B38	2570-2620 MHz, 23 dBm
	B40	2300-2400 MHz, 23 dBm
	B41 ²	2300-2400 MHz, 23 dBm
	B42	3400-3600 MHz, 26 dBm
	B43	3600-3800 MHz, 26 dBm
5G NR (SA, NSA)	n1	1920-1680, 2110-2170 MHz, 23 dBm
	n3	1710-1785, 1805-1880 MHz, 23 dBm
	n5 ¹	824-849, 869-894 MHz, 23 dBm
	n7	2500-2570, 2620-2690 MHz, 23 dBm
	n8	880-915, 925-960 MHz, 23 dBm
	n20	832-862, 791-821 MHz, 23 dBm
	n28	703-748, 758-803 MHz, 23 dBm
	n38	2570-2620 MHz, 23 dBm
	n40	2300-2400 MHz, 23 dBm
	n41	2496-2690 MHz, 26 dBm
	n77	3300-4200 MHz, 26 dBm
	n78	3300-3800 MHz, 26 dBm
Wi-Fi 2.4 GHz	2412-2472 MHz, 20 dBm	
Wi-Fi 5 GHz	UNII-1 Band 1	5180-5240 MHz, 23 dBm
	UNII-2A Band 2	5260-5320 MHz, 30 dBm
	UNII-2C Band 3	5500-5700 MHz, 30 dBm
	UNII-3 Band 4	5745-5825 MHz, 13.98 dBm
GNSS	GPS Band L1, L5	1575.42, 1176.45 MHz
	Galileo Band E1, E5	1575.42, 1176.45 MHz
	BDS Band B1I	1561.098 MHz
	GLONASS Band G1	1602+n*0.5625 MHz

RUTX50 *3****

Operating Frequency / Maximum transmission power		
WCDMA	B1	1920-1980, 2110-2170 MHz, 25 dBm
	B5 ¹	824-849, 869-894 MHz, 25 dBm
	B8	880-915, 925-960 MHz, 25 dBm
LTE-FDD	B1	1920-1980, 2110-2170 MHz, 25 dBm
	B3	1710-1785, 1805-1880 MHz, 25 dBm
	B5 ¹	824-849, 869-894 MHz, 25 dBm
	B7	2500-2570, 2620-2690 MHz, 25 dBm
	B8	880-915, 925-960 MHz, 25 dBm
	B20	832-862, 791-821 MHz, 25 dBm
	B28	703-748, 758-803 MHz, 25 dBm
	B32(Downlink only)	1452-1496 MHz
LTE-TDD	B38	2570-2620 MHz, 28 dBm
	B40	2300-2400 MHz, 28 dBm
	B41 ²	2496-2690 MHz, 28 dBm
	B42 ²	3400-3600 MHz, 28 dBm
	B43 ²	3600-3800 MHz, 28 dBm
5G NR (SA, NSA)	n1	1920-1680, 2110-2170 MHz, 25 dBm
	n3	1710-1785, 1805-1880 MHz, 25 dBm
	n5 ¹	824-849, 869-894 MHz, 25 dBm
	n7	2500-2570, 2620-2690 MHz, 25 dBm
	n8	880-915, 925-960 MHz, 25 dBm
	n20	832-862, 791-821 MHz, 25 dBm
	n28	703-748, 758-803 MHz, 25 dBm
	n38	2570-2620 MHz, 25 dBm
	n40	2300-2400 MHz, 25 dBm
	n41	2496-2690 MHz, 28 dBm
	n75(Downlink only)	1432-1517 MHz
	n76(Downlink only)	1427-1432 MHz
	n77	3300-4200 MHz, 28 dBm
	n78	3300-3800 MHz, 28 dBm
Wi-Fi 2.4 GHz	2412-2472 MHz, 20 dBm	
Wi-Fi 5 GHz	UNII-1 Band 1	5180-5240 MHz, 23 dBm
	UNII-2A Band 2	5260-5320 MHz, 30 dBm
	UNII-2C Band 3	5500-5700 MHz, 30 dBm
	UNII-3 Band 4	5745-5825 MHz, 13.98 dBm
GNSS	GPS Band L1, L5	1575.42, 1176.45 MHz
	Galileo Band E1, E5	1575.42, 1176.45 MHz
	BDS Band B1I	1561.098 MHz

	GLONASS Band G1	1602+n*0.5625 MHz
--	-----------------	-------------------

¹ – Not supported in Europe region.

² – Not supported in Europe and Oceania regions.



In all EU member states, operation of 5150-5350 MHz is restricted to indoor use only.

Operating conditions

- Operating temperature: -40° to +45° Celsius
- Humidity should be in the range of 10% to 90% (non-condensing). Only use the device in dry environments.
- Out of direct sunlight
- Away from heat source, corrosive substances, salts, and flammable gases

Attention: operation outside the permissible range can considerably shorten the service life of the device.

Faulty and damaged products

- Do not attempt to disassemble the device or its accessories.
- Only qualified personnel must service or repair the device or its accessories.
- If your device or its accessories have been submerged in water punctured or subjected to a severe fall, do not use until they have been checked at an authorized service center.

Electrical safety

- Only use approved accessories.
- Do not connect with incompatible products or accessories.
- It is recommended to ground devices with grounding terminals before connecting them to power. Failure to ground appropriately might result in a shock hazard. The cross-sectional area of the protective grounding conductor should be at least 1mm².


Product handling

- You alone are responsible for how you use your device and any consequences related to its use.
- Use of your device is subject to safety measures designed to protect users and their environment.
- Always treat your device and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your device or its accessories to open flames, lit tobacco products, liquid, moisture, or high humidity.
- Do not drop, throw or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your device or its accessories.
- Do not attempt to disassemble your device (exemptions for devices that require disassembly for SIM insertion) or its accessories: it does not contain any user-serviceable parts. For safety


reasons, the equipment should be opened only by qualified personnel.

- Make sure to use ESD personal protective equipment while the equipment is serviced.
- Do not use your device in an enclosed environment where heat dissipation is poor.
- Prolonged use in such space may cause excessive heat and raise ambient temperature, which will lead to the automatic shutdown of your device or the disconnection of the mobile network connection for your safety. To use your device again after such a shutdown, cool it in a well-ventilated place before turning it on.
- Please check all national laws and local regulations for the disposal of electronic products.
- Do not operate the device where ventilation is restricted.
- Do not use or install this product near water to avoid fire or shock hazards.
- Avoid exposing the equipment to rain or damp areas.
- Arrange power and Ethernet cables so that they are not likely to be stepped on or have items placed on them.
- Ensure that the voltage and the rated current of the power source match the device's requirements. Do not connect the device to an inappropriate power source.
- During a thunderstorm, no operations should be carried out on the device and cables.
- The unit must be powered off where blasting is in progress and explosive atmospheres are present or near medical life support equipment.
- Do not leave your device and its accessories within reach of small children or allow them to play with it. They could hurt themselves or others and could accidentally damage the device. Your device contains small parts with sharp edges that may cause an injury choking hazard.
- Like any wireless device, this device operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless device for emergency communications or otherwise use the device in situations where the interruption of data connectivity could lead to death, personal injury, property damage, data, or other loss.
- The device may become warm during regular use.

Front view

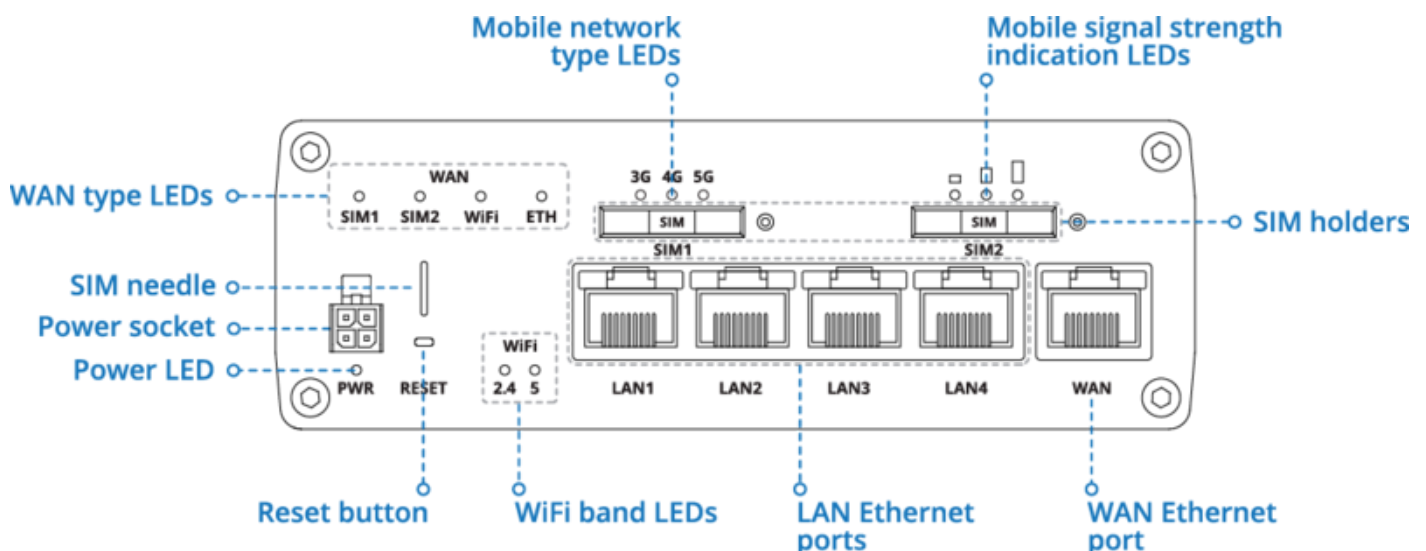


Back view

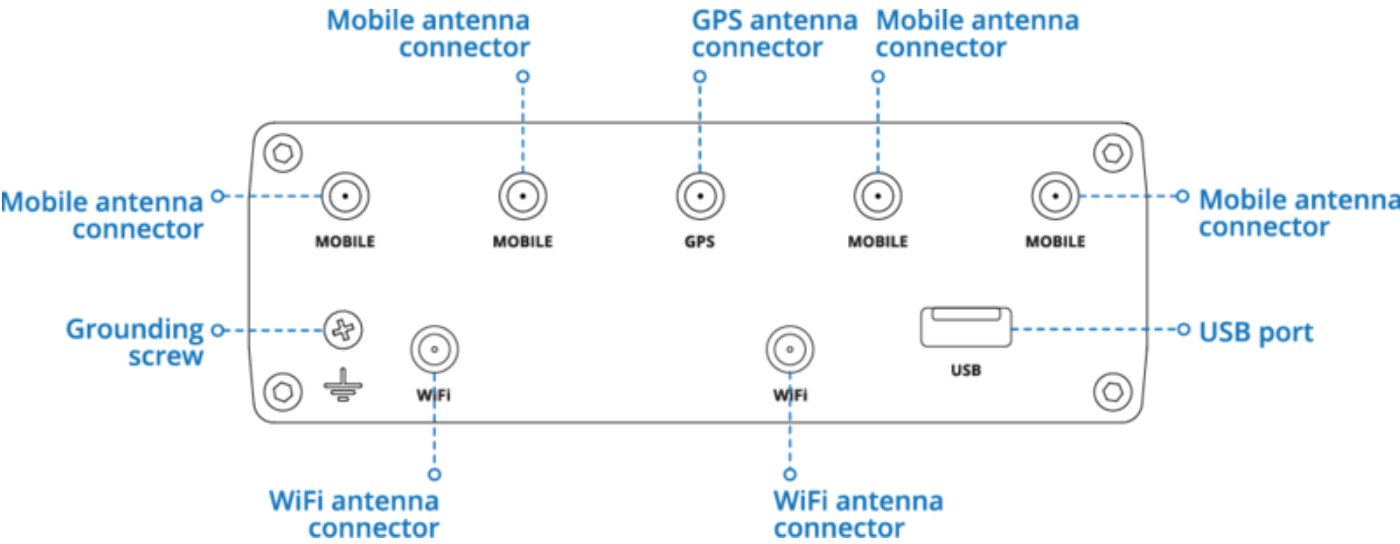

Connectors

POWER SOCKET PINOUT

NO.	DESCRIPTION	WIRE COLOR
1	Power	Red
2	Ground	Black
3	I/O	Green
4	I/O	White

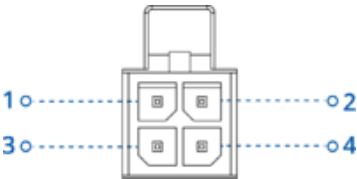

Video Quick Start Guide


Need some help setting up your new Teltonika Networks RUTX50 Industrial 5G Router? Watch our quick start guide video and follow the step by step instructions to easily set up your new router for operation.

RUTX50 - Industrial 5G Router | Quick Start Guide




Hardware installation


1. Locate the SIM Adapter kit

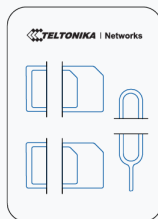


2. Push the SIM holder button with the SIM needle.

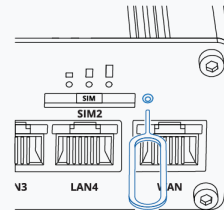


3. Pull out the SIM holder.

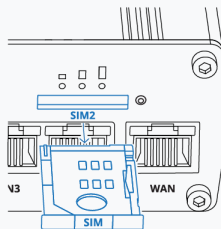


4. Insert your SIM card into the SIM holder.

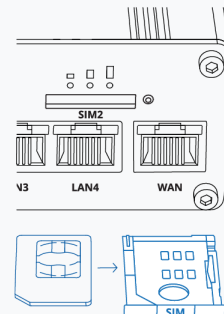


5. Slide the SIM holder back into the router.

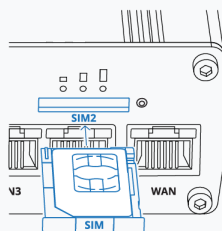


6. Attach all mobile antennas to connectors labeled "Mobile".

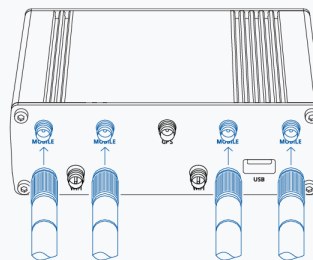


7. Attach both WiFi antennas to connectors labeled "WiFi".

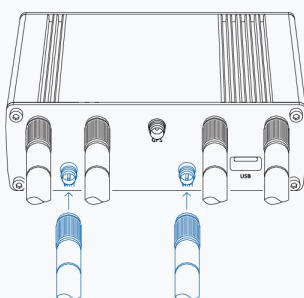

8. Attach GPS antenna connector labeled "GPS".

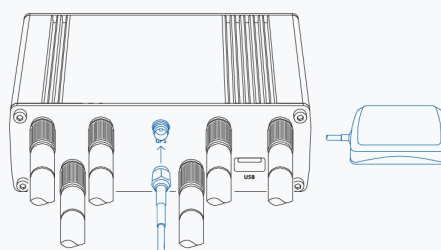


9. Power up the router by plugging in 4-pin connector to the socket in the router, and plugging adapter into electric outlet.

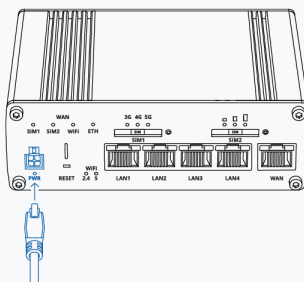

Configure your computer LAN (Windows)

1. Ensure the Network connection is Enabled. Go to Start — Control Panel — Network and Internet — Network and Sharing Center. Click on the

Change adapter settings in the left panel, then right-click on Network Adapter, and select Enable.

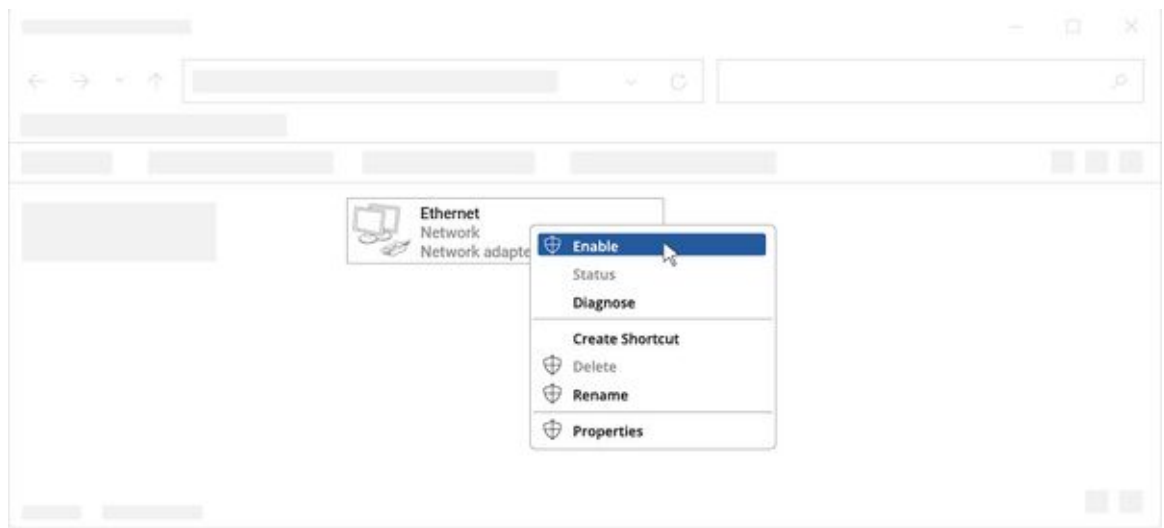

2. Check if IP and DNS are obtained automatically. Right-click on Network Adapter and select Properties. Then select **Internet Protocol Version 4** and click Properties. 3. If not selected, check to **obtain an IP address** and **obtain DNS server address** automatically. Click OK.



Configure your computer Wi-Fi (Windows)

1. Ensure the Wireless network connection is Enabled. Go to Start — Control Panel — Network and Internet — Network and Sharing Center. Click on the **Change adapter settings** in the left panel, then right-click on Wireless Network Adapter, and select Enable.




2. Check if IP and DNS are obtained automatically. Right-click on Wireless Network Adapter and select Properties. Then select **Internet Protocol Version 4** and click Properties.

3. If not selected, check to **obtain an IP address** and **obtain DNS server address automatically**. Click OK.



4. Connect to a wireless network by right-clicking on Wireless Network Adapter and selecting Connect.

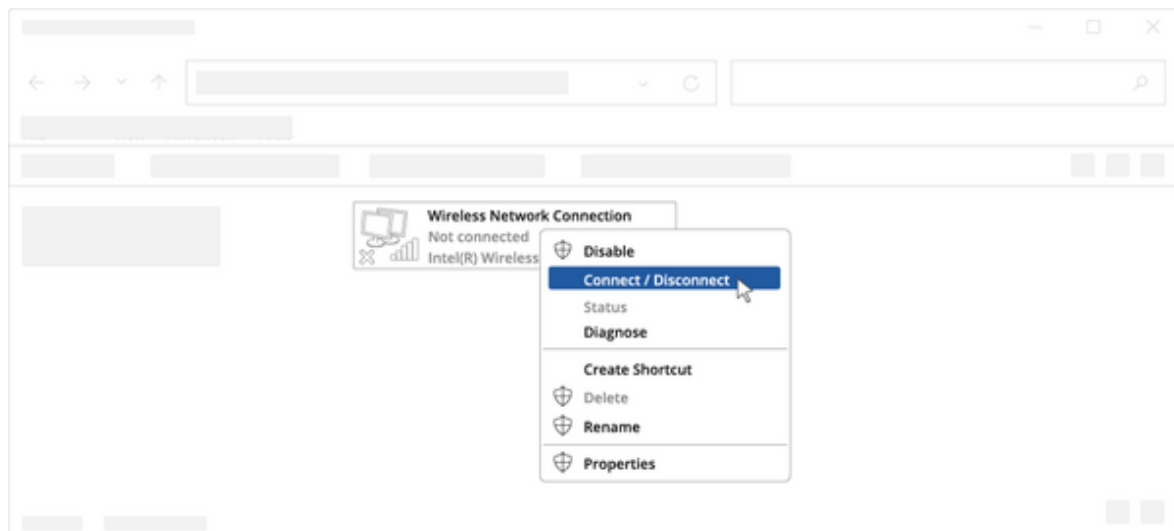

5. Choose the wireless network RUTX50 **** from the list and click Connect. Enter the Wi-Fi password located on the device's label.



Login to device

1. To enter the router's Web interface (WebUI), type <http://192.168.1.1> into the URL field of your Internet browser.


2. When prompted for authentication enter the username admin and enter the password located on the device information label/engraving.

3. After logging in, you must set a new password for security reasons. You will not be able to interact with the router's WebUI until the default password is changed. The new password must consist of a minimum of **8 characters**. Requirements: one uppercase letter, one lowercase letter, and one digit.

4. Next, the Configuration Wizard will start to help you set up some of the router's main operational parameters.

5. Finally, let's verify the Mobile signal strength. Go to the **Status — Network** page and pay attention to the **Signal Strength** indication.

To achieve the best signal conditions and maximize cellular performance, try adjusting the antennas or changing the location of your device. You can find information on signal strength recommendations [here](#).

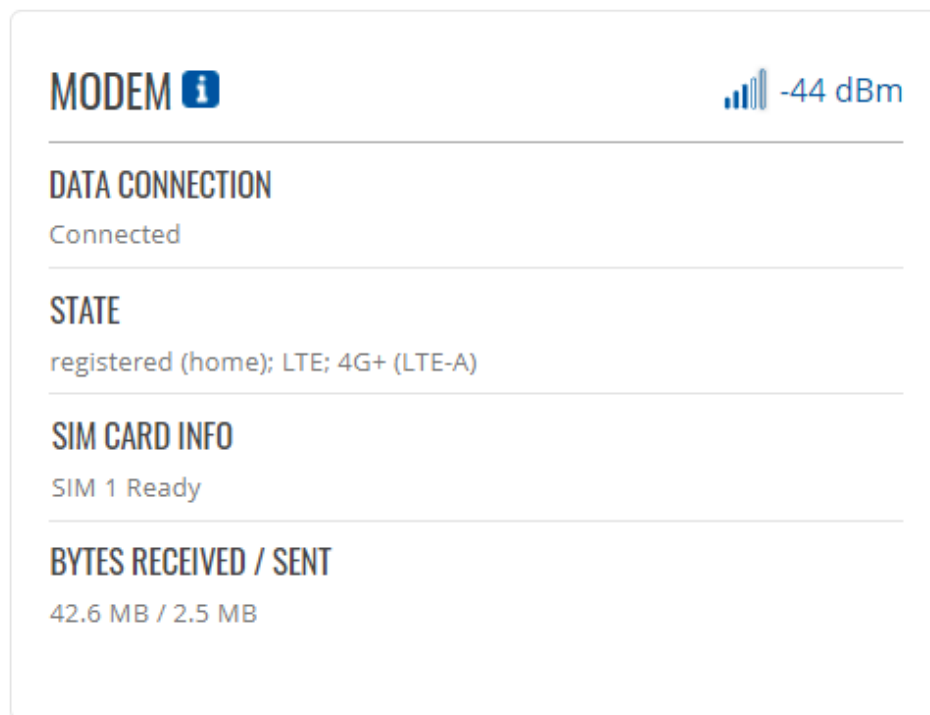

SIM card recommendations

- Before installing the SIM cards, please apply a thin layer of dielectric grease to the SIM card contacts for devices used in environments with **high-vibration levels**. This will help avoid SIM cards losing touch with the SIM slot and prevent unexpected failures.
- Industrial Grade SIM cards are recommended for devices requiring a long lifespan used in environments with **extreme temperatures**, **corrosive** or **extra humid climates**, or hard-to-reach locations.

Retrieved from "https://wiki.teltonika-networks.com/index.php?title=QSG_RUTX50&oldid=140068"

■