

CARSON[®]

MagniFlexPro[™]

2x LED Lighted Magnifier with Flexible Gooseneck and Magnetic Base

Congratulations on selecting your new Magniflash! In order to achieve optimum performance, please follow instructions for proper use and care.




PRODUCT SPECIFICATION

Magnification:	2x/4x Spot Lens	Dimensions:	14.2" x 5.3" x 18.9"	Batteries:	4 AA (not included)
Lens Diameter:	101mm (4")	Weight:	5.32 lbs	Accessories:	AC Adapter

INSTALLING BATTERIES

1. Remove battery door. Then remove battery case from compartment (Fig. 1).
2. Place 4 AA batteries according to polarity indicators printed inside case.
3. Insert loaded battery case into battery compartment with metal contacts facing upwards. Replace battery door when finished (Fig. 2).


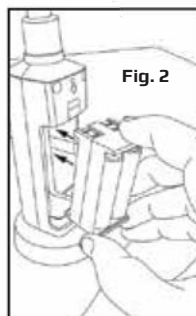


WARNING

Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.

INSTRUCTIONS FOR USE

1. Place metal plate on stable, flat surface. Attach magnifier to metal plate in desired position using built-in magnet located in magnifier.
2. To use with table clamp, place open C-clamp onto a table or hard surface and tighten securely by handle (Fig. 3). Then place magnifier on top of clamp using built-in magnet located in magnifier base (Fig. 4).
3. To use with battery power, remove plug from power jack. The unit will automatically switch to battery power.
4. Turn on light switch located on the front of magnifier.

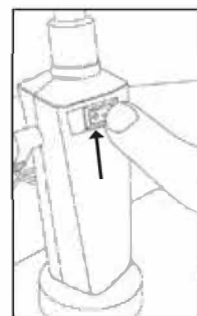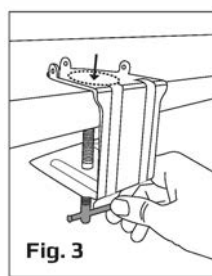

Customer Service: If you experience any difficulties, please contact us and we will be happy to help you.



✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

www.carson.com

Carson Optical 2070 5th Avenue,
Ronkonkoma, NY 11779 ITel:
631-963-5000

For warranty information, visit www.carson.com/warranty