


Crossover settings on TW1

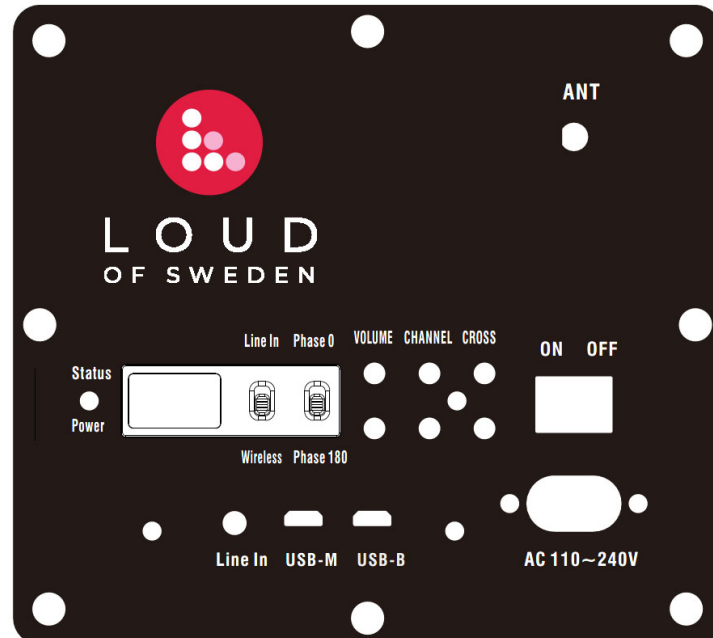

The crossover frequency of your subwoofer is the frequency at which your speakers start to roll off and your subwoofer kicks.

On the TW1 panel you can set the crossover between 1-7
1= low, 7= high



A setting of 3-5 is recommended.

