

Übersetzung

Operating instructions

Commercial refrigerator

Read the operating instructions before switching on for the first time

Page 12

EN



7085 159-01


GKPv / BKPv

LIEBHERR

Content

Description of the appliance.....	12	Setting the delay time for the door open alarm.....	16
Safety instructions and warnings	13	Deactivating the audible warning signal function	17
Disposal notes.....	13	Alarm test	17
Noise emissions from the appliance	13	Alarm messages	17
Range of appliance use.....	13	Adjusting the alarm parameters	17
Climate rating	14	Resetting the parameters to factory settings	17
Appliance dimensions	14	Defrosting	18
Setting up	14	Activating the defrost function manually	18
Electrical connection.....	14	Setting the display indication for the defrost phase	18
Equipment	15	Cleaning	18
Operating and control elements.....	16	Malfunctions.....	19
Switching the appliance on and off	16	Possible error messages in the display.....	19
Setting the temperature.....	16	Shutting your appliance down	19
Temperatur display mode.....	16	Changing over door hinges GKPv 65.. / BKPv 84.....	20
SuperCool	16		
Door open alarm.....	16		

Description of the appliance

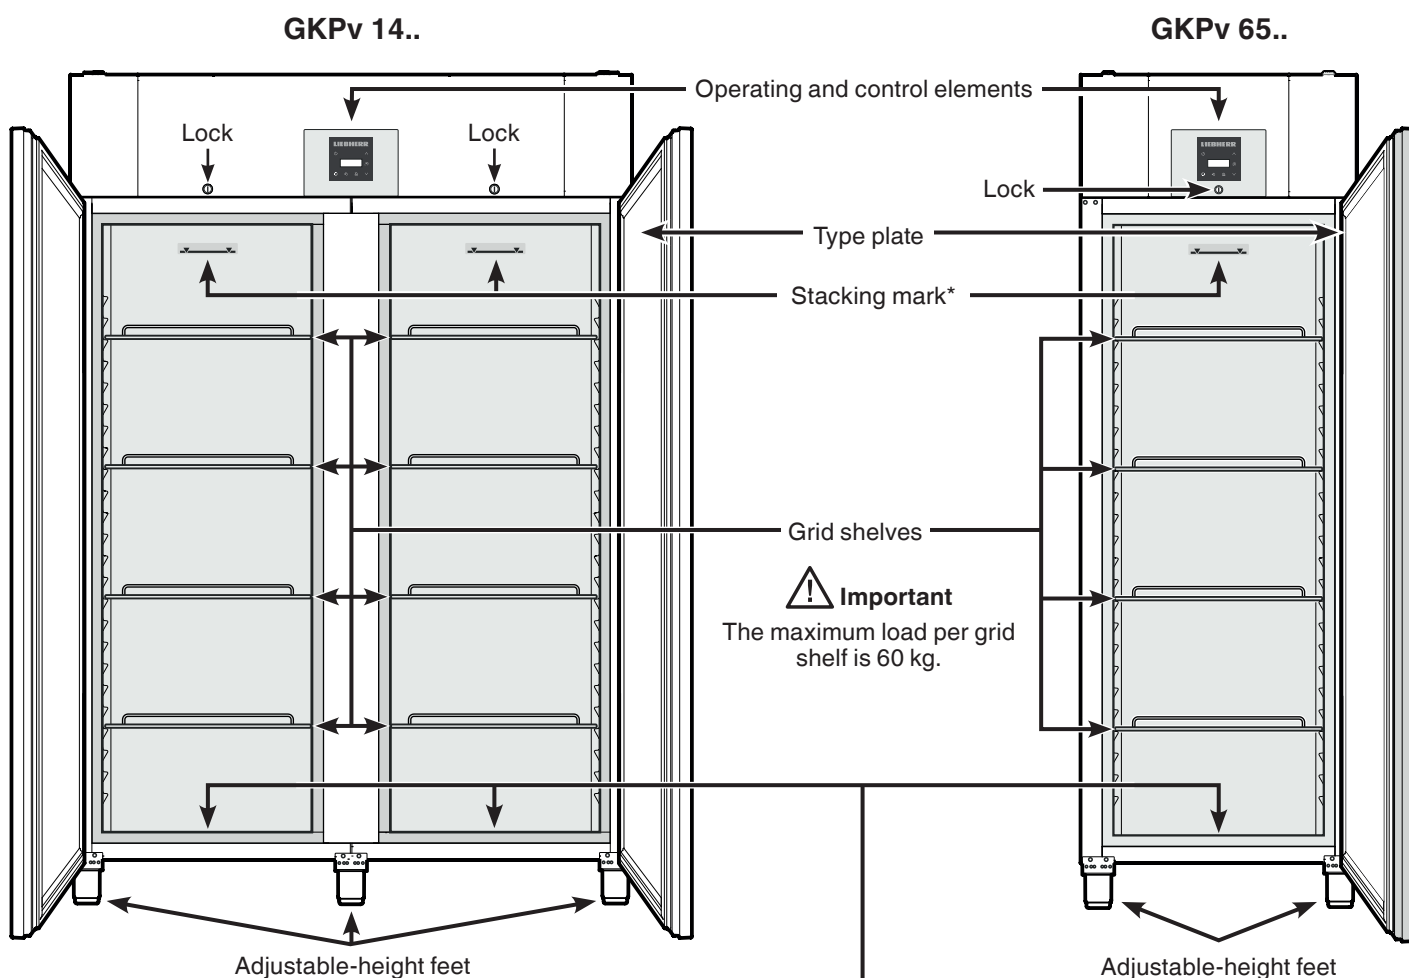

* Stacking mark →


Only load the top shelf up to the stacking mark.
This is important so as to ensure that the air can circulate properly and the temperature is even throughout the interior.

Cleaning water drain opening

A drain hose with an R 3/4 connection can be fitted to the underside of the appliance.

The water which collects in the interior during cleaning can be drained off in this way.

An angled connector is supplied with the appliance.

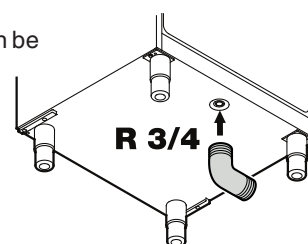

Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not consume food which has been stored for too long, as it could cause food poisoning.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane etc. in the appliance. Electrical components might cause leaking gas to ignite. You may identify such sprays by the printed contents or a flame symbol.
- Do not use electrical appliances inside the appliance.
- If you have a lockable appliance, do not keep the key near the appliance or within reach of children.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

Disposal notes

The appliance contains reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



When disposing of the appliance, ensure that the refrigerant circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.

- Disable the appliance.
- Pull out the mains plug.
- Cut through the connection cable.

WARNING

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packaging material.

Take the packaging material to an official collection point.

Noise emissions from the appliance

The noise level while the appliance is operating is below 70 dB(A) (relative noise level 1 pW).

Range of appliance use


The appliance is suited only for cooling food.

The appliance is not suited for storing and cooling pharmaceuticals, blood plasma, laboratory preparations or similar substances and products subject to the Medical Devices Directive 2007/47/EC.

Any misuse of the appliance may result in damage to or spoilage of the stored goods.




Furthermore, the appliance is unsuited for use in areas exposed to an explosion hazard.

The climate rating indicates at what room temperature the appliance may be operated to achieve full cooling capacity and what the maximum humidity level in the area around the appliance may be to ensure that no condensation forms on the exterior housing.

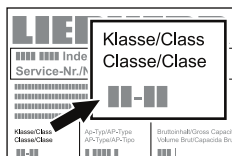

Climate rating	Max. room temperature	Max. relative humidity
5	40°C	40%

Appliance dimensions

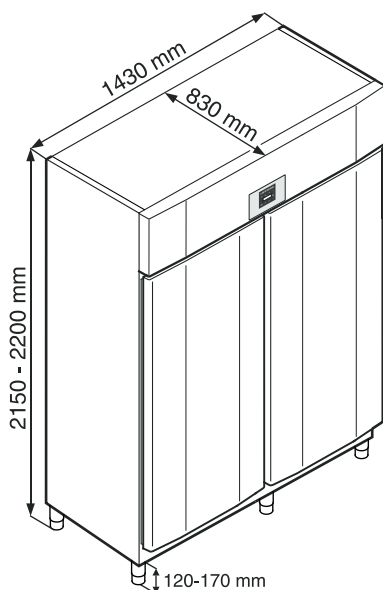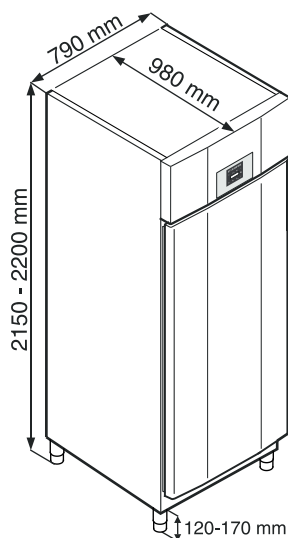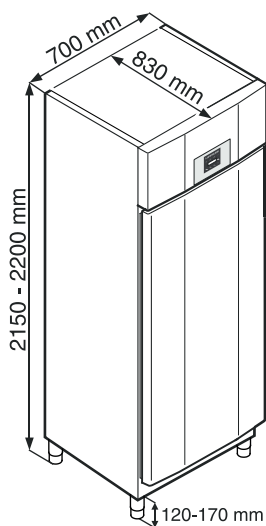

A diagram showing a beaker of liquid on a turntable. A string is attached to the center of the beaker's bottom, passes over the edge, and has weights hanging from it. The turntable is shown with a curved arrow indicating it is rotating.


To alter the height, rotate the bottom section of the respective adjustable foot.




Do not set the adjustable foot to a height greater than 170 mm! The bottom section of the adjustable foot can become loose and the appliance may then tip over.




The diagram shows a cross-section of the adjustable foot. It consists of a lower, wider section and an upper, narrower section. A vertical double-headed arrow indicates the height of the upper section, with the text '120-170 mm' next to it.

 


Do not cover ventilation openings or grille. 

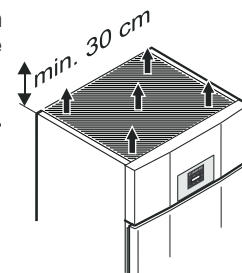

Do not use stand-alone inverters (conversion of direct current to alternating/three-phase current) or energy-saving plugs. Risk of damage to the electronic control system!

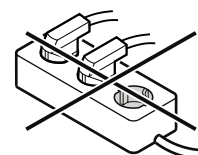


Equipment

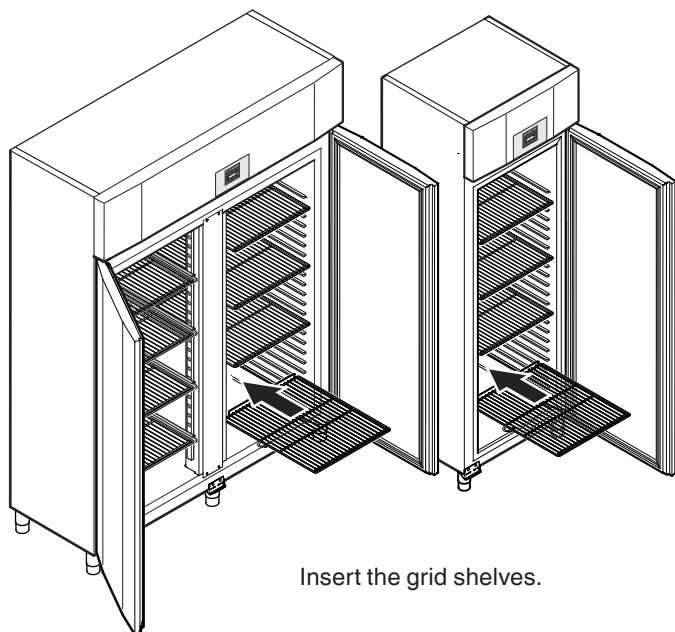


Insert the grid shelves.

GKpv 14.. equipment


Fit the supplied shelf rails to the right and left of the vertical bar.

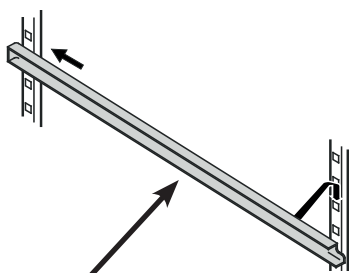

Suspend the rails at the desired height, by inserting into the rear clip-in strip first and then clipping in at the front.

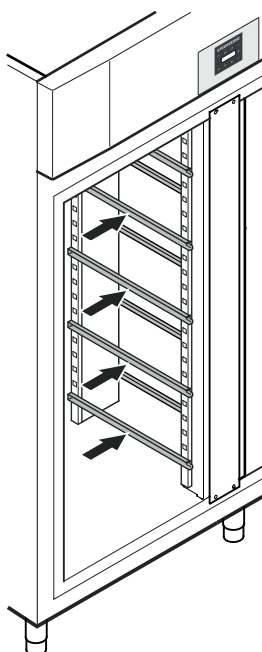

Intermediate shelves

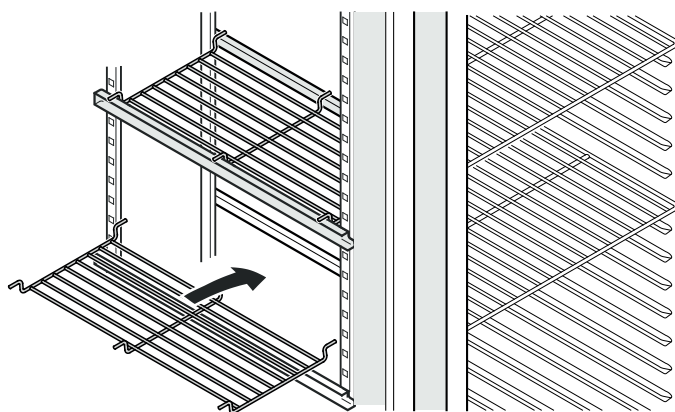

Place the supplied intermediate shelves onto the shelf rails.

Note


The maximum load per intermediate shelf is 20 kg.

BKPv equipment

The BKPv series is equipped with L-shaped support rails to accommodate baking trays.

Depending on the height of the goods to be stored, you can adjust the position of the support rails in intervals of 27,5 mm.

First slide bars into the rear clip-in upright at the desired height and then hang in position at the front.

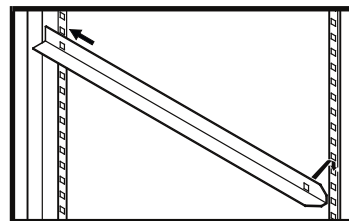


Safety lock

The lock is equipped with a safety mechanism.

Locking the appliance

- Insert the key as shown by arrow 1.
- Turn the key 180° (2).


To unlock the appliance, the same procedure must be repeated in the same order.

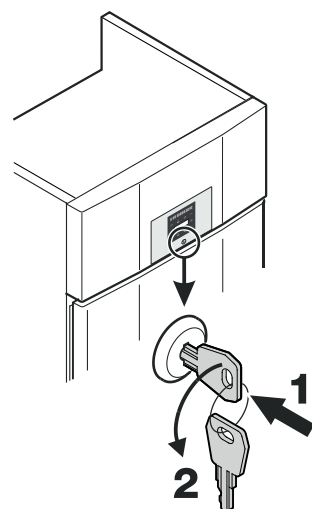

Interior light in appliances with glass door

The interior light is fitted on the inside at the top.

It can be switched on and off by pressing the switch S.

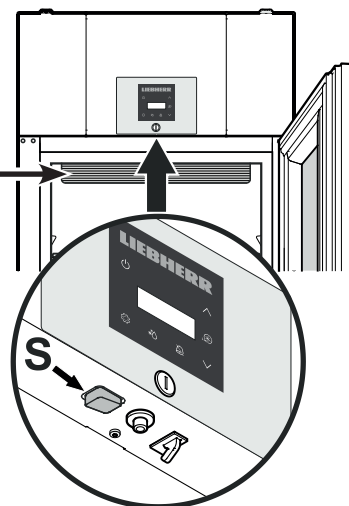

The light intensity of the LED light corresponds to laser class 1/1M.



Important

The light cover may only be removed by customer service staff.

If the cover is removed, do not look directly at the light through optical lenses from close distance. This can damage your eyes.

Operating and control elements



On/Off button (switching the appliance on and off)

Selection buttons

SuperCool button

Audible alarm Off button

Defrost button (for manually activating the defrost function)

Enter button

Symbols in the display

Compressor is running

LED flashing - refrigeration unit switches on after a delay. The compressor will start automatically after the pressure in the refrigerant circuit has equalised.

Fan is running

Appliance is defrosting

SuperCool is activated

Alarm function

The appliance has suffered a fault. Contact the customer service department.

Switching the appliance on and off

Connect the appliance to the mains. Display = **OFF**

Switching the appliance on

Press for approx. 3 seconds. Display = **ON**

Switching the appliance off

Press for approx. 3 seconds. Display = **OFF**

Setting the temperature

Press for 1 second. The temperature display flashes.

To increase the temperature (warmer): press button .

To reduce the temperature (colder): press button .

Press again.

The desired temperature setting is saved.

Temperatur display mode

The temperature display can be switched between degrees Celsius and degrees Fahrenheit. Factory setting is degrees Celsius.

Press for 5 seconds. Display = **r15**

Press . Display = **|**

Use button or to select the desired setting.

0 = °C 1 = °F

Press . Display = **r15**

Press for 5 seconds.

The electronic control system will switch back to normal operating mode.

SuperCool

Use SuperCool, to rapidly cool large amounts of food. When SuperCool is activated, the appliance operates with maximum cooling performance.

Activating SuperCool

Press for 3 seconds. Display = **c c b ***

Place the fresh food in the appliance.

The electronic control system will automatically switch back to normal operating mode.

Prematurely deactivating SuperCool

Press for 5 seconds. Display = **c c E**

Door open alarm

When the door is opened, the LED lights up and the temperature display begins to flash.

When the door has been left open for more than 240 seconds, the LED begins to flash, and **door** and the temperature indication flash alternately in the display.

The audible warning signal sounds (unless the audible warning signal function has been deactivated).

If the door has to stay open for longer in order to insert items to be cooled, cancel the audible warning signal by pressing button .

Setting the delay time for the door open alarm

The time before the audible warning signal sounds after the door has been opened can be adjusted.

Press for 5 seconds. Display = **r15**

Press until **d d d** appears in the display.

Press . Display = **|** Setting range = 1 - 5 minutes.

Use button or to select the desired setting.

Press . Display = **d d d**

Press for 5 seconds.

The electronic control system will switch back to normal operating mode.

Deactivating the audible warning signal function

The audible warning signal function can be completely deactivated if necessary.

Press  for 5 seconds. Display = 

Press  until  appears in the display.

Press . Display = 

Use button  or  to select the desired setting.

0 = audible warning signal function activated

1 = audible warning signal function deactivated

Press . Display = 

Press  for 5 seconds.

The electronic control system will switch back to normal operating mode.

Alarm test

This test checks the function of the internal and any external connected alarm device.

The appliance does not stop its refrigerating function during this test.

Press  +  for 5 seconds.

- The display will change to a temperature value of 0.2°C below the set upper alarm limit.
- The temperature value will now rise by 0.1°C every 2 seconds.
- When the upper alarm limit is reached,  will appear in the display. An external alarm unit connected to the floating alarm output will now be activated.
- The temperature value will continue to rise up to 0.2°C above the upper alarm limit.
- The same process will take place automatically for the lower alarm limit.  will appear in the display.

The LED  will be lit during the test.

The electronic control system will automatically switch back to normal operating mode.

Cancelling the test prematurely

Press  for 5 seconds.

Note

If the values of the upper and lower alarm limit (**AL** and **AH** in the section entitled "Adjusting the alarm parameters") are set to 0,  - - and  - - will appear in the display during this test.

Alarm messages

1. LED flashes in the display

If  appears in the display, the appliance has a fault. Consult your nearest customer service point.

2. LED flashes in the display; the display reads HI or LO

The interior is too warm (HI) or too cold (LO).

The audible warning signal sounds (unless the audible warning signal function has been deactivated).

Adjusting the alarm parameters

The alarm limits (difference to the set temperature) and the alarm delay (delay until alarm sounds) can be adjusted.

Press  for 5 seconds. Display = 

Press  until  appears in the display.

 = Lower alarm limit

Press . Display = temperature difference in °C

Use button  or  to select the desired setting.

Set positive values only.

Press . Display = 

Press . Display =  Upper alarm limit

Press . Display = temperature difference in °C

Use button  or  to select the desired setting.

Set positive values only.

Press . Display = 

Press . Display = 

Press . Display = alarm delay in minutes

Use button  or  to select the desired setting.

Press . Display = 

Press  for 5 seconds.

The electronic control system will switch back to normal operating mode.

Resetting the parameters to factory settings

The alarm limits and sensor calibration values can be reset to the factory settings using this function.

Pull out the mains plug.

Keep  pressed and connect the mains plug.

Display = 

Press . Display = 

The electronic control system will switch back to normal operating mode.

Defrosting

The refrigerator defrosts automatically. The defrost water drains into an evaporation tray near the refrigeration unit, where the heat from the compressor causes it to evaporate.

Activating the defrost function manually

If the door has been left slightly open for a long time, a layer of ice may form in the interior and on the cooling plate. The defrost function can then be activated manually.

Press  for 3 seconds. Display =  + dFb

The electronic control system will automatically switch back to normal operating mode.

Display = dFf

Setting the display indication for the defrost phase

Press  for 5 seconds. Display = r15

Press  until dFb appears in the display.

Press . Display = |

Use button  or  to select the desired setting.

0 = Symbol  + alternating display of dFf and the current temperature in the interior of the appliance.

1 = Symbol  + temperature before the start of the defrost phase (factory setting).

2 = Symbol  + dFf.

Press . Display = dFb

Press  for 5 seconds.

The electronic control system will switch back to normal operating mode.

Cleaning

Clean the appliance at least twice per year.

Before cleaning always switch off the appliance. Pull out the mains plug or switch off or unscrew the fuse.

- Empty the appliance and store the food in a cool place.
- Clean the inside and equipment with lukewarm water and a little detergent. Do not use abrasive or acid cleaners or chemical solvents.

Do not use steam cleaners because of the risk of injury and damage.

- Ensure that no cleaning water penetrates into the electrical components or ventilation grille.
- Dry all parts well with a cloth.
- Use a commercially available stainless-steel cleaning agent for stainless-steel appliances.

Do not use abrasive sponges or scourers, do not use concentrated cleaning agents and never use cleaning agents containing sand, chloride or acid or chemical solvents.


These would damage the surfaces and could cause corrosion.

Cleaning the dust filter

Clean the dust filter at least twice per year!

Remove the plug!

1. Remove the dust filter by lifting upwards.
2. Clean the dust filter with water and detergent.
3. Reinstall the dust filter.

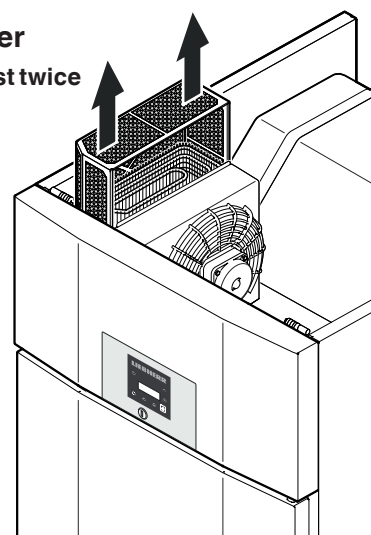

Malfunctions

You may be able to rectify the following faults by checking the possible causes yourself:


- **Appliance does not function:**

- Is the appliance switched on?
- Is the plug correctly fitted in the mains socket?
- Is the fuse intact?

- **The temperature is not low enough:**

- Is the temperature setting correct (see "Setting the temperature")?
- Have excessive amounts of fresh food been placed in the appliance?
- Does the separately installed thermometer show the correct reading?
- Is the ventilation system working properly?
- Is the appliance set up too close to a heat source?

If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type designation ①, service number ② and appliance number ③ as indicated on the type plate.

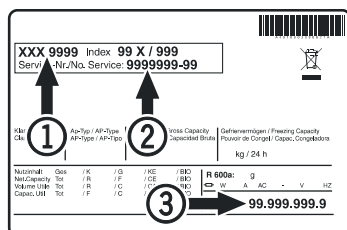

The position of the type plate is shown in the section entitled **Description of the appliance**.

Shutting your appliance down

If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or switch off or unscrew the fuse.

Clean the appliance and leave the door open in order to prevent unpleasant smells.


The appliance complies with the relevant safety regulations and EU Directives 2014/30/EU and 2014/35/EU.

Possible error messages in the display

Error code	Error	Action
E0, E1, E2, rE	Temperature sensor defective	Contact the customer service department
EE, EF	Electronic control system error	Contact the customer service department
dOr	Appliance door open for too long	Close appliance door
HI	Temperature inside appliance too high (too warm)	Check that the door has been closed properly. If the temperature does not drop, contact the customer service department.
LO	Temperature inside appliance too low (too cold)	Contact the customer service department

Changing over door hinges GKPv 65../BKPv 84..

Door hinges should only be changed by a trained expert.
Changing the door hinges must be done by two people.

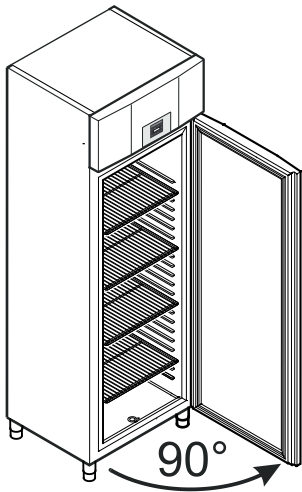

1. Open door by about 90°.


Important note

The door must be opened 90° before the lower hinge bracket is removed.

This will hold the self-closing mechanism that is integrated into the door in the required position for installation.

⚠ WARNING!

If the door is removed and reinstalled in the closed position, this will lead to destruction of the self-closing mechanism on the first opening of the door.

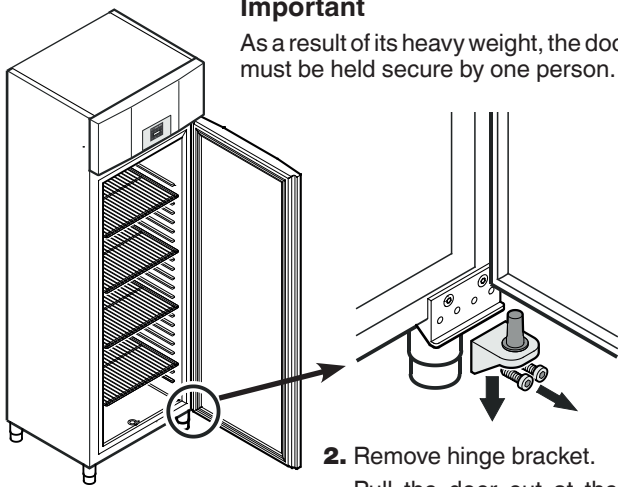


Important


As a result of its heavy weight, the door must be held secure by one person.

2. Remove hinge bracket.
Pull the door out at the bottom and lift off.

3. Remove bearing ring from upper door mounting.

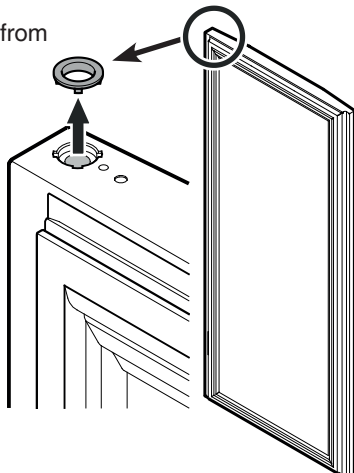


4. Remove the hinge components from the hinge bracket.

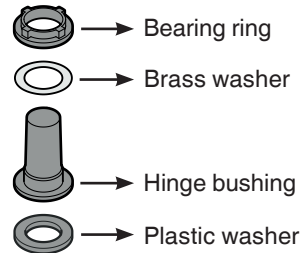


Note on point 4


The hinge bushing with brass washer and bearing ring may stick in the door mounting when you pull out the hinge bracket and, in this case, must be removed from it.

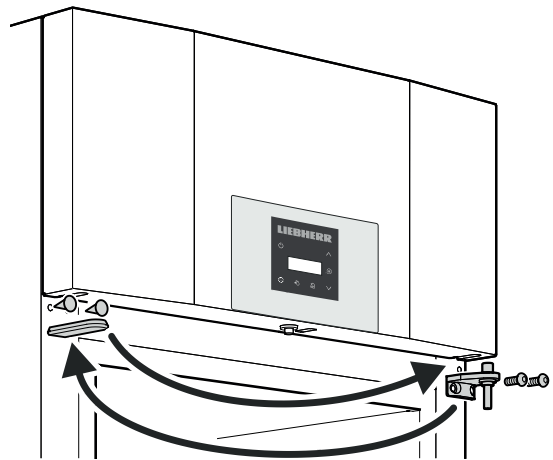

5. Transfer the upper hinge bracket and covers to the opposite side.


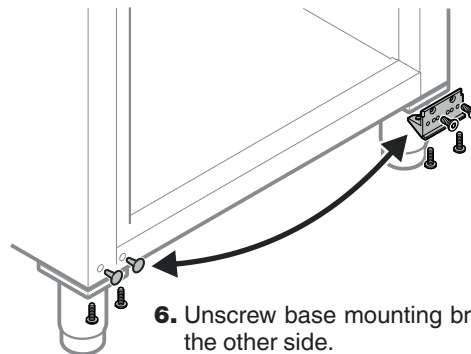


6. Unscrew base mounting bracket and attach on the other side.

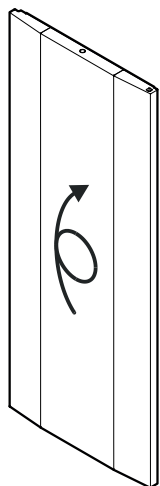

7. Turn the door by 180°.

8. Insert the bearing ring and hinge bushing in the upper door mounting.

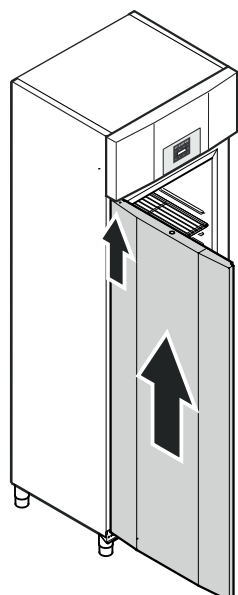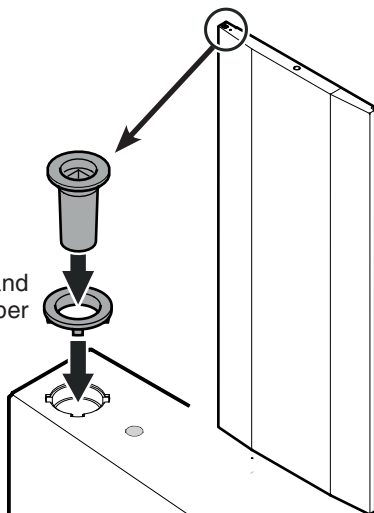

9. Keeping door open at 90°, suspend in top square pin.

⚠ WARNING!



It is essential that the door is open at an angle of 90° during installation.

If the door is installed in the closed position, this will lead to destruction of the self-closing mechanism on the first opening and closing of the door.


Important

As a result of its heavy weight, the door must be held secure by one person.

10. Fit the hinge components on the hinge bracket.

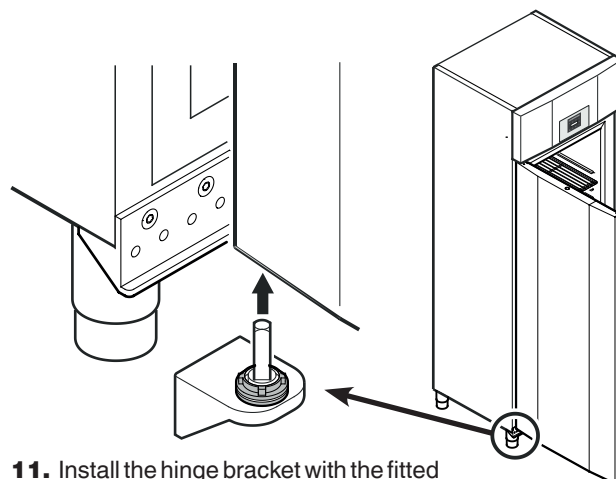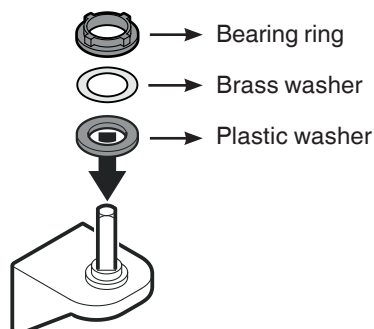


11. Install the hinge bracket with the fitted hinge components in the lower door mounting.

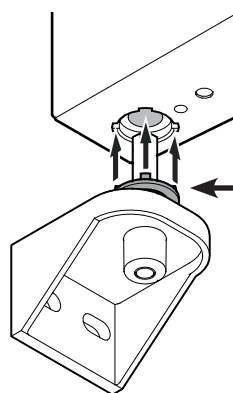

Note on point 11

The tabs on the bearing ring must fit into the recesses of the door mounting during installation.

If necessary, gently rotate the upper ring.

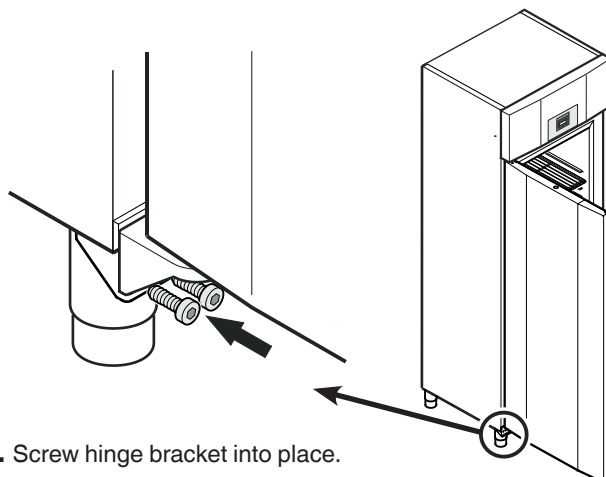

12. Screw hinge bracket into place.



Liebherr Hausgeräte Lienz GmbH

Dr.-Hans-Liebherr-Strasse 1

A-9900 Lienz

Österreich

www.liebherr.com

