



ew IEM G4

- Quick Guide

Kurzanleitung

Guide rapide

Guida rapida

Guía de inicio rápido

Guia rápido

Beknopte handleiding

Krótkie instrukcja obsługi

Snabbguide
- Kort vejledning

Παράρτημα

Γρήγορος οδηγός

Kısa Kılavuz

Краткая инструкция


快速指南

快速使用指南

クイックガイド

퀵 가이드

SENNHEISER

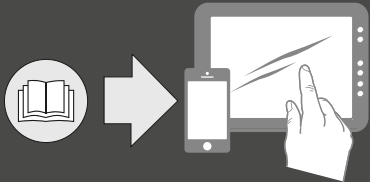

Sennheiser Documentation App




or online at
www.sennheiser.com/download
ew IEM G4_

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Publ. 01/18, 575863/A01

SR IEM

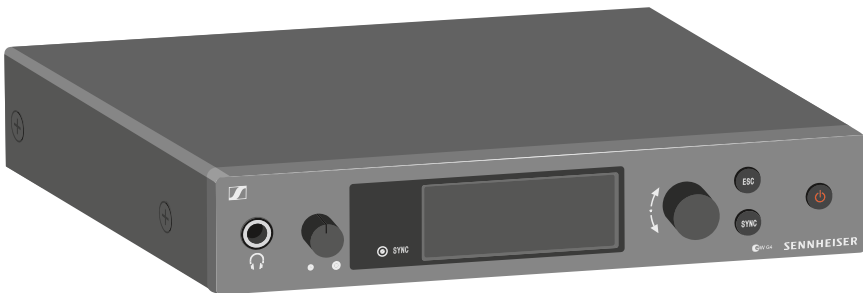


EK IEM




Battery




Low Battery

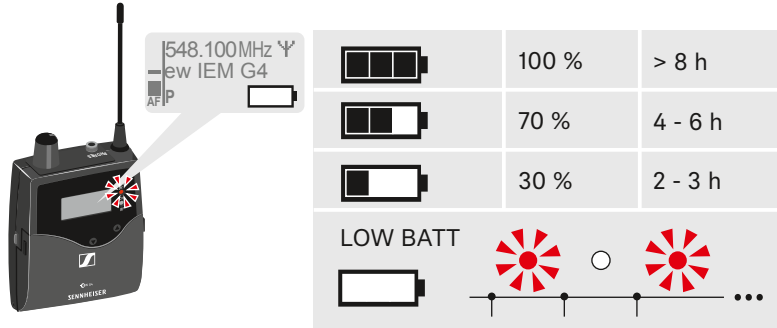


On

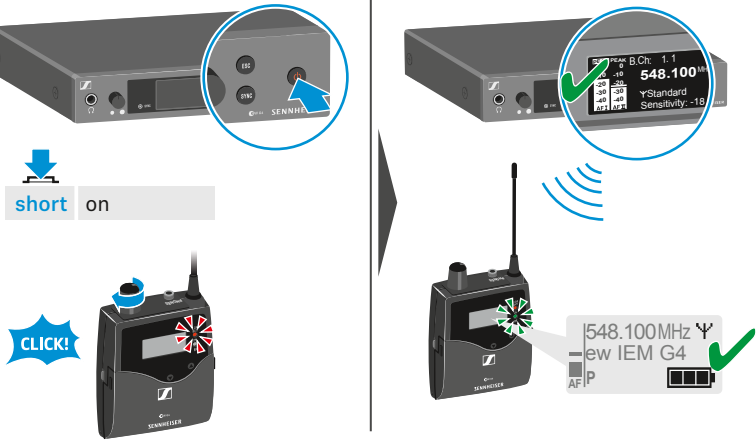


Off

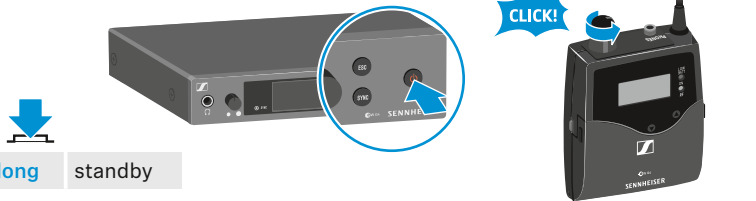


Setup

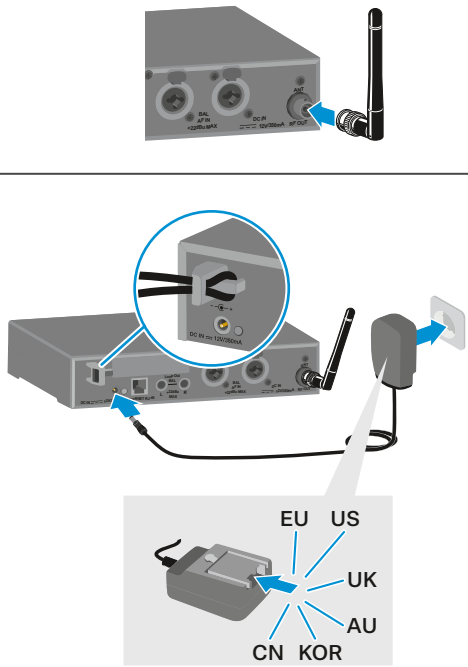



Standard display

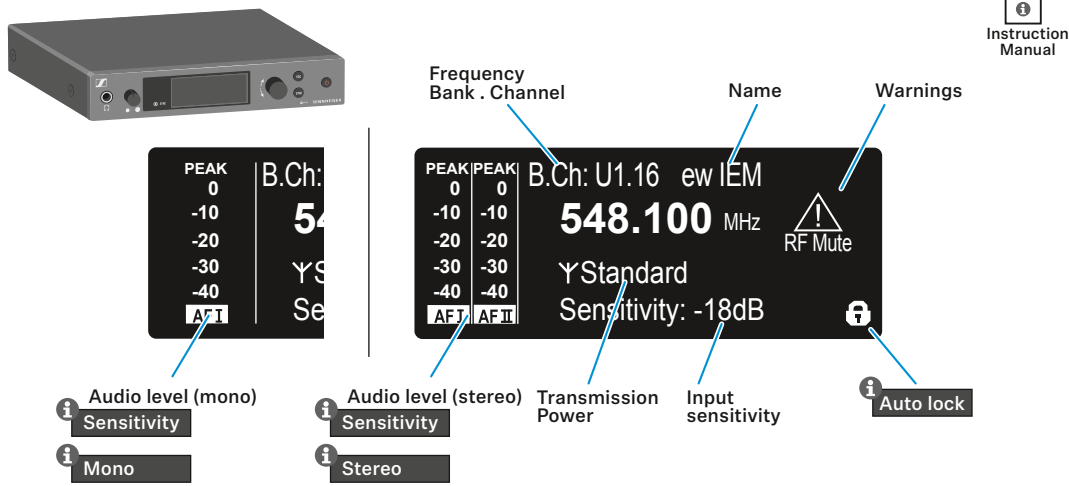

LEDs

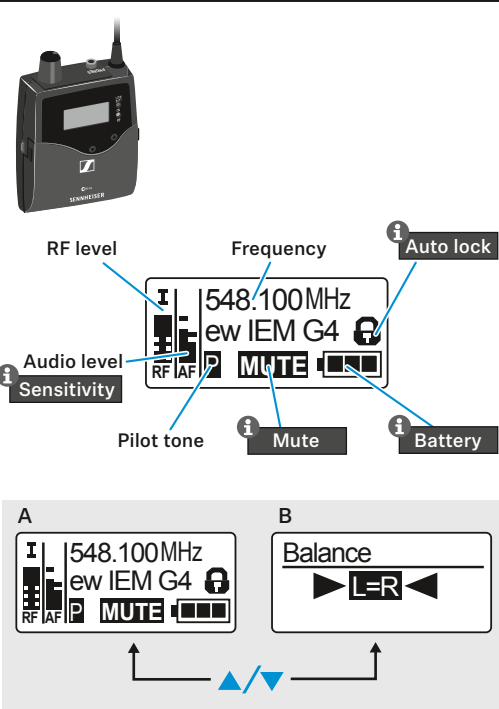

Menu

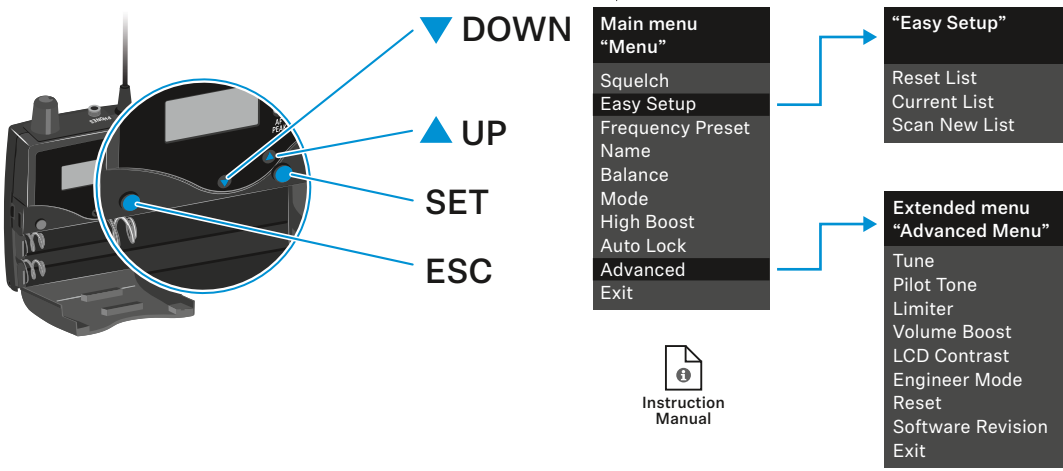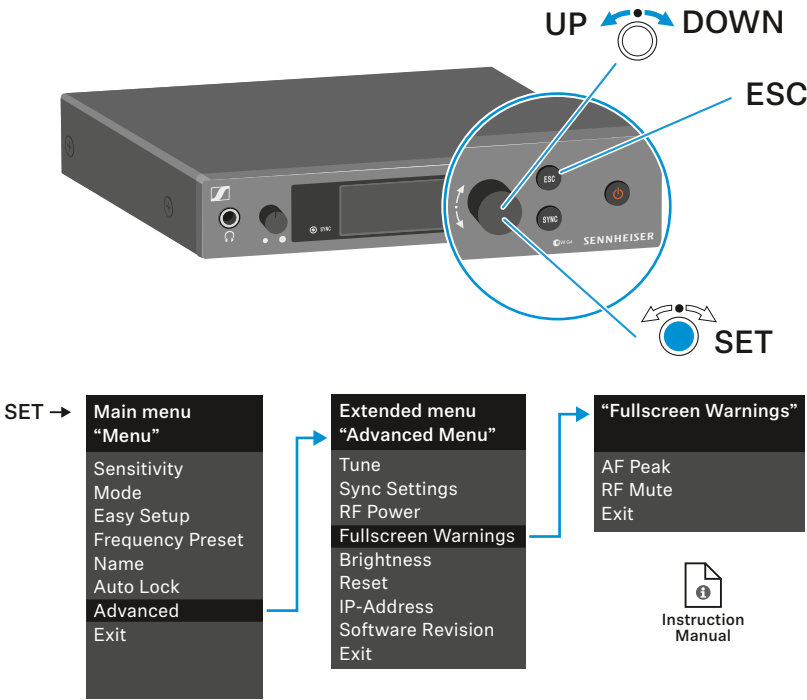

Stereo

Instruction Manual

6.3 mm

AUX

SR

Mode

Stereo

OR

XLR-3

AUX

EK

Menu

Mode

Stereo

Mono

Instruction Manual

6.3 mm

AUX

SR

Mode

Mono

OR

XLR-3

AUX

EK

Menu

Mode

Focus

Advanced Menu

Pilot Tone

Inactive

Phones

VOLUME

VOL

< 70 %

6.3 mm

SR

Mode

Stereo

EK

Menu

Mode

Stereo

Auto lock

SR

1

2

3

EK

1

2

3

10 s

Auto lock

Instruction Manual

Sync

SYNC

≤ 10 cm

≤ 4"

OR

✓ SYNC

✗ SYNC

SR

Mode

Stereo

EK

Menu

Mode

Stereo

Sensitivity

-42 dB ... 0 dB

✓

✗

Menu

Exit

Sensitivity

Mode

-18dB

Squelch

Menu

Squelch

9 dB

25 dB

5 dB

Mute

Instruction Manual

RF Mute On?

RF Mute Off?

SET

SR

Mode

Stereo

EK

Menu

Mode

Stereo

Network Control

WSM

Media Control

SR

Mode

Stereo

EK

Menu

Mode

Stereo

Multichannel - Easy Setup

Bank 1 ... 20; U1 ... U6

Channel 1 ... 16

1

2

3

SR

Mode

Easy Setup

EK

Menu

Easy Setup