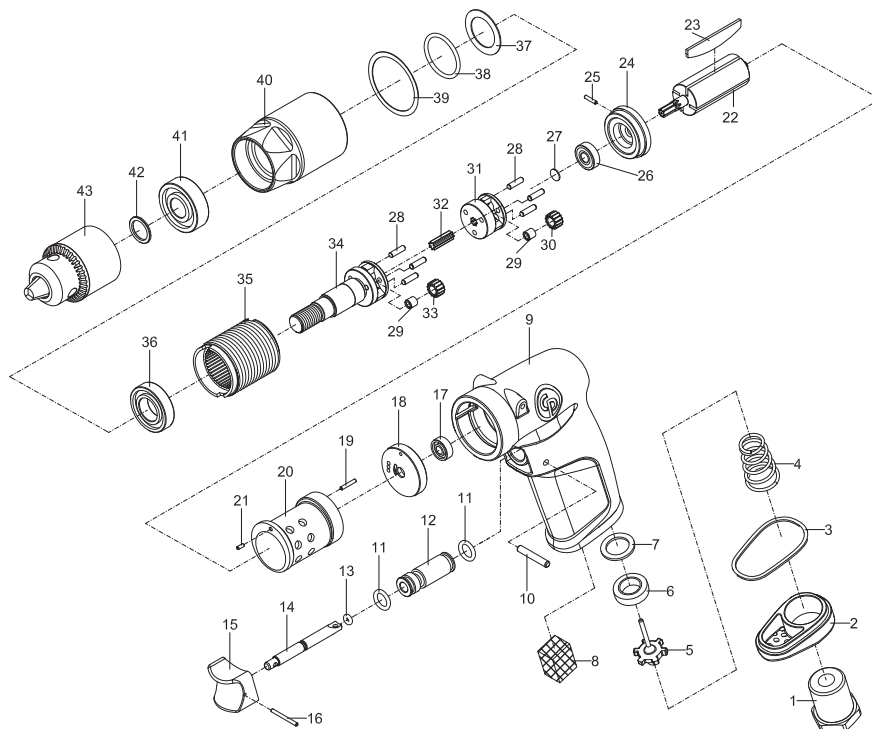



Assembly instructions

Parts #	Tightening torque	Dir.	Glue
09-35-40	15 Ft.lb - 20 Nm		
01-09	7,3 Ft.lb - 10 Nm		Loctite ® 222

Item	Part No	Description	Qty
A	2050555523	INLET KIT	
1		AIR INLET	1
2		DEFLECTOR	1
3		GASKET	1
B	2050552213	THROTTLE KIT	
4		SPRING	1
5		VALVE	1
6		VALVE SEAT	1
7		SPACER	1
C	2050555543	TRIGGER KIT	
10		DOWEL PIN	1
11		O-RING	2
12		VALVE BUSHING	1
13		O-RING	1
14		VALVE STEM	1
15		TRIGGER	1
16		SPRING PIN	1
D	2050555563	REAR PLATE KIT	
17		BALL BEARING	1
18		REAR PLATE	1
19		PIN	1
E	2050555573	FRONT PLATE KIT	
21		PIN	1
24		FRONT PLATE	1
25		PIN	1
26		BALL BEARING	1
F	2050555583	NEEDLE KIT	
28		PIN	3
29		NEEDLE BEARING	3
G	2050555603	SECOND STAGE KIT 500 & 3300	
33	2050555593	GEAR KIT 500RPM (SET OF 3)	1
34		PLANET SHAFT	1
	2050555583	NEEDLE KIT (SET OF 3)	1

	2050552563	EC declaration
	6159948740	Safety instructions
	2050552653	Operator's manual

Item	Part No	Description	Qty
H	2050555613	FIRST STAGE KIT	
27		WASHER	1
30	2050555593	GEAR KIT 500RPM (SET OF 3)	1
31		PLANET SHAFT	1
	2050555583	NEEDLE KIT (SET OF 3)	1
I	2050555623	MOTOR BEARING KIT	
17		BALL BEARING	1
26		BALL BEARING	1
J	2050555633	FRONT BEARING KIT	
36		BALL BEARING	1
41		BALL BEARING	1
K	2050555513	TUNE UP KIT	
37		WASHER	1
38		O-RING	1
39		GASKET	1
3		GASKET	1
7		SPACER	1
11		O-RING	2
13		O-RING	1
23	2050555553	ROTOR BLADE KIT (SET OF 4)	1
8		SILENCER	1
L	2050555643	SMALL PART KIT	
10		DOWEL PIN	1
16		SPRING PIN	1
19		PIN	1
21		PIN	1
25		PIN	1
42		WASHER	1
27		WASHER	1
9	2050555023	HOUSING	1
20	2050555113	CYLINDER	1
22	2050555143	ROTOR 500RPM	1
32	2050555323	SUN GEAR	1
35	2050555393	RING GEAR	1
40	2050555263	GEAR CASE	1
	6158727980	WARNING LABEL	1

Spare parts without part number are not sold separately

2050552673 rev. 1

Recommended accessories

6mm CHUCK + KEY	2050555863
10mm CHUCK + KEY	C142408
10mm KEYLESS CHUCK	2050502063
KEY FOR 6mm CHUCK	2050555873
KEY FOR 10mm CHUCK	CA050120

SUSPENSION RING	2050555853
SIDE HANDLE FIXTURE	2050555883
SIDE HANDLE	2050552473