

# I2WL800



## 114272

**ENGLISH**

**Table of contents**

**1.Safety ..... 18**  
    1.1 Key to symbols ..... 18  
    1.2 Safety instructions ..... 19  
    1.3 Use as intended ..... 23  
    1.4 Use against the intended purpose ..... 23

**2. General information ..... 24**  
    2.1 Liability and Warrantees ..... 24  
    2.2 Copyright protection ..... 24  
    2.3 Declaration of conformity ..... 24

**3. Transport, packaging and storage..... 25**  
    3.1 Delivery check ..... 25  
    3.2 Packaging..... 25  
    3.3 Storage..... 25

**4. Technical data ..... 26**  
    4.1 Overview of parts ..... 26  
    4.2 Technical specification ..... 27

**5. Installation and operation..... 28**  
    5.1 Installation ..... 28  
    5.2 Operation..... 29

**6. Cleaning ..... 31**

**7. Waste disposal ..... 32**

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 5258 971-0  
fax: +49 5258 971-120  
**Service-Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)



**Read this instruction manual before using and keep them available at all times!**

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

## 1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

### 1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



**DANGER!**

This symbol highlights hazards which could lead to injury.



**WARNING!**

This symbol highlights dangerous situations which could lead to injury or death.



### **HOT SURFACE!**

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



### **CAUTION!**

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



### **NOTE!**

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

## **1.2 Safety instructions**

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- **Never** leave the device unattended when in use.
- Only use the device indoors.

- The device is not adapted for use with an external timer or remote control.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



## **DANGER! Electric shock hazard!**

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.

- Do not cover the cable. Keep away the cable from operating range.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard will occur**.
- Never immerse the appliance, the power cord and the power plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
  - when the device is not used,
  - in case of anomalies during operation,
  - before cleaning.



**HOT SURFACE! Burn hazard!**

To avoid the hazard results please follow the instructions below.

- The warming plates and infrared lamps become hot when in use. Do not touch them with bare hands. Use appropriate protective gloves.
- Keep children away from hot elements of the device.

- The warming plates and infrared lamps remain hot also for some time after they have been turned off. Before cleaning the device or moving elsewhere wait until it cools down.
- During the warming operation the cookware becomes hot together with the food. When lifting cookware always use protective gloves or a dish cloth!
- Metal objects heat up very fast; do not place knives, forks, spoons, saucepan or pan lids and other kitchen utensils on the warming plates. There is a risk of burn if you touch them!



## **WARNING! Fire or explosion hazard!**

To avoid the hazard results please follow the instructions below.

- During operation **never** place kitchen utensils, towels, paper, etc. on the warming plates or above the sneeze screen to avoid fire hazard and damage to the device.
- Do not use any covers for the warming plates as they may lead to accidents, for example due to over-heating, ignition or material spattered. Do not use unsuitable protective devices or safety child guards. They may lead to accidents.
- **Never** use the device near flammable or inflammable materials (such as alcohol, spirits, petrol, etc). High temperature may cause their evaporation and due to contact with the ignition sources the explosion may occur, and it may result in personal injuries and material damage.

- In case of fire and before taking relevant fire extinguishing action, disconnect the device from the electric power supply (unplug!). When the fire has been extinguished ensure sufficient fresh air inflow.

**Caution:** Never use water for fire extinguishing when the device is connected to the power supply. **Electric shock hazard!**

### 1.3 Use as intended

Every use of the device for a different purpose and/or in a way that diverges from the intended use is not allowed and is assumed as the use against the intended purpose.

Any claims against the manufacturer or their authorized representatives as a consequence of experiencing damage resulting from the use against the intended purpose are inadmissible.

The liability for damage occurred during the use of the device against its intended purpose is borne solely and exclusively by the user.

Safety operation of the device is guaranteed only when it is used for its intended purpose and according to the instructions included in this manual.

**The food warmer** is intended for **keeping food warm** using appropriate cookware.

Do not use the **food warmer** for:

- food preparation
- heating-up of flammable, health-hazardous and volatile liquids and materials, etc.

### 1.4 Use against the intended purpose

Any use other than those mentioned in point “**1.3 Use as intended**” is assumed as the use against the intended purpose and is not allowed.

The use against the intended purpose may lead to severe injury or damage caused by hazardous voltage, fire or high temperature. It is allowed to use the device to perform only the work described in the instruction manual. Improper use may cause the device damage.

Any manipulation with the device, assembly or maintenance work may be performed exclusively by the authorized service staff.

## 2. General information

### 2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



#### CAUTION!

**Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!**

Manufacturer is **not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

### 2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



#### NOTE!

**The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.**

### 2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

### 3. Transport, packaging and storage

#### 3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

#### 3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



**If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.**

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

#### 3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

## 4. Technical data

### 4.1 Overview of parts

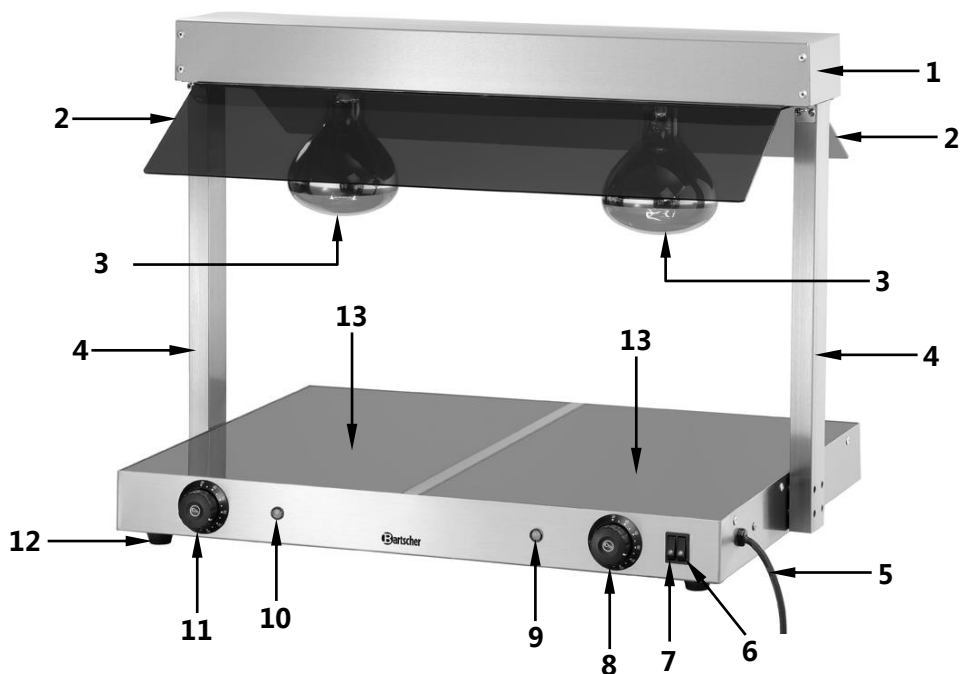

- |                                                                        |                                                  |
|------------------------------------------------------------------------|--------------------------------------------------|
| <b>1</b> Top cover                                                     | <b>8</b> Temperature control knob for right zone |
| <b>2</b> Sneeze guard                                                  | <b>9</b> Heating indicator (green), right zone   |
| <b>3</b> Infrared lamp                                                 | <b>10</b> Heating indicator (green), left zone   |
| <b>4</b> Fixing of food warmer                                         | <b>11</b> Temperature control knob for left zone |
| <b>5</b> Power cable                                                   | <b>12</b> Feet (4)                               |
| <b>6</b> ON/OFF Switch, right infrared lamp with indicator light (red) | <b>13</b> Warming plates (2)                     |
| <b>7</b> ON/OFF Switch, left infrared lamp with indicator light (red)  |                                                  |

## 4.2 Technical specification

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>Food warmer I2WL800</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Code-No.:          | <b>114272</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Material:          | Stainless steel, plexiglass                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Realization:       | <ul style="list-style-type: none"><li>▪ Heat source<ul style="list-style-type: none"><li>- Type: Infrared lamp(s)</li><li>- Number 2</li><li>- Power per heat source: 0.25 W</li></ul></li><li>▪ Sneeze guard</li><li>▪ Warming plate(s)<ul style="list-style-type: none"><li>- Dimensions: W 320 x D 530 mm</li><li>- Number of heating zones: 2</li><li>- Heat zones separately controllable</li><li>- Surface material warming plate: Glass-ceramic</li></ul></li><li>▪ ON/OFF switch for infrared lamps (2)</li><li>▪ Indicator lights: ON/OFF, heating</li><li>▪ State at delivery: assembled for ready to use</li></ul> |
| Temperature range: | 30 °C to 85 °C                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Power supply:      | 0.8 kW / 230 V 50-60 Hz                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Clear height:      | 300 mm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Dimensions:        | W 735 x D 555 x H 656 mm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Weight:            | 13.4 kg                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

We reserve the right to make technical changes!

## 5. Installation and operation

### 5.1 Installation

#### Positioning

- Unpack the device and remove the packing material.
- Before the first use, remove the protective foil from the device. Remove the foil slowly not to leave glue residues. Remove possible glue residues with appropriate solvent.



#### **CAUTION!**

**Never remove the nameplate and warning signs from the device.**

- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on an inflammable surface.
- **Never** put the device in a moist or wet area.
- **Never** locate the device in the direct vicinity of walls, low wall, kitchen furniture, or other objects. Leave at least 10 cm free space around the device. Follow the valid fire protection regulations.
- When it is not possible to leave the recommended distance, use appropriate protection measures (e.g. heat-resistant foil) that will ensure keeping the wall temperature within the safe range (up to 60°C).
- When locating the device, make sure the power plug is easily accessible to immediately unplug the device, if necessary.

#### Connection



#### **DANGER! Electric shock hazard!**

**The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!**

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

## 5.2 Operation

### Before the first use

- Make sure the device is disconnected from the power supply.
- Before use, clean the device according to the instructions set out in point 6 “Cleaning”.
- Screw two supplied infrared lamps into E27 lamp holders.

### Device start-up

- Turn the temperature control knob to “0” position.
- Plug the device into a single grounded socket.
- Both warming zones of the device are controlled separately so that one or both plates can be used depending on the need. Also the infrared lamps are operated separately with ON/OFF switch.



**HOT EXTERNAL SURFACE! Risk of burns!**

**The device surface and warming plates become hot when in use. Do not touch hot surface of the device.**

- Set the required temperature for particular heat zones with relevant temperature control knobs. Select the right temperature for the food in the range 30 °C to 85 °C.
- The green indicator light for a particular warming plate is on during the heating up phase. As soon as the set temperature is reached, the green heating indicator light goes off. When the temperature has decreased it comes on again and the warming plate is heated again to reach the set temperature.
- Turn on the infrared lamp(s) with the ON/OFF switch on the control panel. The red indicator light comes on and goes off when the infrared lamp is turned off with the ON/OFF switch.

## Warming food



### **WARNING!**

Before you place the food on the warming plate pay attention that the food warmer is located on the solid and stable surface to avoid the food cookware to slide or fall over.



### **CAUTION!**

The warming plate is not intended for direct contact with food for cooking or keeping the food warm. Use suitable food cookware (plates, bowls, platters, etc.)!

- Place the food under the infrared lamp on the warming plate to keep the temperature of the entire food from the top to the bottom.

**Tip: For the best result in maintaining the heat, the distance between the food and heating lamps should be set at approx. 30 cm.**

- During operation, do not place kitchen film on the warming plates and do not use plastic utensils for warming the food. The objects or food that may melt (e.g. plastic, film or sugar) should be kept away from the warming surface. Take care and remove the melted objects from the hot warming plate as soon as possible. To do so, use the cleaning scraper and follow the instructions in point 6. "Cleaning".
- When lifting hot cookware use protective gloves or dish cloth!



### **CAUTION!**

**Never move the food warmer with food on top of it. Remove the food first!**

- When you do not use the device, turn off the infrared lamps with the ON/OFF switch, turn the temperature control knob to "0" position and disconnect the device from the socket (unplug!).

## 6. Cleaning



### **WARNING!**

**Before cleaning disconnect the device from the power supply (pull the plug!).**

**The device is not suited for direct washing via water jets!**

**Protect the device from water penetration.**



### **CAUTION!**

**Do not use aggressive or bleaching cleaning agents containing active oxygen, chlorine or corrosive components, abrasive or scouring cleaning agents, such as steel wool, steel wool containing soap, metal or plastic sponges, or similar agents with abrasive surface.**

- Clean the device after each use.
- Sugar and sugar containing food (e.g. jam) that melts should be removed immediately from the warming plate with a cleaning scraper. Otherwise, the surface may be damaged while cooling down.
- Clean the warming plates with a soft, damp cloth and mild cleaning agent. Carefully remove the dirt from the glass-ceramic surface. The dirt that has not been removed burn into the surface during next operation and may become permanent.
- Wipe the casing and the sneeze screen with a soft, damp cloth and mild cleaning agent.
- Wipe the cleaned surfaces with a cloth moistened in clean water. The cleaning agent residues may lead to discoloration during next operation, if not entirely removed.
- Leave the infrared lamps to cool down. Wipe them with a soft, dry, lint-free cloth.
- Finally dry and polish the surface with a soft, dry cloth.

## Storing of the device

- If the device is not used for a longer time, clean it thoroughly according to the instructions above and store it in a dry, clean place, protected from cold, sunlight, and children. Do not place any heavy objects on the device.

## 7. Waste disposal

### Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



### **WARNING!**

**To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.**



**For the disposal of the device please consider and act according to the national and local rules and regulations.**

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 5258 971-0  
fax: +49 5258 971-120  
**Service-Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)