

FW200



370235

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2019-06-11

Original instruction manual

1	Safety	2
1.1	Explanation of signal words	2
1.2	Safety instructions.....	3
1.3	Intended use	5
1.4	Unintended Use	5
2	General information	6
2.1	Liability and warranty	6
2.2	Copyright protection.....	6
2.3	Declaration of conformity	6
3	Transport, packaging and storage	7
3.1	Delivery Check.....	7
3.2	Packaging	7
3.3	Storage	7
4	Technical data	8
4.1	Technical specifications	8
4.2	List of components of the appliance.....	9
4.3	Functions of the appliance	9
5	Installation and operation	10
5.1	Installation.....	10
5.2	Operation	11
6	Cleaning	15
6.1	Safety Instructions for cleaning	15
6.2	Cleaning.....	15
7	Possible Malfunctions.....	17
8	Disposal.....	17



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

EN

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of signal words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical current

EN

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.

Supervised usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

Safety of Meat Grinder Operation

- Never place any cloths, napkins nor any other objects on or under the appliance during operation to avoid injuries and material damages in the event of fire, electric shock or excessive heat.
- Prior to disassembly/assembly of components, cleaning or moving the appliance into other location, switch it off (turn the ON/OFF switch to "OFF" position) and disconnect it from electric power supply (pull the plug out).
- When assembling the appliance never use force.
- Switch the appliance on only after its complete and correct assembly. To this end, read indications in section 5.2 "Operation".
- Never reach into the filling shaft, neither insert any objects in the outlet of the worm housing when the appliance is connected to mains supply.
- Never put hair, clothing nor kitchen utensils into the filling shaft of the appliance.
- Prior to switching on, make sure that the filling shaft of the appliance is free of any foreign bodies.
- Never keep your face over the filling shaft of the running appliance. During operation, chips of bone scraps or hard ingredients (fruit stones, leaf stalks etc.) may be projected.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.

Safety

- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Grinding of suitable food products (meat, vegetables) with the use of adequate accessories.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Grinding of frozen meat.
- Processing of bones.

2 General information

2.1 Liability and warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

EN

2.2 Copyright protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, packaging and storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical data

4.1 Technical specifications

Name:	Meat grinder FW200
Item No.:	370235
Material:	Stainless steel
Material of grinder funnel:	Stainless steel
Diameter of filling shaft, in mm:	50
Diameter of disks, in mm:	82
Max. output, in kg/h:	200
Power supply:	1.47 kW / 230 V / 50 Hz
Dimensions (W x D x H) in mm:	500 x 435 x 445
Weight in kg:	30,8

EN We reserve the right to implement technical modifications!

Version / Characteristics

- Colour: silver
- Reverse run
- ON/OFF button
- Indicator lights: ON/OFF, forward run, reverse run
- Detachable grinder funnel and grinding unit
- All stainless steel components are dishwasher-safe.
- The set includes: 1 perforated disk (4.5 mm), 1 stainless steel 4-arm blade, 1 pusher

4.2 List of components of the appliance



Fig. 1

- | | |
|--|--|
| 1. Filling shaft | 2. Grinder funnel |
| 3. ON/OFF switch | 4. Housing |
| 5. Adjustable feet (4x) | 6. Worm housing |
| 7. Screw connection for accessories (optionally) | 8. Worm |
| 9. Locking ring | 10. Magnetic insert for accessories (optionally) |
| 11. Pusher | 12. Stainless steel 4-arm blade |
| 13. Perforated disk (4.5 mm) | |

4.3 Functions of the appliance

Meat grinder is intended for grinding meat.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- In order to work without interruptions, keep at least 10 cm of free space from left and right side, as well as from the rear, and 50 cm over the appliance.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Do not use the appliance with an external timer or remote control.

5.2 Operation

Before the First Use

1. Make sure that all components of the appliance and accessories are available and in sound condition.
2. Prior to first use, thoroughly clean the appliance and equipment according to instructions in section **6 “Cleaning”**. Prior to assembly, thoroughly dry all components.
3. Always use the enclosed pusher in order to carefully push meat into the filling hopper and worm housing.

EN

Indications and Advices

- Always process **only fresh** food products. Especially in the case of meat, make sure it is processed directly prior to heat treatment or consumption: ground meat, even if stored in a refrigerator, features a short due date of consumption. Observe provisions of acts of law and regulations in force.
- When processing larger quantities of food products, divide them into portions, and then process them within 2–3 minutes. Switch the appliance off between processing of subsequent portions, so that the appliance does not overheat. Prepare another portion during the break.
- **Never** use the appliance for processing of too hard and too fibrous food products (e.g. fruit stones, shells, nuts, bones, cartilage, thick tendons, etc.). Remove them prior to processing. Parboil hard vegetables prior to grinding.

- Already at the process of meat grinding add necessary seasoning, herbs, onion (e.g. in the case of ground meat or minced meat) in order to obtain a better blend. Mill hard seasoning, e.g. grains of pepper, nutmeg, etc. prior to adding them.
- **Meat grinder is not** intended for grinding highly watery food products.

Assembly

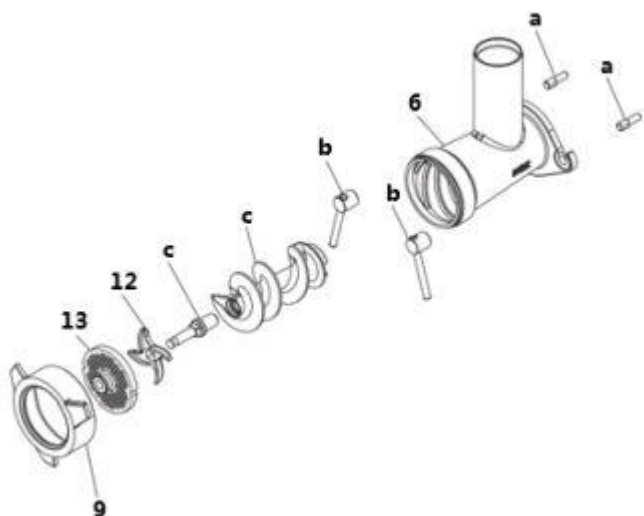


Fig. 2:

1. Use fixing screws (b) to attach the worm housing (6) to the appliance.
2. Insert the worm (c) into the worm housing (6).
3. Insert stainless steel blade (12) onto the screw (c) of the worm (c), making sure that the smooth cutting side is faced outwards.



WARNING!

Injury hazard! Stainless steel blade is very sharp!

Exercise extreme caution when assembling the appliance.

4. Insert the stainless steel blade (12) onto the perforated disk (13).
5. Then screw the locking ring (9) clockwise onto the worm housing (6).

Operating Elements

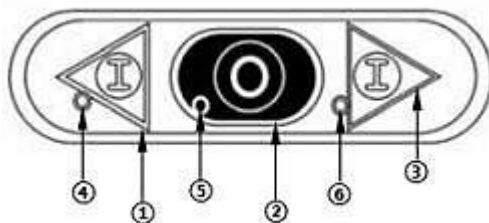


Fig. 3

①	Start button
②	Stop button
③	Reverse run function button
④	Indicator light of forward run function
⑤	Indicator light of power supply
⑥	Indicator light of reverse run function

1. Press Start ① to switch the appliance on.
2. Press Stop ② to switch the appliance off.

3. With the reverse run button ③ you may change the direction of revolutions in order to extract ingredients that stuck in the worm housing. You need to press and hold the button to operate it.
4. Indicator light ④ is lit, when the appliance is processing meat in forward run.
5. Indicator light of power supply ⑤ is lit, when the appliance is plugged into the mains.
6. Indicator light ⑥ is lit, when the appliance is operated in the reverse run.

Start-up



1. When operating the meat grinder pay attention to keep the correct working position of your body (Fig. 4).

EN

Fig. 4

2. Slice the meat into pieces of suitable size.
3. Put the sliced pieces into grinder funnel.
4. Switch the appliance on.
5. When the motor is on, slide the meat portion by portion to the filling shaft.
6. Always use the enclosed pusher; never use your hands nor any other objects to do this.
7. When the meat is processed, screw the locking ring off, turning it counter-clockwise.

6 Cleaning

6.1 Safety Instructions for cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

Appliance Disassembly

The appliance should be disassembled the following way:

- screw the locking ring off, turning it counter-clockwise and remove it,
- remove all components from the worm housing (perforated disk, stainless steel blade, worm shaft),
- remove the pusher from the filling shaft,
- remove grinder funnel from the worm housing,
- turn the locking ring counter-clockwise to screw the worm housing off,
- to end with, remove the worm housing from the appliance,
- remove residues of processed food products from the worm housing and filling shaft.

NOTE: Clean the appliance directly after each use and do not let the residues of food products to dry up on the housing nor any other component of the meat grinder.

Cleaning of the Appliance and Accessories

1. Wash the detachable stainless steel components with a mild cleaning agent. Use a soft sponge or dishwashing brush for cleaning.

NOTE: All detachable stainless steel components are dishwasher-safe.

2. Residues of food products that dried up on the detachable components of the appliance may be easily removed after soaking them for a while in warm water.
3. To end with, rinse the cleaned components in clean water and thoroughly dry.
4. Wipe the motor block and connection cable only with a slightly damp cloth. Make sure that no liquid penetrates ventilation slots at the rear and bottom side of the appliance.
5. Carefully dry the motor block.
6. Leave all cleaned components for ca. 1/2 hour to dry in open air.
7. Lubricate perforated disks, worm and stainless steel blade with a minute amount of edible oil, to prevent them from rusting.

Storing the Appliance

EN

1. If the appliance is to remain unused for a longer period of time, clean it, observing indications in section 6 “**Cleaning**” and store in a dry, clean place, safe from frost and sunlight, and out of the reach of children. Do not place any heavy objects on the appliance.
2. All components should be stored together. Insert the worm shaft, stainless steel blade and perforated disk into the worm housing, screw the locking ring onto the worm housing and secure the worm housing onto the appliance housing, using the locking ring. This way you will avoid injuring yourself with the stainless steel blade and losing components. Put the grinder funnel onto the screw housing, and insert the pusher into the filling shaft.
3. Cover the appliance to protect it against dust and soiling.

7 Possible Malfunctions

Malfunction	Possible reason	Solution
The appliance does not start.	The plug is not properly connected to the socket.	Check the power supply.
	Stop button switched on.	Press the Start button.
	The Start button does not work.	Contact the supplier.
	Check if the installation process was carried out correctly.	See the safety and installation indications.
The appliance does not grind the meat finely enough.	The detachable components are correctly assembled.	Check the assembly.
	The blade is not inserted correctly.	Re-assemble the components following the indications.

EN

8 Disposal

Electrical appliance

	Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.
---	---

Electrical appliances should be returned to designated collection points.