



Lohstr. 13 - 58675 Hemer / Postfach 4063 - 58663 Hemer
phone: +49 2372 9274-0 fax: +49 2372 9274-33
GERMANY

Operating Manual

Juice Maker

art.-no. 05-70195

www.neumaerker.de

TO DISASSEMBLE THE JUICE EXTRACTOR PROCEED AS FOLLOWS

- 1) Release the locking clips (6) lifting them up upwards.
- 2) Take off the cover (3), extract the grating disc (4) and wash with soap in lukewarm water, rinse and dry immediately.
- 3) Remove the pulp tray (5) and the juice bowl (7) and rinse under running water.

Warning: the grating disc is extremely sharp.

TO RE-ASSEMBLE THE JUICE EXTRACTOR PROCEED AS FOLLOWS

- 1) Replace the pulp tray (5) on the motor base (8).
- 2) Replace the grating disc (4) and press it down firmly.
- 3) Place the cover (3) on the pulp tray (5) and secure the clips (6) by applying slight pressure at their base.
- 4) Replace the juice bowl (7).

HOW TO USE THE APPLIANCE

- 1) Slide the cover of the cord storage recess (11) upwards and remove the supply cord.
 - 2) Wash the fruit or vegetables thoroughly. Remove stones and pips, and peel the fruit or vegetables.
 - 3) Cut the food into small pieces and insert them into the chute (2).
 - 4) Connect the cord to the mains socket, making sure that the voltage indicated on the appliance corresponds to your household mains voltage (see technical data plate).
 - 5) Make sure that the juice bowl (7) is in place.
 - 6) Press switch (9) and switch on the extractor. The indicator light (10) will also come on.
 - 7) Insert the food in the chute and press down lightly with the food pusher (1).
 - 8) Never use your fingers to push the food.
 - 9) Food may be inserted continually into the chute without having to switch off the motor.
 - 10) When the operation is completed press switch (9) again. The indicator light (10) will go out.
- Disconnect the plug from the mains socket.

N.B.: Many kinds of fruit and vegetables can be prepared without having to clean the extractor each time.

CLEANING THE JUICE EXTRACTOR

- 1) After disconnecting the plug:
 - disassemble the extractor and wash each part in soapy water - except the motor base (8).
 - rinse the grating disc (4) under running water, making sure that both the upper and lower parts are thoroughly clean. To facilitate cleaning, we recommend use of a non-metal brush to avoid damaging the grating disc (4).
 - The plastic parts of the appliance should be washed only in the upper tray of a dishwasher.
- 2) **Important!** Never immerse the motor base (8) in water or in any other liquid. Clean it with a damp cloth.
- 3) Some vegetables, such as carrots and spinach beet may stain the plastic parts of the extractor.
 - To remove stains use bicarbonate, proceeding as follows:
 - rinse with water
 - prepare a solution of bicarbonate and water
 - rub the stained parts with the solution
 - rinse and dry.

SOME TIPS FOR GETTING THE BEST RESULTS FROM YOUR JUICE EXTRACTOR

This appliance extracts juice from fruit and vegetables.

PREPARING THE FRUIT AND VEGETABLE

- Always choose very fresh fruit and vegetables.
- Wash the fruit and vegetables carefully, then remove any hard or fibrous parts, in particular: the core (pineapple), leaves (celery), stones (peaches, prunes, apricots, cherries), and pips, when abundant (melons). Use only the hearts of artichokes.
- Not all fruit and vegetables need peeling, particularly when they have a smooth, thin skin as for example apples, pears, peaches, apricots and tomatoes.
- Good juice cannot be obtained from soft fruits such as bananas, papayas, mangoes, avocados, aubergines, figs, etc.
- To obtain good juice we recommend the use of very hard fruit.

DRINKING AND PRESERVING JUICES

IMPORTANT: All juices should be consumed immediately. They oxidise very rapidly in contact with the air and this can change the flavour and colour.

- To reduce oxidation and the consequent change in colour, add a few drops of lemon juice immediately after preparation (particularly with carrots, apples and pear juice).
- If you need to prepare juice two or three hours before serving, as soon as it is ready cover the bowl of prepared juice and keep it in the refrigerator.

ATTENTION: Never preserve extracted juice for more than 24 hours. A small quantity of pulp in the extracted juice is normal and enhances its flavour and nutritional value.

PULP RECOVERY

The JUICE EXTRACTOR, thanks to its separator, enables recovery of pulp which can be used as a base for the preparation of sauces, soup, jam, sweets, etc.

In this case cook the pulp over low heat for about 30 minutes.

TECHNICAL DATA

Voltage 220-230 V -
Frequency 50 Hz
Power 350 W

ATTENTION

- This kitchen appliance is for household use only and should not be used for commercial or industrial purposes.
- Never immerse the motor base (8) in water.
- All repairs must be carried out exclusively by qualified technicians at an authorised Service Centre.

This appliance conforms with EEC Regulation 67/308 and M.D. 13.4.B9 concerning radio interference.

Gerätebeschreibung:

- 1) Stopfer
- 2) Einfüllschacht
- 3) Gerätedeckel
- 4) Reibscheibe
- 5) Tresterbehälter
- 6) Verriegelungshebel
- 7) Saftbehälter
- 8) Motorblock
- 9) Ein/Aus-Schalter
- 10) Kontrolllampe
- 11) Klappe Kabelraum

Les accessoires:

- 1) Pousse-aliments
- 2) Orifice de remplissage
- 3) Couvercle
- 4) Disque râpeur
- 5) Bac à pulpe
- 6) Ailettes de blocage
- 7) Bol pour le jus
- 8) Bloc moteur
- 9) Interrupteur On/Off
- 10) Témoins lumineux
- 11) Volet du compartiment prévu pour l'enrouleur de cordon

Accessories:

- 1) Food pusher
- 2) Food chute
- 3) Cover
- 4) Grating disc
- 5) Pul tray
- 6) Locking clips
- 7) Juice bowl
- 8) Motor base
- 9) On/Off switch
- 10) Indicator light
- 11) Cord storage recess

Gli accessori:

- 1) Premicibo
- 2) Imboccatura per il cibo
- 3) Coperchio
- 4) Disco grattugia
- 5) Vassoio polpa
- 6) Alette di chiusura
- 7) Recipiente per il succo
- 8) Base motore
- 9) Interruttore Acceso/Spento
- 10) Lampadina spia
- 11) Sportello del vano avvolgicavo