

Customer freezing mode temperature adjustment (-15~-24), freezing mode and cooling mode conversion - CAREL thermostat adjustment steps

Applicable to PJEZSNH000 model Hiron cold chain technology center 231201

First: freezing mode temperature adjustment (-15~-24)

Step 1:Unlock

- 1.After power up,screen display current temperature.
- 2.Press and hold the "set" key and release it when "PS" appears.
- 3.Press the "set" key, "0" appears.
4. Press "Up" key to adjust number to "22".
- 5.Press "set" key to appear "PS".



Step 2: Adjust parameters

- 1.Press "Up" key to find "r1" and press "set" key; Press "Down" key to adjust number to "-24" and press "set" key to return parameters.



- 2.Press "Up" key to find "r2" and press "set" key. Press "Down" key to adjust number to "-15" and press "set" key to return parameters.



3. Press "Up" key to find "AH". Press "Up" key to adjust number to "-7" and press "set" key to return parameters.



4. Press "Up" key to find "H2 ". Press "Up" key to adjust number to "1" and hold down "set" key for 5s to return to interface.



Step 3: Adjust setting temperature

1. Long press "set" key and release it when "-22" appears (this temperature is the setting temperature).
2. Press "Up" key to adjust the number to "-15 to -24".
3. Press the "set" key to exit interface.





Second: Adjust cooling mode to freezing mode (-15~-24)

Step 1: Unlock (same as above)

Step 2: Adjust parameters

1. Press "Up" key to find "-C1" and press "set" key. Press "Up" key to adjust number to "4" and press "set" key to return parameter.



2. Press "Up" key to find "r1" and press "set" key. Press "Down" key to adjust number to "-24" and press "set" key to return parameters.



3. Press "Up" key to find "r2" and press "set" key. Press "Down" key to adjust number to "-15" and press "set" key to return parameters.



4. Press "Up" key to find "AL". Press "Up" key to adjust number to "-40" and press "set" key to return parameters.



5. Press the "Up" key to find "AH"; Press "Up" key to adjust number to "-7" and press "set" key to return parameters.



6. Press "Up" key to find "H2"; Press "Up" key to adjust number to "1" and hold down "set" key for 5s to return to interface.




Step 3: Adjust setting temperature (same as above)

Third: Adjust freezing mode(-15~-24) to cooling mode

Step 1: Unlock (same as above)

Step 2: Adjust parameters

1. Press "Up" key to find "-C1" and press "set" key. Press "Up" key to adjust number to "3" and press "set" key to return parameters.

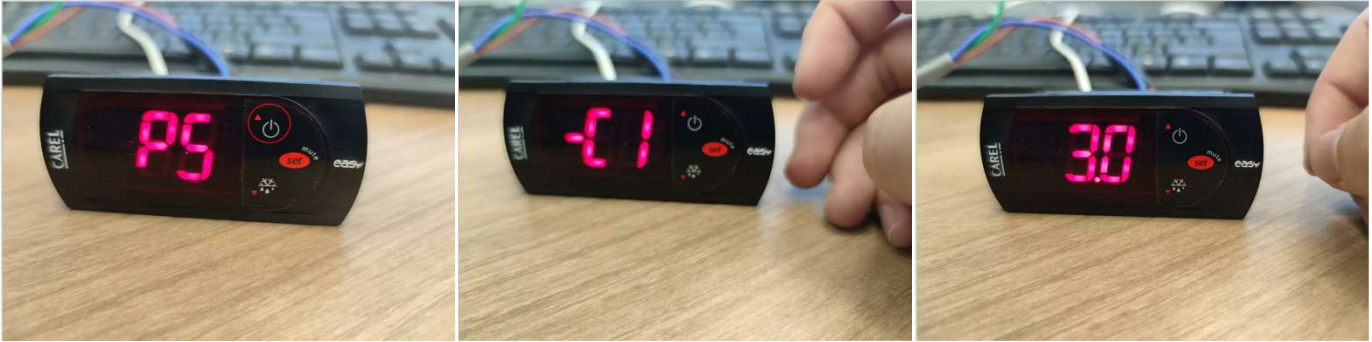

2. Press "Up" key to find "r1" and press "set" key. Press "Down" key to adjust number to "0" and press "set" key to return parameters.



3. Press "Up" key to find "r2" and press "set" key. Press "Down" key to adjust number to "8" and press "set" key to return parameters.



4. Press "Up" key to find "AL". Press "Up" key to adjust number to "-8" and press "set" key to return parameters



5. Press "Up" key to find "AH". Press "Up" key to adjust number to "16" and press "set" key to return the parameters.



6. Press "Up" key to find "H2"; Press "Up" key to adjust number to "1" and hold down "set" key for 5s to return to interface.



Step 3: Adjust the setting temperature

1. Long press the "set" key and release it when "-22" appears (this temperature is the setting temperature).
2. Press "Up" key to adjust number to "3".
3. Press "set" key to exit interface.

