



Virtus[®] Group Service



Virtus Group GmbH

Hüserstraße 53
59075 Hamm / Germany

+49 (0) 23 81 / 973 71- 0
+49 (0) 23 81 / 973 71- 88

www.virtusnet.de

ELECTRIC GRILLS

CONTENTS

A	GENERAL INFORMATION	Page 2
A3	TRANSPORTATION	Page 4
A4	UNPACKING	Page 4
B	INSTALLATION	Page 4
C	SAFETY INSTRUCTIONS	Page 5
D	OPERATION.....	Page 6
E	CLEANING & MAINTENANCE	Page 7
F	TROUBLESHOOTING.....	Page 8
G	SPARE PART LIST- EXPLODING DRAWING	Page 9
H	ELECTRIC CIRCUIT SCHEMA	Page 21

A GENERAL INFORMATION

Before installing the appliance, read operation and maintenance instructions carefully. Wrong installation and part changing may damage the product or may cause injury on people. These are not in our company's responsibility to damage the appliance intentionally, negligence, detriments because of disobeying instructions and regulations, wrong connections. Unauthorized intervention to appliance invalidates the warranty.

1. This instruction manual should be kept in a safe place for future reference.
2. **Installation should be made in accordance with ordinances and security rules of that country by a qualified service personnel.**
3. This appliance has to be used by trained person.
4. Please turn off the appliance immediately in the event of malfunction or failure. The appliance should be repaired only by authorized service personnel. Please demand original spare part.

A3 TRANSPORTATION

*This appliance can not be moved by hand from area to area.It must be moved on pallet with forklift truck.

A4 UNPACKING

*Please unpack the package according to the security codes and ordinances of current country and get rid from the pack.Parts which contacts with food are produced by stainless steel.All plastic parts are marked by material's symbol.

*Please check that all the parts of appliance had come completely and if they are damaged or not during the shipping.

B INSTALLATION

*Please place the product to straight and sturdy ground,please take necessary steps against possibility of overturn.

*Technician who will serve for installation and service for the appliance must be professional on this subject and must have installation and service licenses by the company.

*Connection to Electric Power Supply must be done by authorized person.

*Please be sure that the voltage connected to appliance must be equal with the voltage which is on appliance's label.



This appliance must be connected to an earthed outlet in accordance with safety rules and standards.

*Appliance's earthing must be connected to earthing line on panel which is nearest to electric installation.

*Connection to the main fuse and leak current fuse must be done in accordance with the current regulations.

*If the location where Electric Grills placed is covered with nonflammable heat insulation material,the distance between them must be 5 cm.Otherwise it should be at least 20 cm.The appliance shouldn't be operated under chimney hood.


ELECTRIC GRILLS

C SAFETY INSTRUCTIONS

-  *Do not use the appliance in insufficient lighted place.
-  *Do not touch the moving attachments while the appliance operates.
-  *Do not install the appliance in the presence of flammable or explosive materials.
-  *Do not operate the appliance when the machine is dry.
-  *Do not load so less or more than appliance's capacity.
-  *Do not attempt to use the appliance without suitable protective equipments.
-  *Because of any reason if there is a fire or flame flare where the appliance is used, turn off all gas valves and electric contactor switch quickly and use fire extinguisher. Never use water to extinguish the fire.
-  *All the damages because of not having earthing connection will not be on warranty.
-  *Do not put watery materials on the grill. Otherwise oil splashes may cause serious burn.

D OPERATION

*Control Panel;

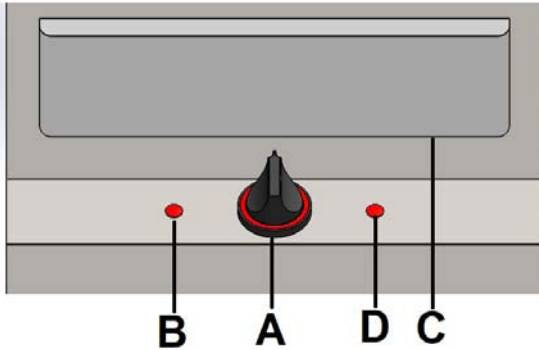

- A :T erature adjustment knob
- B : Energy Warning Lamp
- C : Oil drawer
- D : Indicator light

*Operating;

- Plug in the grill.
- In order to operate the grill,switch (I) position.
- Operate the grill when it is ty fort he first use.Then it will be ready for use.
- In order to set the appliance's t erature,switch the thermostat to desired t erature.
- When the thermostat switch is turned,the heaters start to operate.and indicator lamp on switch signals as it operates.During the operation of heaters the thermostat steps in and signal lamp becomes off if the grill is of.
- Put the materials that will be cooked on the grill,while it is being heated.
- While the cooking is going on at grill be sure that the used oil is accumulated at oil drawer.
- After the operation is completed switch to (0) position.

ELECTRIC GRILLS

E CLEANING & MAINTENANCE

➤ **CLEANING AND MAINTENANCE AFTER EVERY USE**

- Always turn off the appliance and disconnect from the power supply before cleaning.
- Clean the outer surface of the appliance with a wet cloth and chrome shiner.
- Do not use abrasive cleaning chemicals as these can leave harmful residues.
- Do not clean the appliance by spraying water directly, otherwise electric motor may get damaged.
- Clean the grill with suitable scraper after every use.

➤ **PERIODIC CLEANING AND MAINTENANCE**

- Maintenance should be done by qualified person.
- Get the periodic maintenance of the appliance once in every 15 days.
- Clean the oil drawer in periodic times. For this fill the oil drawer with water and heat it. This process will help to clean frozen and stuck oil.
- Maintenance of the appliance's contactor should be done by compressed air according to frequency of use.

F TROUBLESHOOTING

THE APPLIANCE DOESN'T OPERATE

1. Check if the appliance is plugged in.
2. Check the electrical connections and voltage.
3. Check the fuse if it is on or not.

THE APPLIANCE DOESN'T COOK WELL

1. Check if the appliance is operated at suitable temperature or not.


THE APPLIANCE STOPPED

1. The appliance can stop due to low voltage. In this situation check the voltage.

- If cooking at electric grills is not done at suitable quality
- If any function of security doesn't work
 - Do not use the appliance.

***If these problems are still going on, contact with our authorized services.**

G SPARE PART LIST-EXPLODING DRAWING

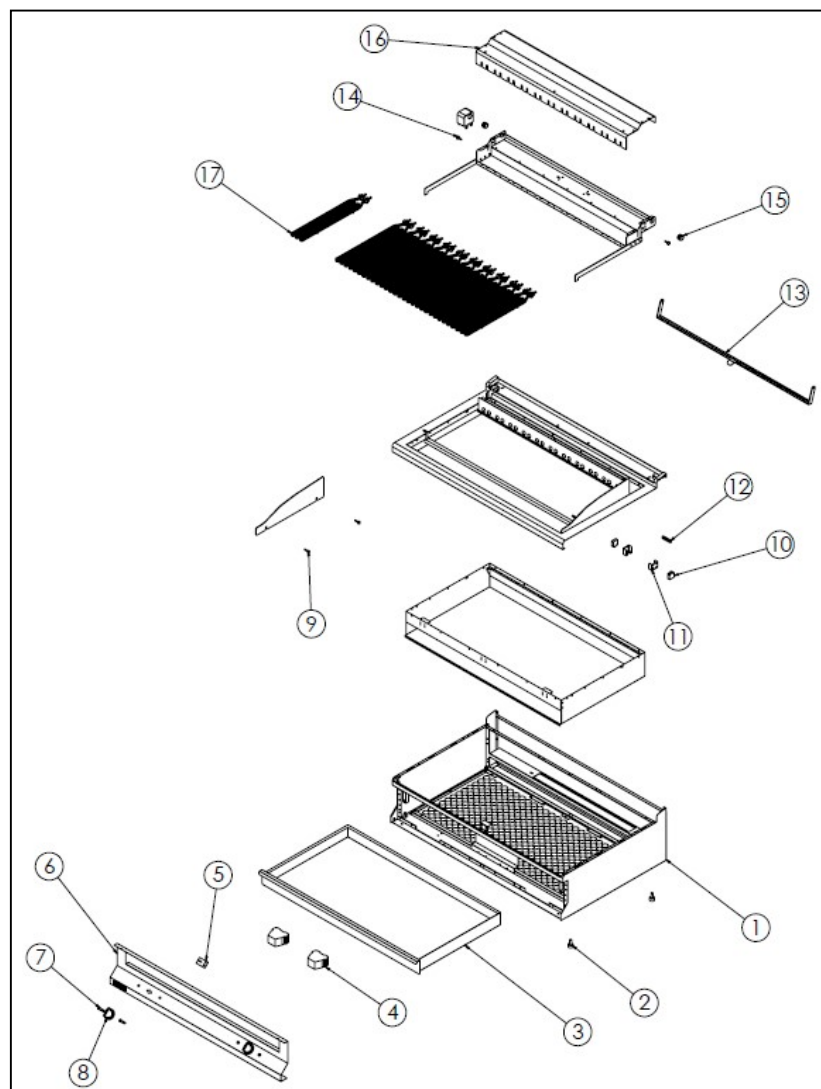


ELECTRIC GRILLS

G SPARE PART LIST-EXPLODING DRAWING

NO	PRODUCT NAME	P.CODE
1	BASE	Y.7LE030.001
2	FEET	Y.7LE030.002
3	OIL COLLECTOR	Y.7LE030.003
4	01 DLEM CONTACTOR	Y.7LE030.004
5	REGUATOR	Y.7LE030.005
6	FRONT PANEL SHEET	Y.7LE030.006
7	INDICATOR LAMP	Y.7LE030.007
8	BUTTON	Y.7LE030.008
9	WALLING PIN	Y.7LE030.009
10	SWITCH	Y.7LE030.010
11	SWITCH SHEET	Y.7LE030.011
12	HEATING ELEMENT CONECTOR	Y.7LE030.012
13	HEATING ELEMENT HANGING ASSY.	Y.7LE030.013
14	PRESSING PIN	Y.7LE030.014
15	HINGE BUSHING	Y.7LE030.015
16	HEATER CLOSING SHEET	Y.7LE030.016
17	HEATING ELEMENT	Y.7LE030.017

ELECTRIC GRILLS

H ELECTRIC CIRCUIT SCHEMA

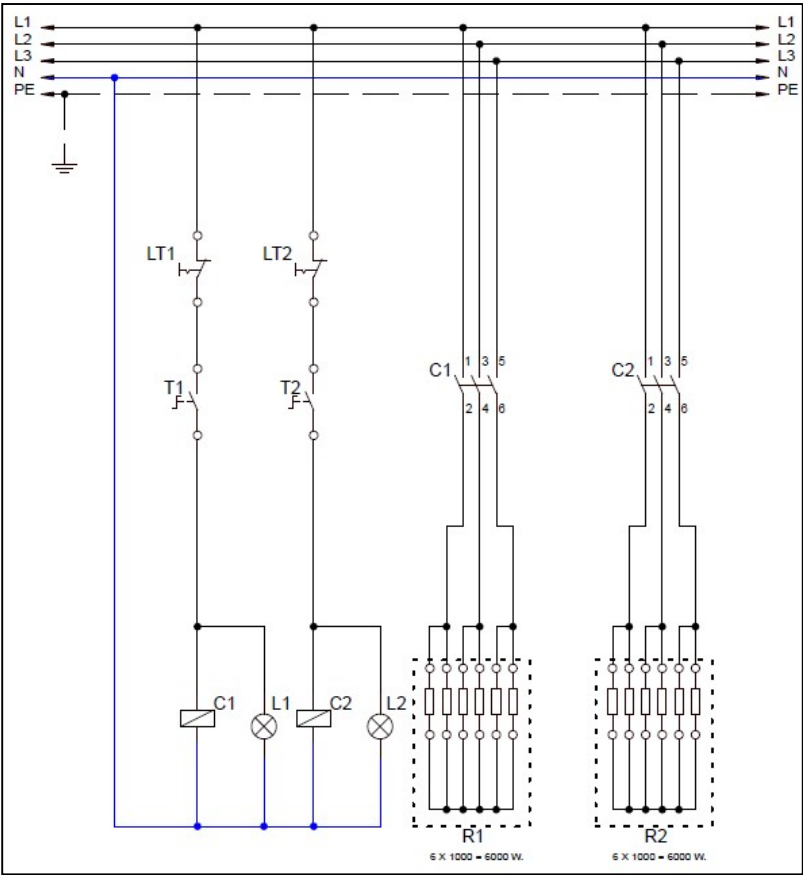

T1.T2	LT1-LT2	C1.C2	L1.L2	R1.R2
Thermostat (50-180°C)	Limit thermostat 360°	Contactor	Thermostat signal lamp	Resistance