

# Virtus<sup>®</sup> Group Service



Virtus Group GmbH

Hüserstraße 53  
59075 Hamm / Germany

+49 (0) 23 81 / 973 71- 0  
+49 (0) 23 81 / 973 71- 88

[www.virtusnet.de](http://www.virtusnet.de)

# CONTENTS

---

|          |                                                 |                |
|----------|-------------------------------------------------|----------------|
| <b>A</b> | <b>GENERAL INFORMATION .....</b>                | <b>Page 2</b>  |
| A1       | PRODUCT DESCRIPTION .....                       | Page 3         |
| A2       | TECHNICAL INFORMATION .....                     | Page 3         |
| A3       | TRANSPORTATION .....                            | Page 4         |
| A4       | UNPACKING .....                                 | Page 4         |
| <b>B</b> | <b>INSTALLATION .....</b>                       | <b>Page 4</b>  |
| <b>C</b> | <b>SAFETY INSTRUCTIONS .....</b>                | <b>Page 5</b>  |
| <b>D</b> | <b>OPERATION .....</b>                          | <b>Page 6</b>  |
| <b>E</b> | <b>CLEANING &amp; MAINTENANCE .....</b>         | <b>Page 7</b>  |
| <b>F</b> | <b>TROUBLESHOOTING .....</b>                    | <b>Page 8</b>  |
| <b>G</b> | <b>SPARE PART LIST- EXPLODING DRAWING .....</b> | <b>Page 9</b>  |
| <b>H</b> | <b>ELECTRIC CIRCUIT SCHEMA .....</b>            | <b>Page 11</b> |

A

GENERAL INFORMATION

---

Before installing the appliance, read operation and maintenance instructions carefully. Wrong installation and part changing may damage the product or may cause injury on people. These are not in our company's responsibility to damage the appliance intentionally, negligence, detriments because of disobeying instructions and regulations, wrong connections. Unauthorized intervention to appliance invalidates the warranty.

1. This instruction manual should be kept in a safe place for future reference.
2. Installation should be made in accordance with ordinances and security rules of that country by a qualified service personnel.
3. This appliance has to be used by trained person.
4. Please turn off the appliance immediately in the event of malfunction or failure. The appliance should be repaired only by authorized service personnel. Please demand original spare part.

A1

PRODUCT DESCRIPTION

---

\*The Professional Electric Stock Pot Stove ,that provides high efficiency has been designed to be used in industrial kitchens.

| Product Code | Dimensions (mm) | Weight (kg) | Packaging Dimensions (mm) |
|--------------|-----------------|-------------|---------------------------|
| AHB0004      | 600x800x500     | 60          | 662x860x670               |

A2

TECHNICAL INFORMATION

---

| Product Code | Electric Inlet | Cable (mm²) | Power (KW) | Fuse (A) |
|--------------|----------------|-------------|------------|----------|
| AHB0004      | 220-380        | 3x2,5       | 4          | 32       |

## **A3      TRANSPORTATION**

---

\*This appliance can not be moved by hand from area to area. It must be moved on pallet with forklift truck.

## **A4      UNPACKING**

---

\*Please unpack the package according to the security codes and ordinances of current country and get rid from the pack. Parts which contacts with food are produced by stainless steel. All plastic parts are marked by material's symbol.

\*Please check that all the parts of appliance had come completely and if they are damaged or not during the shipping.

## **B      INSTALLATION**

---

\*Please place the product to straight and sturdy ground, please take necessary steps against possibility of overturn.

\*Technician who will serve for installation and service for the appliance must be professional on this subject and must have installation and service licenses by the company.

\*Connection to Electric Power Supply must be done by authorized person.

\*Please be sure that the voltage connected to appliance must be equal with the voltage which is on appliance's label.



This appliance must be connected to an earthed outlet in accordance with safety rules and standards.

\*Appliance's earthing must be connected to earthing line on panel which is nearest to electric installation.

\*Connection to the main fuse and leak current fuse must be done in accordance with the current regulations.

\*If the location where electric stock pot stove placed is covered with nonflammable heat insulation material, the distance between them must be 5 cm. Otherwise it should be at least 20 cm. The appliance shouldn't be operated under chimney hood.

## C SAFETY INSTRUCTIONS

---



\*Do not use the appliance in insufficient lighted place.



\*Do not touch the moving attachments while the appliance operates.



\*Do not install the appliance in the presence of flammable or explosive materials.



\*Do not operate the appliance when the machine is empty.



\*Do not load so less or more than appliance's capacity.



\*Do not attempt to use the appliance without suitable protective equipments.



\*Because of any reason if there is a fire or flame flare where the appliance is used, turn off all gas valves and electric contactor switch quickly and use fire extinguisher. Never use water to extinguish the fire.




\*All the damages because of not having earthing connection will not be on warranty.

## D OPERATION

---

### \*Control Panel;

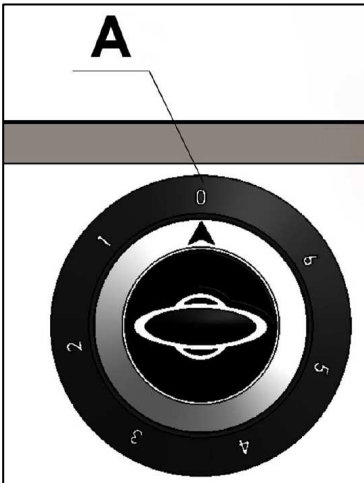

A : Thermostat Button

### \*Operating;

- Plug in the appliance.
- Put the cooker on the range.
- Adjust heat setting buttons to desired temperature.
- The range reaches the desired temperature and starts to operate.
- When the range's temperature reaches to indicator temperature, the buttons on indicator lamp become off due to having thermostat.
- When the range's temperature is reduced, indicator lamp signals and range's temperature reaches to desired temperature again.
- After operation is completed, switch heat setting buttons to (0) position and unplug the appliance.

## **E      CLEANING & MAINTENANCE**

---

### **➤ CLEANING AND MAINTENANCE AFTER EVERY USE**

- Always turn off the appliance and disconnect from the power supply before cleaning.
- Clean the outer surface of the appliance with a wet cloth and chrome shiner.
- Do not use abrasive cleaning chemicals as these can leave harmful residues.
- Do not clean the appliance by spraying water directly, otherwise electric motor may get damaged.

### **➤ PERIODIC CLEANING AND MAINTENANCE**

- Maintenance should be done by qualified person.
- Get the periodic maintenance of the appliance once in every 15 days.
- Check the electric connections of the heater in periodic times.

## F TROUBLESHOOTING


---

|                                 |                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| THE APPLIANCE DOESN'T OPERATE   | <ol style="list-style-type: none"><li>1. Check if the appliance is plugged in.</li><li>2. Check the electrical connections and voltage.</li></ol> |
| THE APPLIANCE DOESN'T COOK WELL | <ol style="list-style-type: none"><li>1. Check if it is operated at required heat or not.</li></ol>                                               |
| THE APPLIANCE STOPPED           | <ol style="list-style-type: none"><li>1. The appliance can stop due to low voltage. In this situation check the voltage.</li></ol>                |

|                                                                                                                                                                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>• If cooking at electric stock pot stove is not done at suitable quality</li><li>• If any function of security doesn't work<ul style="list-style-type: none"><li>➤ Do not use the appliance.</li></ul></li></ul> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**\*If these problems are still going on, contact with our authorized services.**


## G SPARE PART LIST-EXPLODING DRAWING

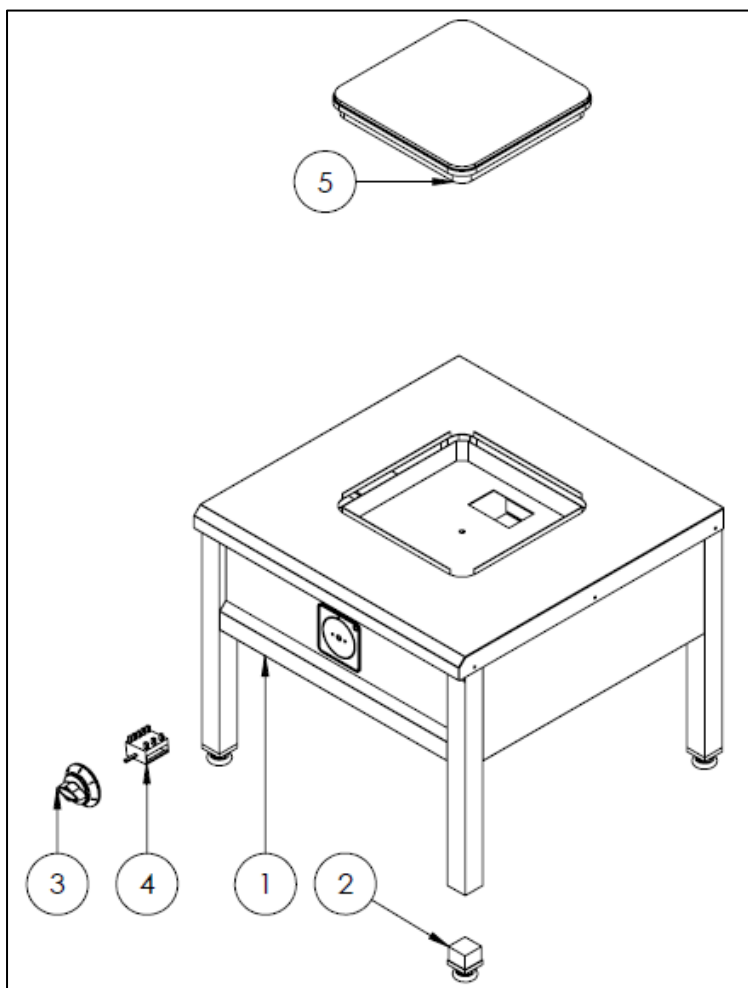

| NUMBER | PRODUCT NAME | PRODUCT CODE      |
|--------|--------------|-------------------|
| 1      | BASE FRAME   | Y.EMP.YRE.60.1001 |
| 2      | FEET         | Y.EMP.YRE.60.1002 |
| 3      | BUTTON       | Y.EMP.YRE.60.1003 |
| 4      | SWITCH       | Y.EMP.YRE.60.1004 |
| 5      | HEATER       | Y.EMP.YRE.60.1005 |

H

ELECTRIC CIRCUIT SCHEMA

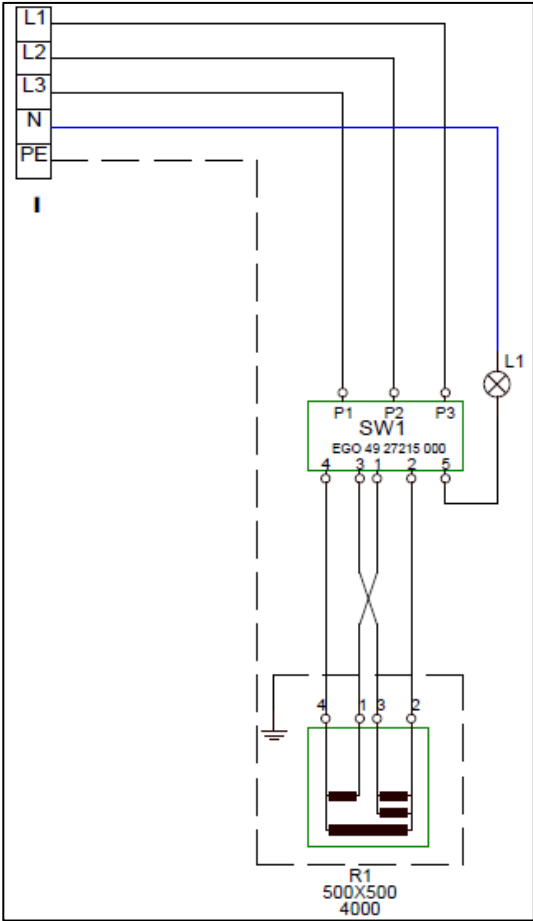

| I        | SW1              | R1                             | L1          |
|----------|------------------|--------------------------------|-------------|
| Terminal | 6 Gradual Switch | Plate Resistance<br>4000W 380V | Signal lamp |