

Virtus[®] Group Service



Virtus Group GmbH

Hüserstraße 53
59075 Hamm / Germany

+49 (0) 23 81 / 973 71- 0
+49 (0) 23 81 / 973 71- 88

www.virtusnet.de

Manual

Usage:

1. Before first use, please check whether the power supply is in compliance with the rated in the instruction. Power supply cord must plug into an independent-control outlet which is with leakage protection and overland protection.
2. Open top cover of the water boiler and fill the tub with water before turn on the power.
3. Turn on the power and pilot light is glowing, after the water has boiled, adjust the temperature control to the desired position, and the temperature of water shall be kept.
4. Clean water scale in the tub regularly.
5. It can not be cleaned by water directly.

WARNING: ALL MAINTENANCE WORKS SHOULD BE CARRIED OUT AFTER THE POWER SUPPLY HAS BEEN CUT OFF.

WARNING: THIS EQUIPMENT MUST BE USED INDOORS.

WARNING: USING ENVIRONMENT MUST BETWEEN -5°C AND 40°C.

WARNING: THE LEVEL OF WATERPROOF OF THIS EQUIPMENT IS IPX1.IT IS NOT SUITABLE FOR INSTALLING WHERE THERE MAY BE WATER SPLASH.

WARNING: THE EQUIPMENT MUST BE USED IN A HORIZONTAL POSITION.

WARNING: IF THE POWER CORD IS DAMAGED, IT MUST BE CHANGED BY THE MANUFACTURER OR ITS MAINTENANCE DEPARTMENT OR SIMILAR PROFESSIONALS.

Note:

1. The water boiler must be located on the circumstance of air circulating, the air humidity not more than 85%.
2. Add water into the tub in time if the water level is down.
3. If the temperature limiter can not cut off automatically after the water has boiled, please reversely adjust the temperature control knob for inching until

the temperature limiter can automatically cut off after the water has boiled.

- 4. If boiled water boil over 3 minutes ceaselessly, user must be shut down power to take a check.**
- 5. If trouble shooting appears, don't unpack the machine yourself because all service should be performed by an authorized agency.**
- 6. Do not fiercely pull the power supply cord in order to prevent the power supply cord damaged and electric leakage caused.**
- 7. Unplug the power supply cord if not use it for a long time.**

CAUTION: THE WATER BOILER MUST BE PROPERLY GROUNDED.