

Operating Instructions SARO Soup-Kettle



Model	SKZ-12
Order no.	175-1005

1. General Information

- Carefully read these operating instructions through as they contain important information for the safe and correct use of the appliance.
- It is advisable to keep the operating instructions in a place where you have them always ready to hand.
- If you pass the appliance on to a third party, these operating instructions should be handed on.
- As soon as you have unpacked the soup-kettle, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- Do not throw away the packing. You might need it for storage of the appliance, when moving or in case you need to send it back for repair purposes. The appliance can be transported surely only in the original packing. If a keeping of the packing is not possible, then dispose the packing material according to the local regulations. All the packaging items (plastic bags, cardboard, polystyrene foam etc.) must not be left within reach of children, in that they are potential sources of danger.
- The soup-kettle may only be used for the intended purpose, so for keeping warm of soups, glow wine or liquid meals. Improper use can cause damages and lead to the loss of the warranty.
- In case of fault and/or malfunction, switch the appliance off. Pull the power plug and inform your dealer. He will carry out the repair with original spare parts.
- Please observe the local regulations concerning accident prevention and disposal.
- The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions. Apart from this, if these instructions are not observed, the safety of the appliance is no longer guaranteed.

2. Safety Notes

- The appliance may be connected to a grounded socket only. Do not connect any other appliance to the same socket. The outlet must be easily accessible, so that the plug can easily be removed in the case of an emergency.
- **IMPORTANT**
The soup-kettle may only be switched on, after you have poured water into the soup-kettle (0,6 litres of warm water). For this take out the interior pot before. Never overfill with water, otherwise the water will overflow, if you put the interior pot into the soup-kettle.
- The appliance has an overheating protection, however dry heating can cause damage. In such a case the warranty does no longer exist.
- Always pull on the plug and not on the cable, if you pull the plug from the socket. Switch off the appliance before.
- The cable must not hang over table edges and/or sharp edges. It also must not come into contact with the hot appliance surface or with water.
- Regularly check the cable. If it is damaged, it must be exchanged by a qualified specialist.
- Do not leave the oven unattended while it is in use. Children are not able to realise dangers when handling electronic appliances.
- Do not move the soup-kettle during operating.
- Before each cleaning session or repair, switch off the appliance and allow it to cool. Pull the plug from the socket. The appliance must not be hosed down with water or placed into water.
- Pull the plug from the socket after each use.
- Do not attempt to repair the appliance by yourself. Repairs may only be undertaken by a qualified specialist.
- If you do not like to use the appliance for a long time, then pull the power plug from the socket, clean the appliance and cover it with a air-permeable material.

3. Before the first use and operation

- Unpack the appliance carefully.
- Place the appliance on a flat, stable and heat-resistand surface.
- Take out the interior pot and clean everything with a damp cloth and something detergent (see „Cleaning“). Afterwards dry everything. Make sure, that the cable and the plug not become wet.
- Pour 0,6 litres water into the appliance.
- Set the interior pot with the contents into the appliance.

NOTE

Remember the soup-kettle is constructed for keeping soups warm and not for cooking. Give only preheated products into the interior pot.

- Put the plug into the plug socket.
- Turn the thermostat switch on the desired temperature. The temperature range is between approx. 50°C and 95°C. With reaching the selected temperature the appliance switches off automatically. The heating-up time depends on the outside temperature and the quantity of the contents.
- In order to switch the appliance off, turn the temperature toggle on the position OFF.
- Pull the plug from the plug socket.
- Clean everything carefully.

4. Technical data

- | | |
|----------------------------------|-----------------------------------|
| • Contents of interior pot | 10 Liter |
| • Temperature range (adjustably) | approx. 50° to approx. 95° |
| • Power connection | 230 Volt / 50 Hz / 1 Ph. / 0,4 kW |
| • Dimensions | Ø 330 mm - Height 360mm |
| • Weight | 4,75 kg |

5. Cleaning

- It is essential to have the appliance cleaned after each use.
- Before each cleaning session, the appliance has to be switched off and the plug has to be pulled out of the socket.
- Allow the oven to cool.
- Take out the interior pot and empty it.
- Clean the interior pot and the lid with a commercial detergent. Both can also be cleaned in the dish-washer.
- Pour the water out of the appliance.
- Clean the interior and exterior surfaces with a soft, damp, warm cloth and a detergent. Wipe off and dry everything carefully. The cleaning cloth must not be wet, but only damp. Do not use aggressive detergents, steel wool or abrasive sponges. The soup-kettle may not be hosed down with water or placed into water.
- Put the interior pot back into the soup kettle.

6. Waste Disposal



For the disposal of the device follow the regulations applicable in your country.

7. Structure

