

# USER MANUAL

## REMOTE CONTROLLER



©2024 CADEL srl | All rights reserved - Tutti i diritti riservati

 
## REMOTE CONTROL WITH ROOM THERMOSTAT

# SUMMARY

1	FEATURES .....	2
2	REMOTE CONTROL CONFIGURATION .....	3
3	REMOTE CONTROL 1 MENU .....	3
4	REMOTE CONTROL 2 MENU .....	4

# 1 FEATURES

- The stove can be controlled by remote control with thermostat code 5024010 (optional).
- 3 AAA nickel cadmium type batteries (1.5 Volt) are required for operation.
- Operating temperature 0°C / 50°C.
- BLE 2.4 GHz radio signal.
- Remote control with integrated room sensor with 0.5°C resolution.

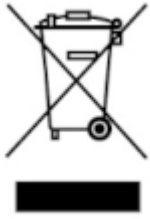

Used batteries contain metals which are harmful for the environment; they must therefore be disposed of separately in the special containers.

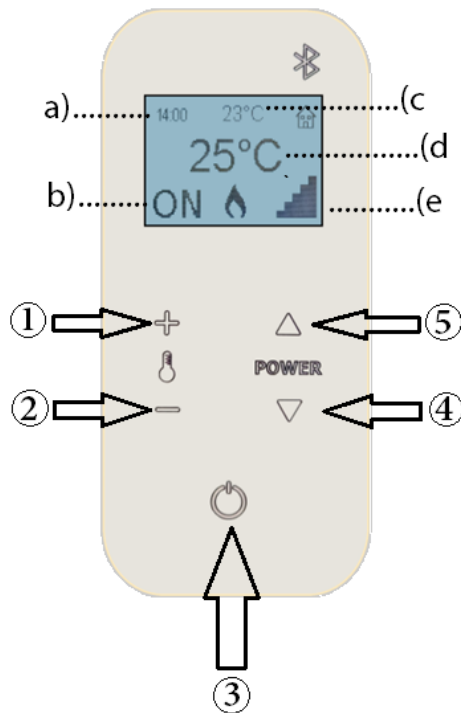


Fig. 1 - Remote control with thermostat

LEGEND	Fig. 1
<b>a</b>	Time
<b>b</b>	Status
<b>c</b>	Ambient temperature
<b>d</b>	Set temperature
<b>e</b>	Power
<b>1</b>	Increase the desired temperature (5-35 °C)
<b>2</b>	Decrease the desired temperature (35-5 °C)
<b>3</b>	On / off
<b>4</b>	Decrease power level from 5 to 1
<b>5</b>	Increase the power level from 1 to 5
<b>3 + 4</b>	To access the menu, press key 3 and 4 simultaneously for a few seconds

The remote control communicates with the stove's display and, thanks to the integrated room sensor, can manage the room temperature like a thermostat.

The remote control can:

- Switch the stove on and off.
- Set the desired temperature by pressing **+** and **-** (1 ; 2) .
- Set the desired power by pressing the power increase or decrease key (4 or 5).
- Access the remote control menu by simultaneously pressing the power on and power off keys for a few seconds (3 + 4).

## 2 REMOTE CONTROL CONFIGURATION

The Remote Control can be associated with the stove at any time, provided it is supported by the board.

Below are instructions for correct configuration:




- Switch on power to the stove and insert batteries into the remote control (**stay close to the stove**).
- The 'No connection' message will appear.
- Press  and  simultaneously for a few seconds to access the list of available terminals.
- Select and confirm the name of your terminal by pressing the button  (**if there are several devices in the vicinity, the order will be from the closest to the most distant signal**);



Fig. 2 - .



Fig. 3 - .

If correctly associated, the following symbols will appear on the stove display: (see **Fig. 4**)

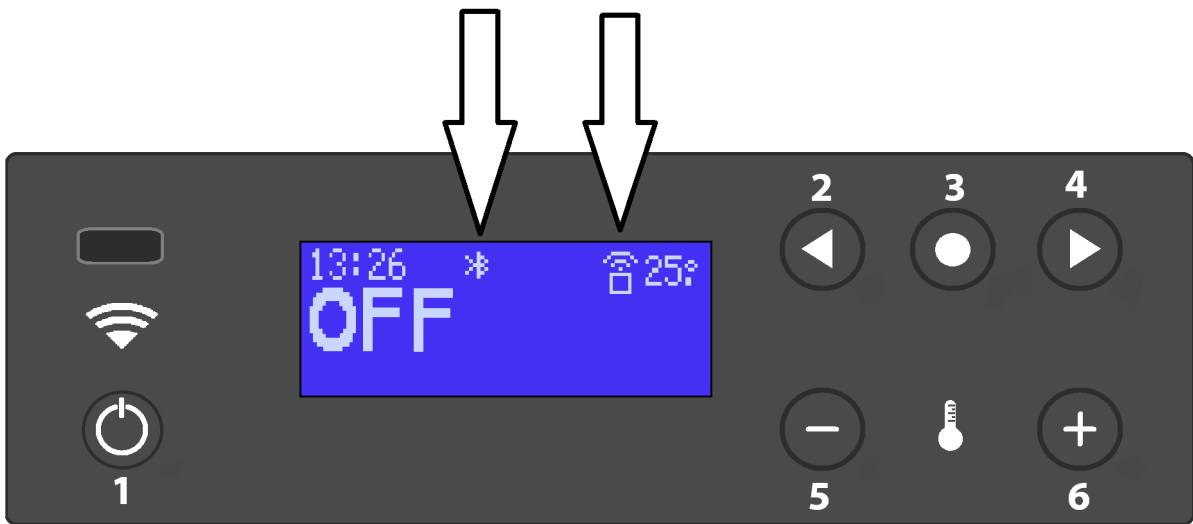 




Fig. 4 - .

## 3 REMOTE CONTROL 1 MENU


To access the remote control menu, press the keys  and  simultaneously for a few seconds.

The first screen will give information on which device is associated and how strong the signal is **Fig. 5**.


The value expressed as a percentage will rise as you move away from the stove and fall as you approach the stove.

To disconnect the device, press the  key and confirm with .

It will now start to scan for a new terminal.

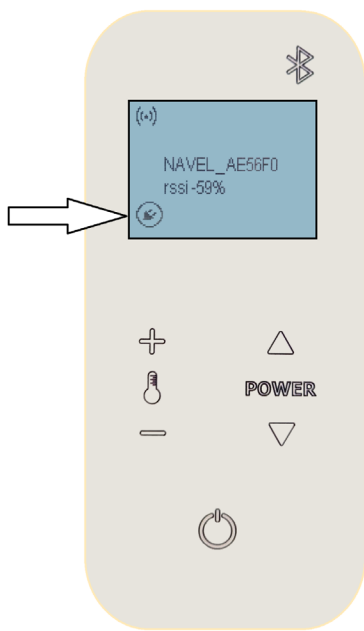

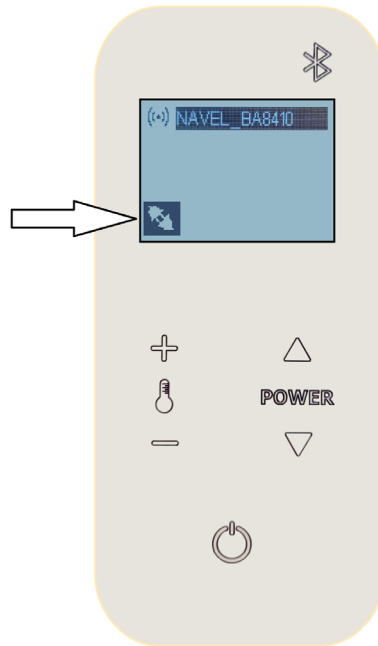


**Fig. 5 - Associated device**




**Fig. 6 - Dissociated device**

## 4 REMOTE CONTROL 2 MENU


To access the Remote Control menu, press the keys  and  simultaneously for a few seconds. Press  to go to the next screen where you can manage in order :

- Screen brightness
- Contrast
- Buzzer
- Backlight time
- Language
- Accelerometer


Use the  and  to change the selected values.

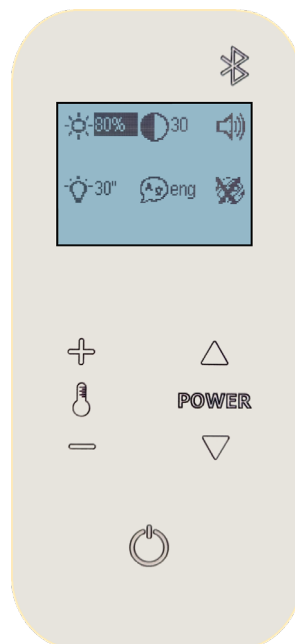

**Fig. 7 - Next screen**

Scrolling with  will take you to a menu reserved for the technician to update the device for future upgrades.



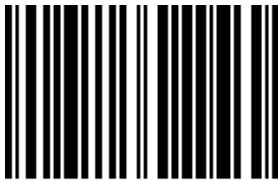

89024023

Rev. 00 - 2024

**CADEL srl**  
**31025 S. Lucia di Piave - TV**  
**Via Martiri della Libertà, 74 - Italy**  
**Tel. +39 0438 1520200**

**[www.cadelsrl.com](http://www.cadelsrl.com)**  
**[www.free-point.it](http://www.free-point.it)**  
**[www.pegasoheating.com](http://www.pegasoheating.com)**