

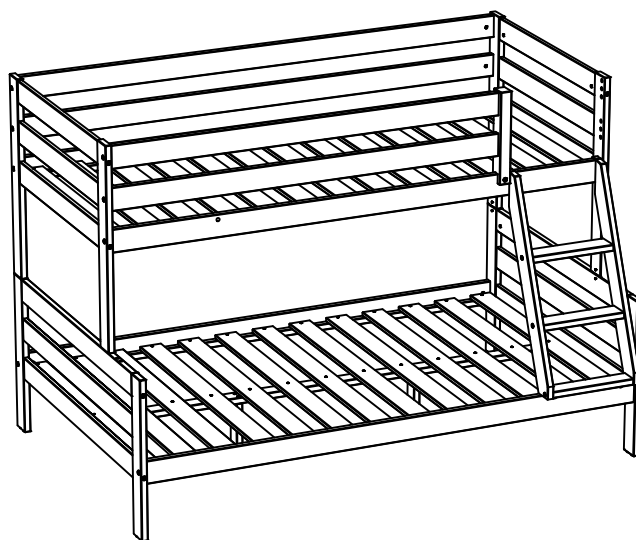


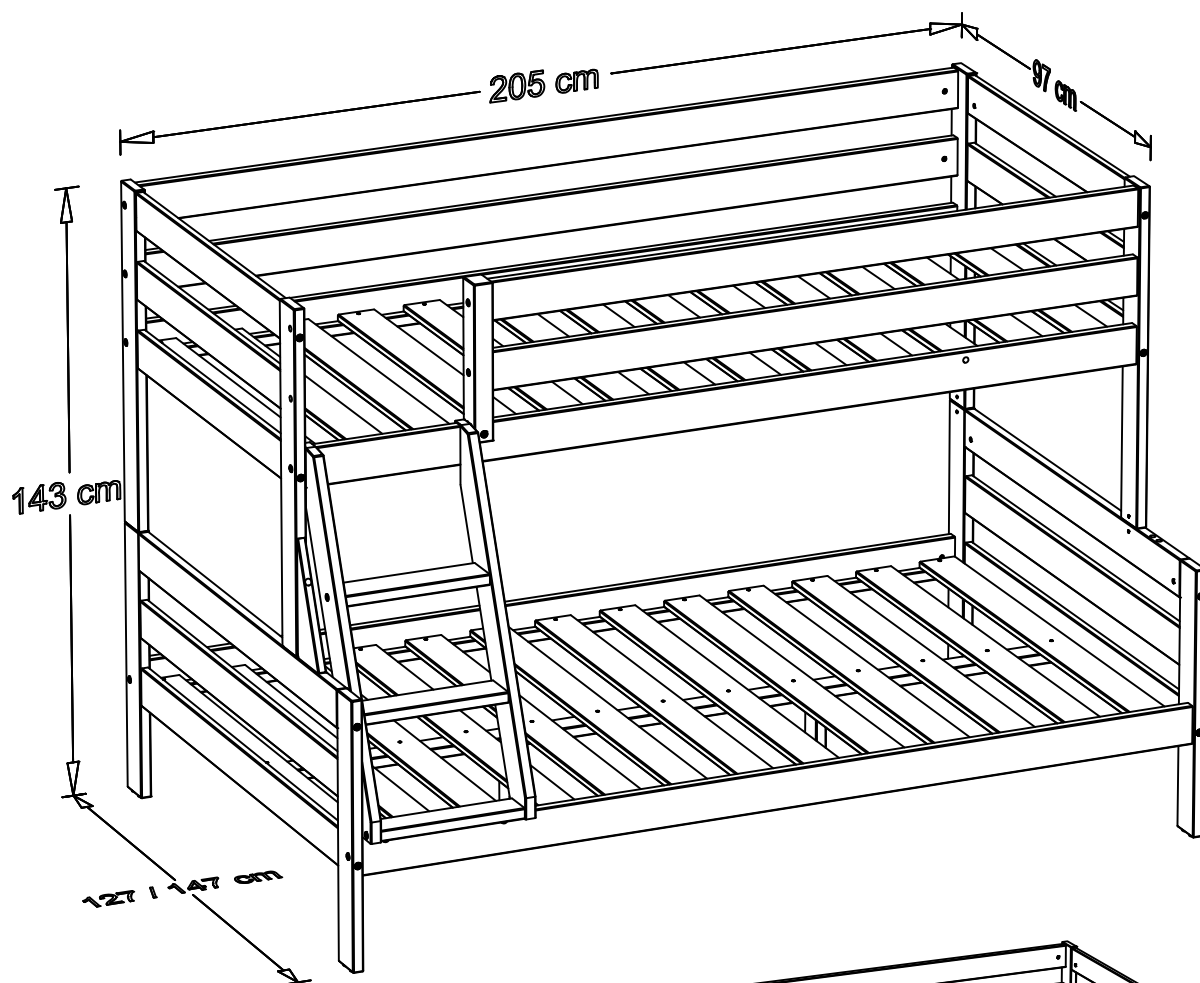

»Bromma«

(GB) **Assembly instructions**

(SE) **Monteringsanvisning**

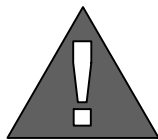

GB

RECOMMENDATIONS BEFORE ASSEMBLY

- o Always follow the manufacturers instructions.
- o Please check the contents listed in the assembly instructions to ensure you have all components.
- o Always assemble the product in the designated room to ensure that the product fits in its designated space.
- o Always assemble the product in the correct order and do not fully tighten the screws before you have everything assembled.
- o If you wish to return your order the product must be complete and properly packaged in its original box.

IMPORTANT: PLEASE KEEP A COPY OF THE SECURITY NOTICE AND ASSEMBLY INSTRUCTIONS FOR FUTURE REFERENCE

WARNING: The Top Bunk and any raised bed are not suitable for children under 6 years of age due to the risk of injuries related to falls.

WARNING: If bunk beds and raised beds are not used properly they may present a serious risk of strangulation injury. Never attach or hang items to parts of the bunk bed that are not intended for use with said bed. These factors include, but are not limited to, ropes, strings, cords, hooks, belts and bags.

WARNING: Children can get stuck between the bed and wall, between a sloping roof, ceiling, adjacent furniture (eg, cupboards) or otherwise. To avoid serious injury, the distance between the top safety barrier and surrounding elements must not exceed 75mm or be greater than 230mm.

WARNING: Do not use the bunk bed or loft bed if any part of the structure is missing or broken. Regularly check that all fasteners and screws are properly tightened. Please ventilate the room regularly to maintain a low moisture level and to prevent mold growth.

MATTRESS

The recommended mattress size for upper bed is 90x200cm and lower bed is 120/140x200cm. According to the European safety standards EN 747-1 + A1: 2015, on upper bed we recommend using a mattress thickness less than or equal to 20cm to preserve a barrier height of 16cm above the mattress.

INSTRUCTIONS SECURING THE BED BASE

THE BED BASE IS AN INTEGRAL AND INSEPARABLE COMPONENT OF THE BED.

RECOMMENDATIONS:

- o Place the bed base onto the designated supports on the bed frame
- o Begin by screwing down the end slats on the bed base
- o Then continue by screwing down the central slat ensuring that you have firmly attached the slats to the support rail

SÄKERHETSINSTRUKTIONER FÖRE ANVÄNDNING/MONTERING

- o Följ alltid tillverkarens instruktioner
- o Läs igenom monteringsanvisningen och kontrollera beslag och delar
- o Ta fram behovet av verktyg
- o Se till att ha en bra yta att jobba på
- o Montera alltid i rätt ordning och dra inte åt skruvarna helt förens alla delar är på plats
- o Om du vill lämna tillbaka din vara måste produkten vara hel och ordentligt inpackat i original emballage/kartong

VIKTIGT: SPARA MONTERINGSANVISNING FÖR FRAMTIDA BEHOV

WARNING! Häng aldrig snöre i remmar i sängen på grund av strykningsrisk.

WARNING! Barn under 6år bör ej använda översäng på grund av fallrisk.

WARNING! Använd aldrig sängen om den har skador eller saknar beslag.

WARNING! Barn kan klämmas mellan sängen och väggen, för att undvika detta ska sängen stå mindre än 75mm eller mer än 230mm från väggen.

Kontrollera skruvförband med jämna mellanrum.

Bestäm stegens placering, vänster alt höger innan ni börjar montera.

Vänligen ventilerarummet regelbundet för att upprätthålla en låg fuktnivå och förhindra mögeltillväxt.

MADRASS

Rekommenderad madrasstorlek översäng 90x200cm. Rekommenderad madrasstorlek undersäng 120/140x200cm, beroende på storlek i undersäng. Max madrasstjocklek översäng 20cm. På översängen finns ett märke som visar max madrasstjocklek. Denna rekommendation är enligt EN 747-1 + A1: 2015.

SÄKERHETSINSTRUKTIONER FÖR RIBBOTTEN

RIBBOTTNARNA ÄR EN VÄSENTLIG OCH OSKILJBAR DEL AV SÄNGEN.

REKOMMENDATIONER:

- o Placera ribbottarna på de utformade stödskenan på sängramen/stommen
- o Börja med att skruva ned ribbotten till undersängen
- o Fortsätt sedan med att skruva fast ribbottarna stadigt i stödskenan



(GB)


Before attaching the screws


Ensure that you have evenly attached the slats and that the end slats are in contact with the bed posts.

(SE)

Innan du fäster skruvarna

Säkerställ att ribbottarna är jämt satt och de nedersta ribbottarna är i kontakt med stödskenan på sängramen/stommen

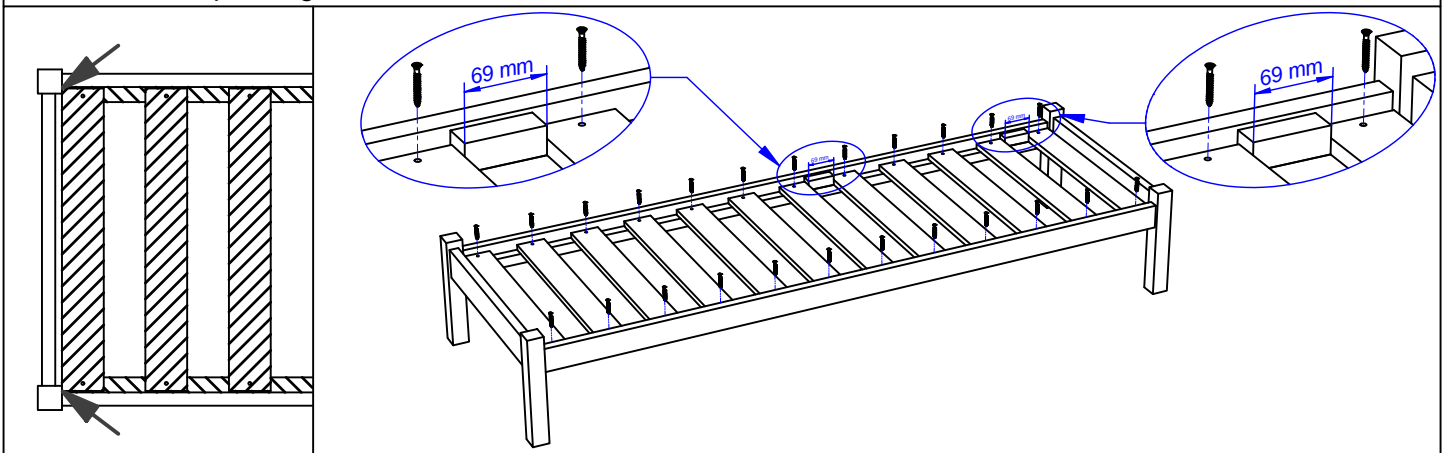

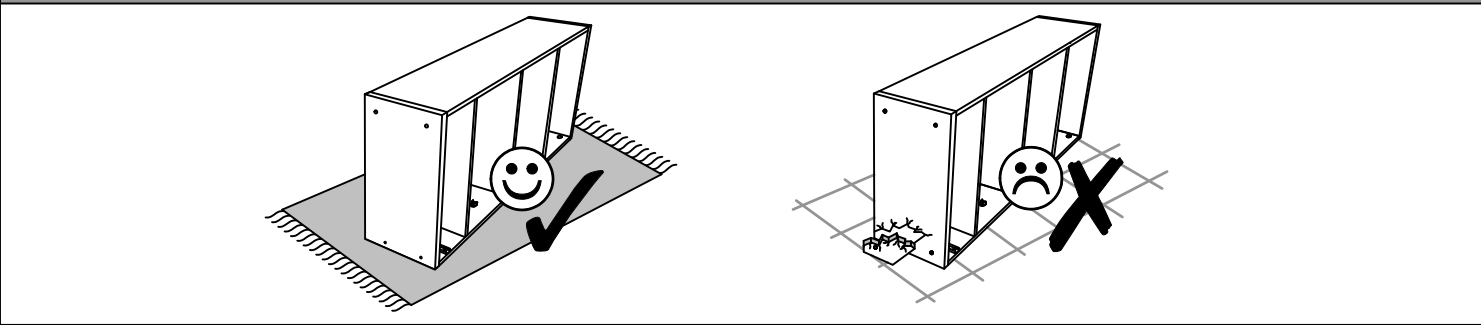

1

Ad

Ø10x60

16x

NB

P30

Ad

NB

P33

Ad

P27

x2

Ad

P26

x2

Ad

2

HI

M6xØ10x14/6

4x

Ho

M6x120/Ø15

8x

Hs

M6xØ10x18/7

8x

NB

Hs

Ho

HI

P30

P27

P26

P28

P29

Uh

Uh

NB

Hs

Ho

HI

P33

P27

P26





P32

P31


Uh


Uh

NB

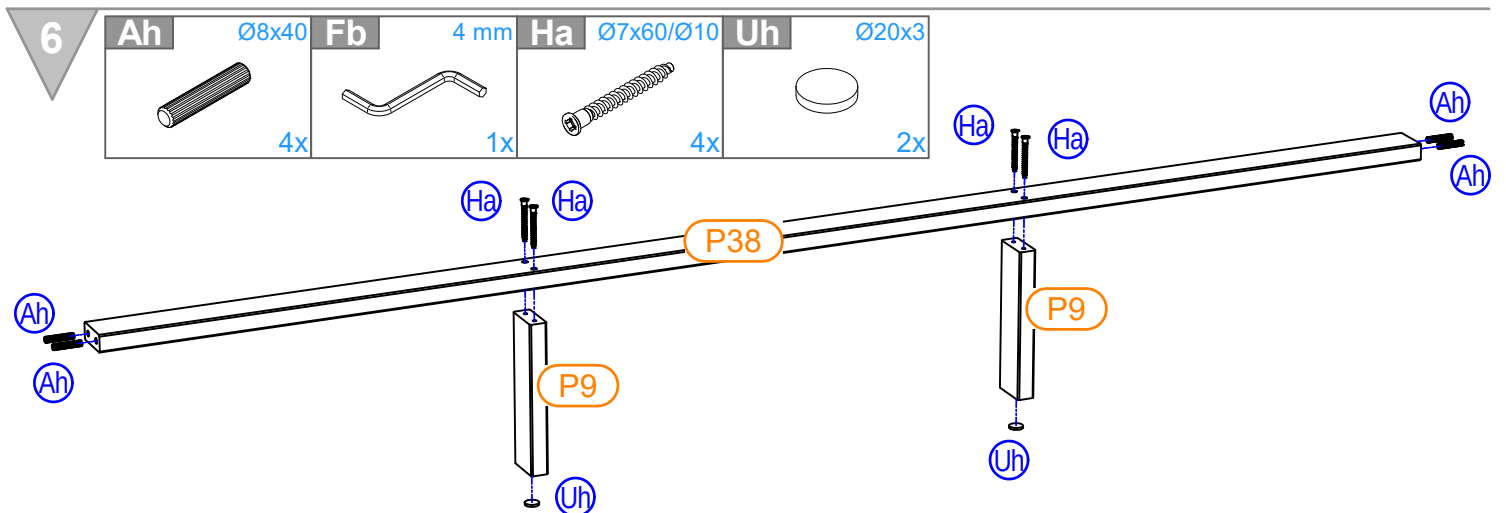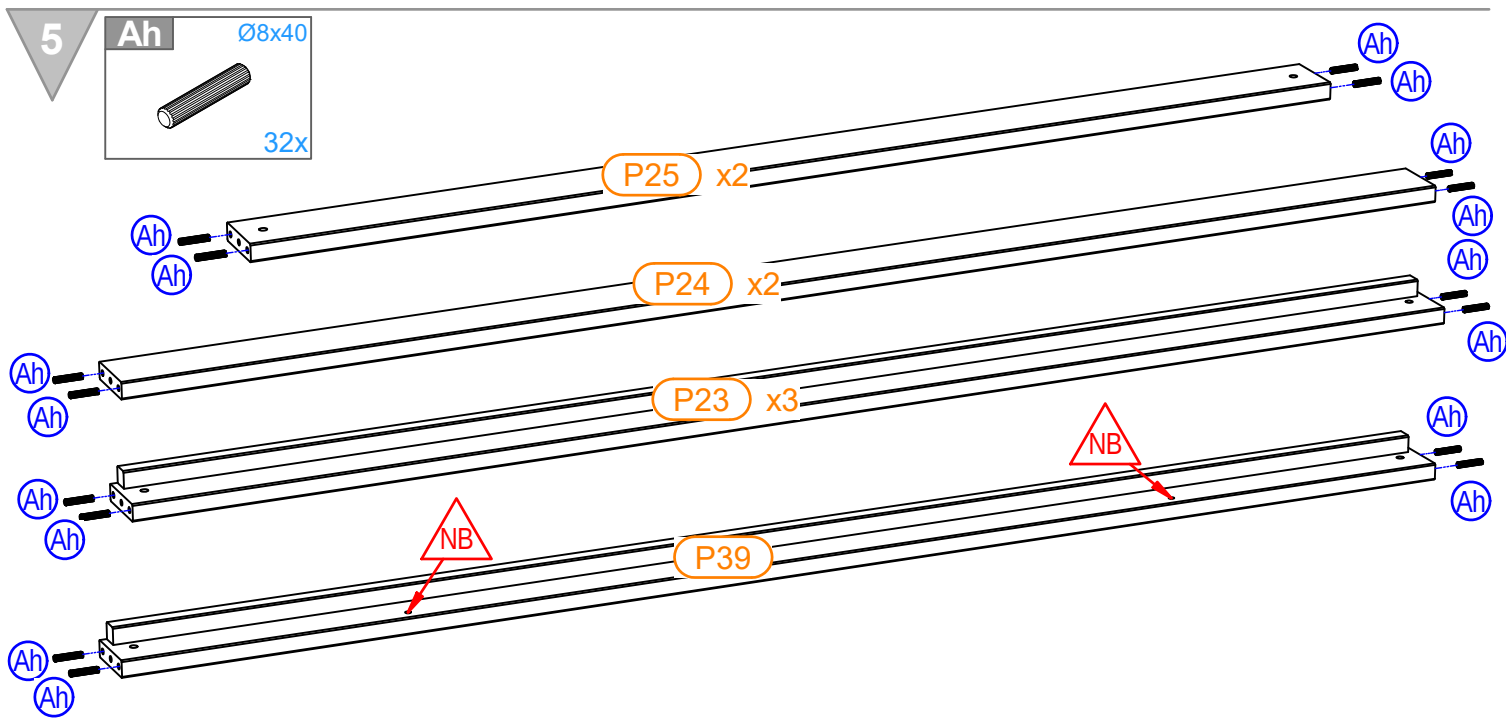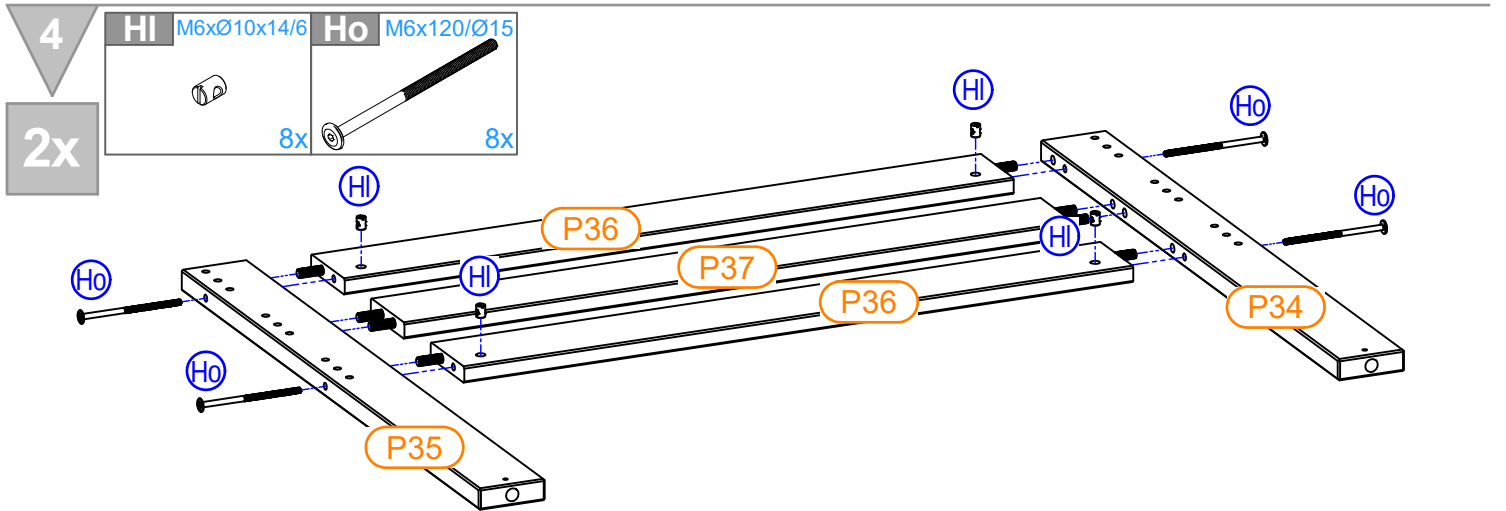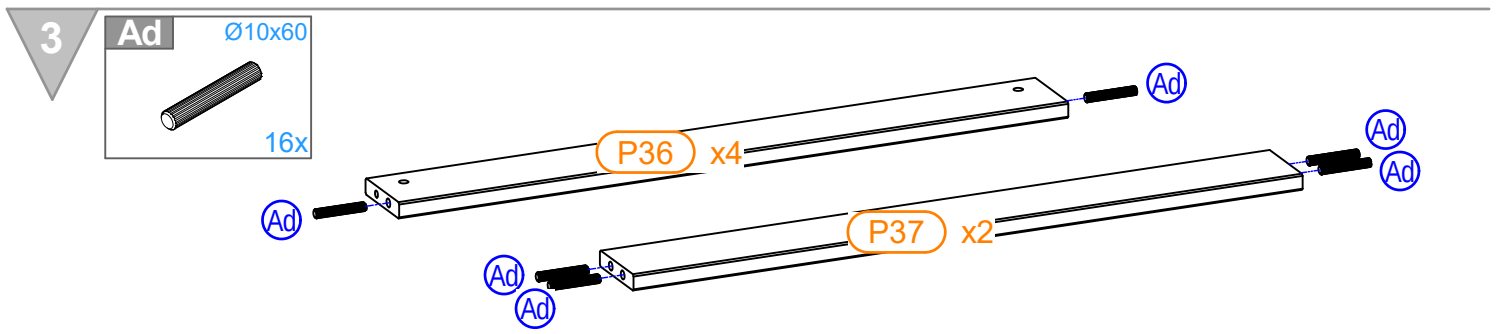



7

Fb	4 mm	Hr	M6x65/Ø15	Hs	M6xØ10x18/7
					
1x		4x		4x	

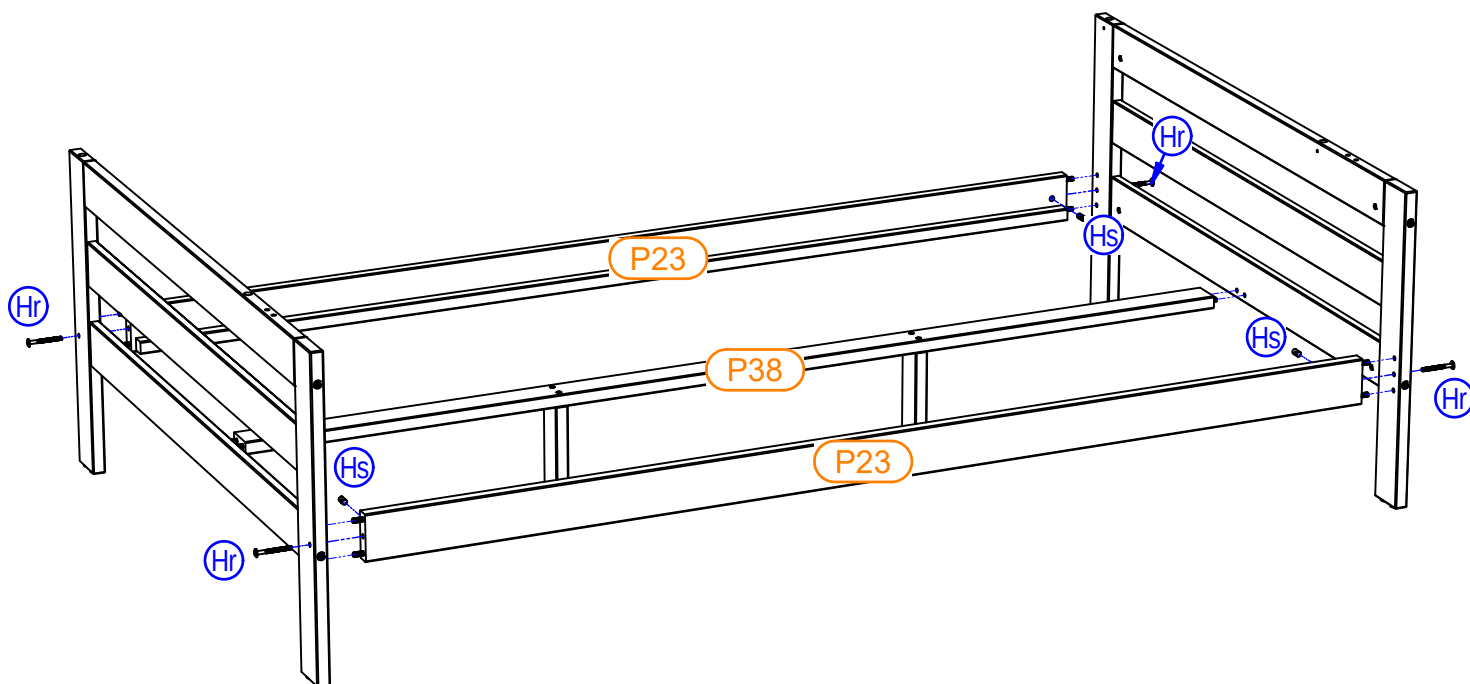

8

Fb	4 mm	Hr	M6x65/Ø15	Hs	M6xØ10x18/7
					
1x		8x		8x	

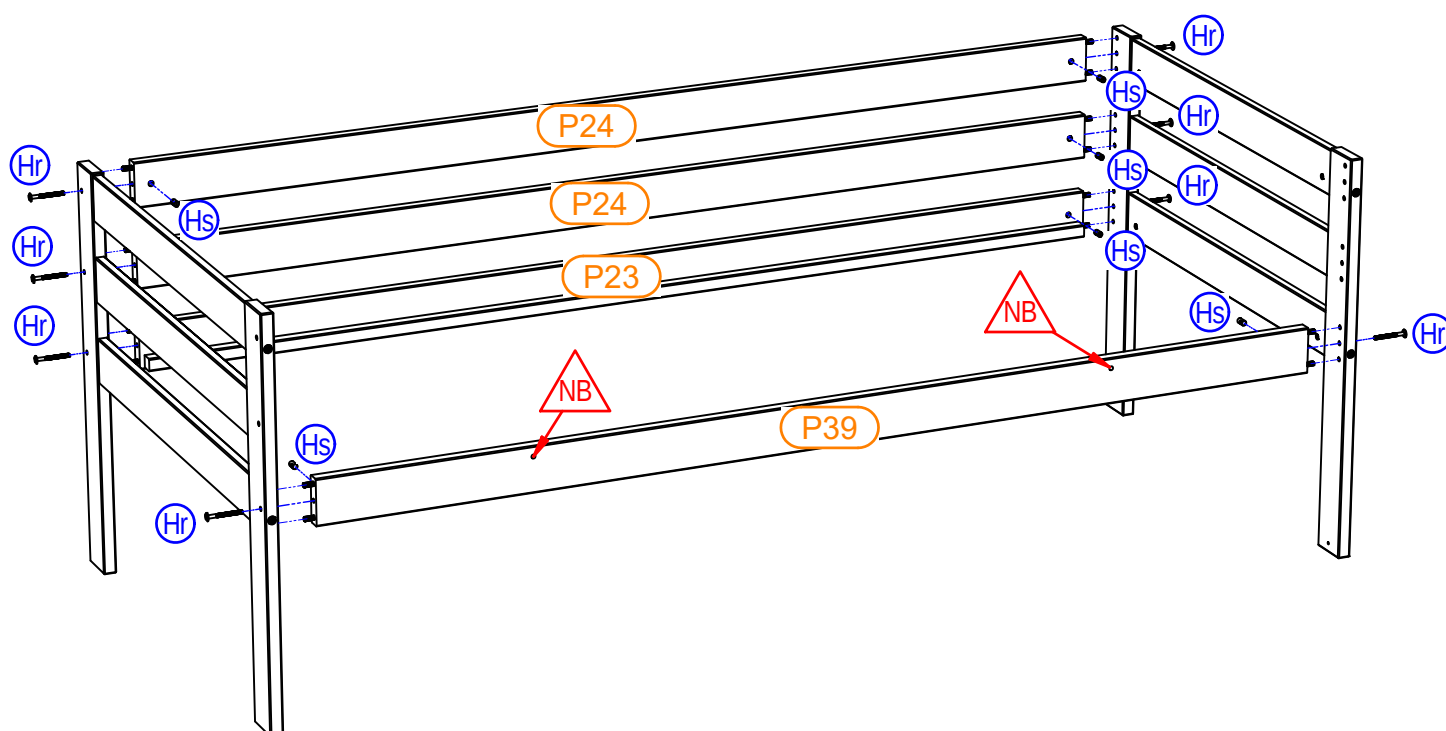

9

E

Ø3,5x35

Y


69 mm



39x



2x

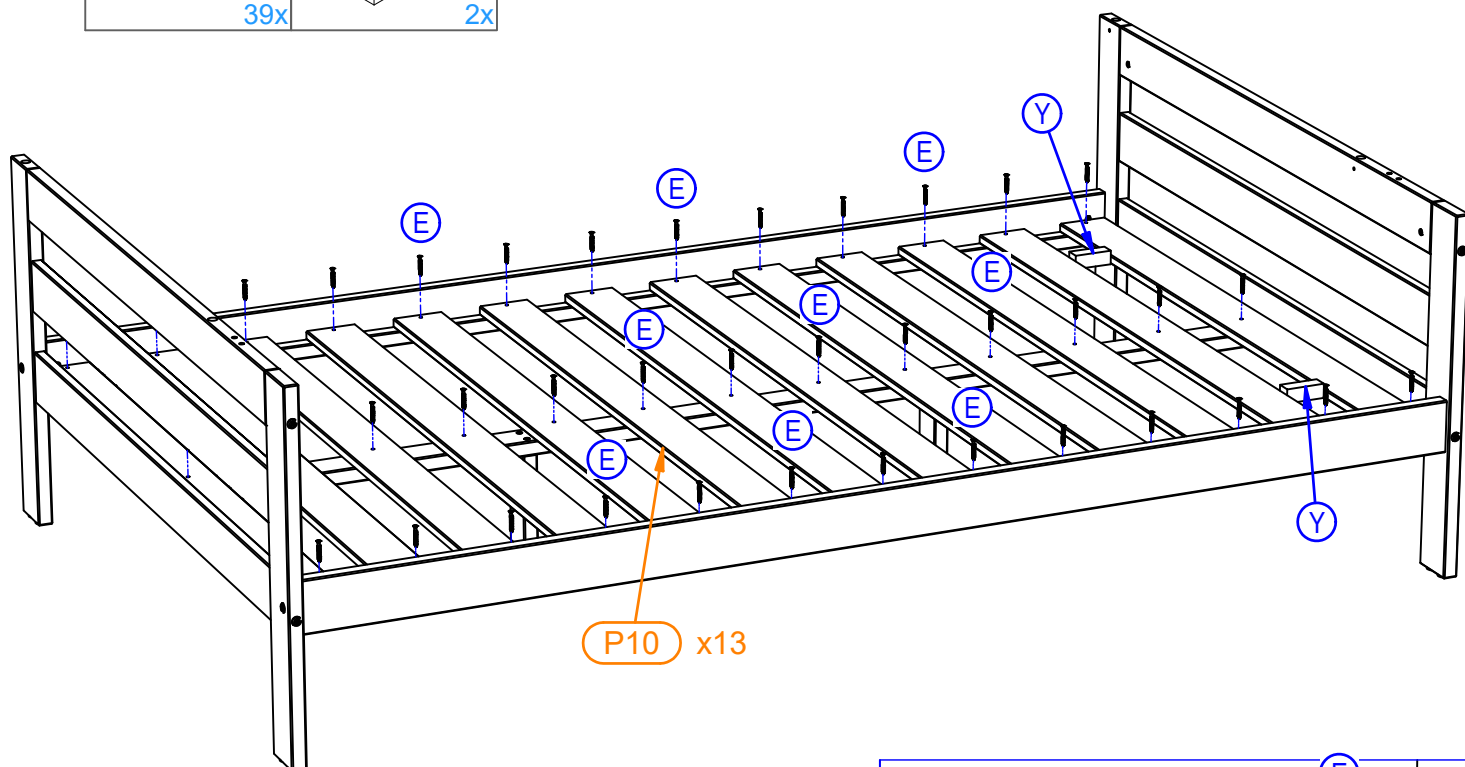

P10 x13

10

E

Ø3,5x35

Y



69 mm



26x



2x

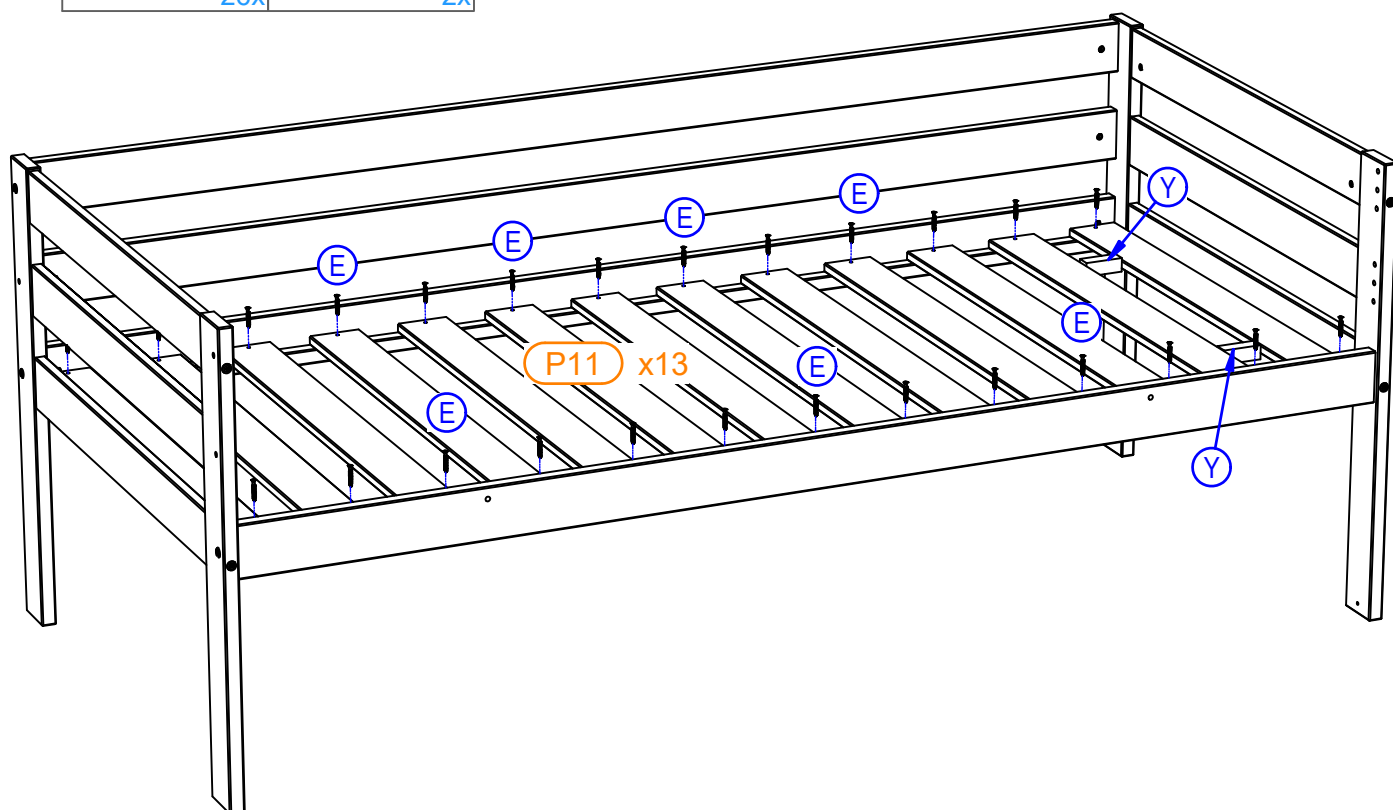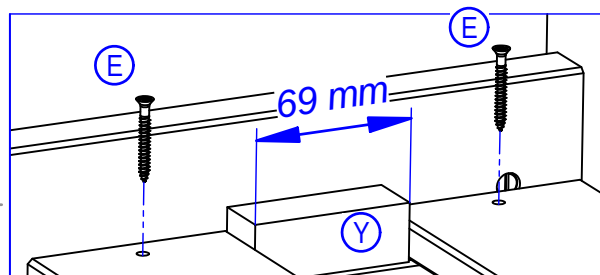

P11 x13


11

Ae

Ø15x60

Eh



Ø3,5x20



4x




8x

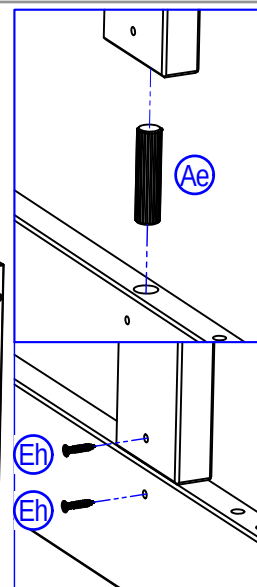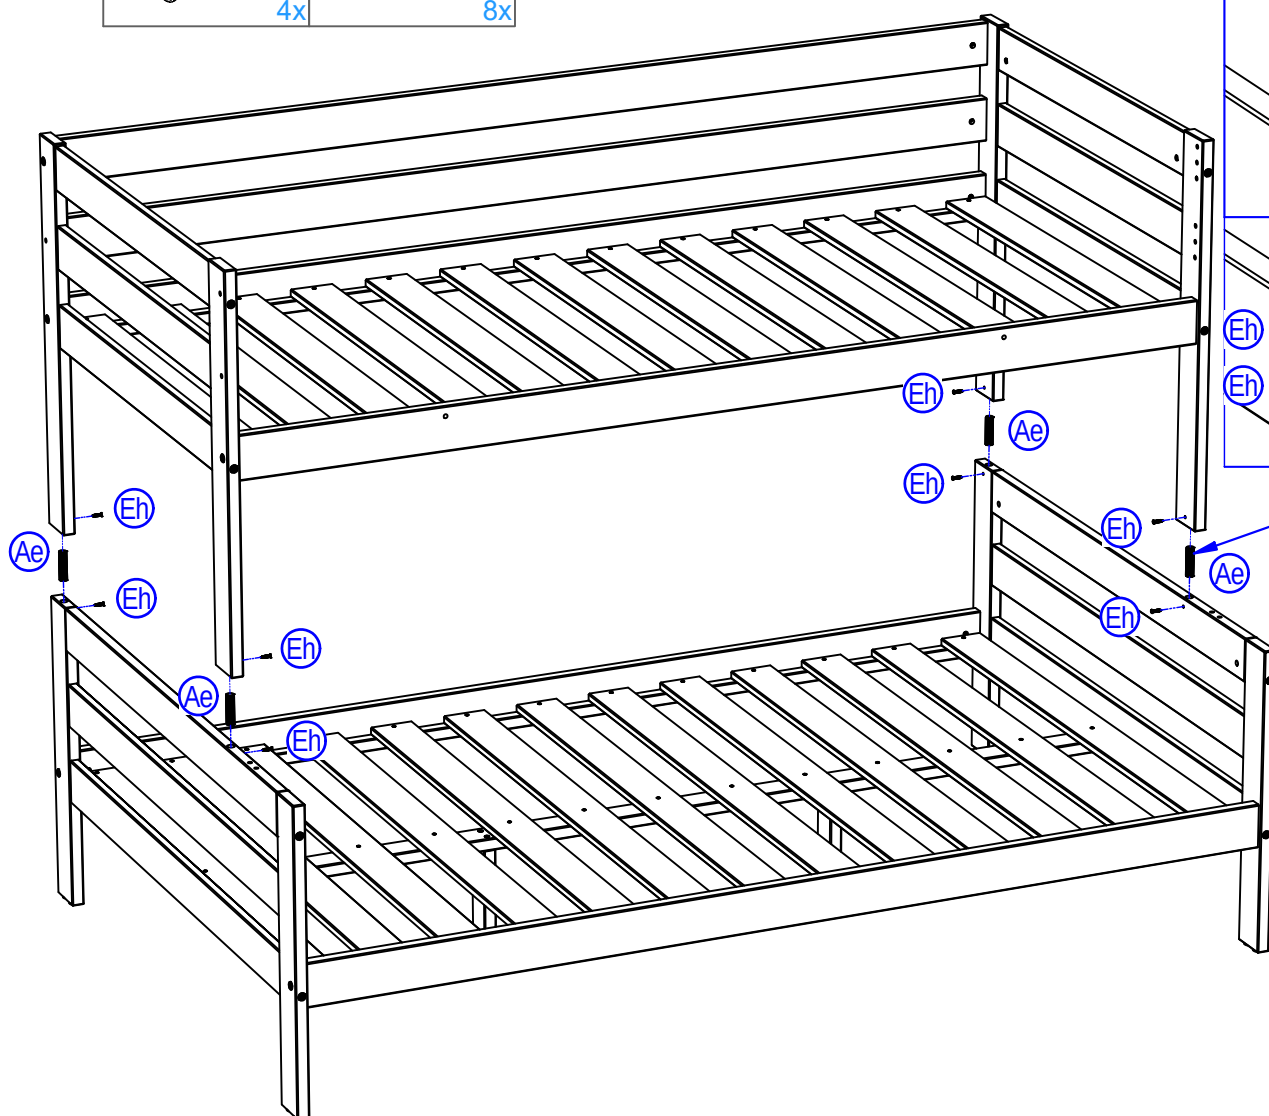


12

Ac

Ø8x35



10x

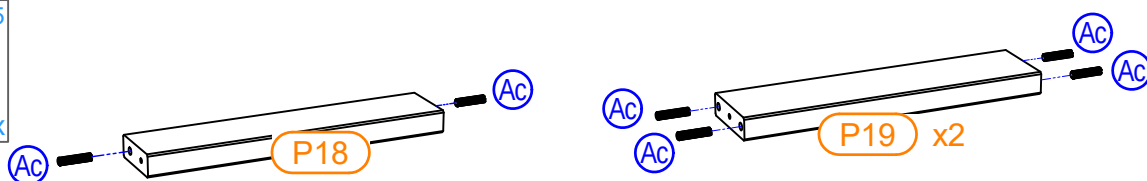

13

E


Ø3,5x35

Ke

70x20x3



4x



2x

Fb


4 mm




1x

Hc

Ø6,3x70/15




6x

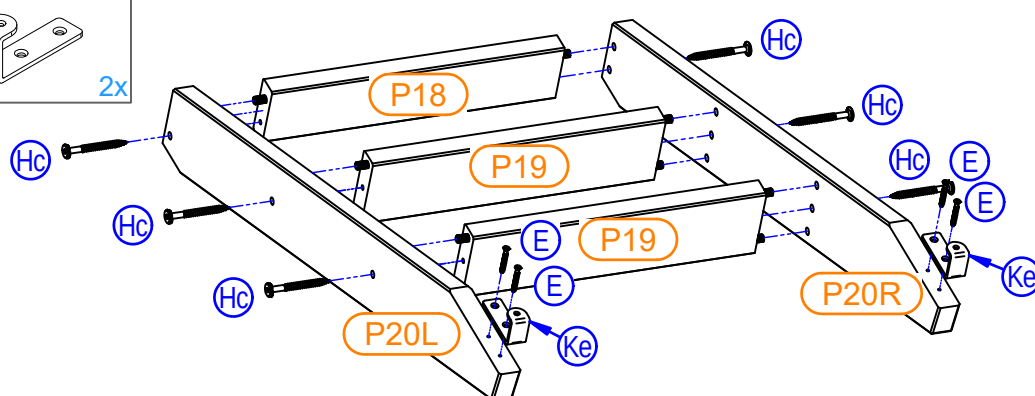


14

Ac

Ø8x35












2x

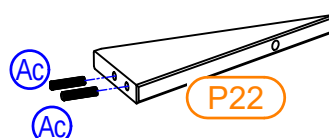

Ec Ø4,0x60	Fb 4 mm	Hr M6x65/Ø15	Hp M6x85/Ø15	Hg M6x15x8/Ø15	Hm M6x55/Ø15	Nb Ø8
 1x	 2x	 2x	 2x	 1x	 1x	 11x

Nc Ø10	Hs M6xØ10x18/7
 1x	 4x

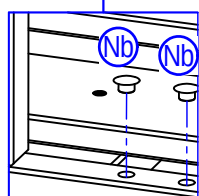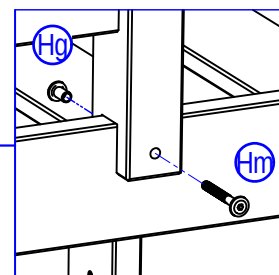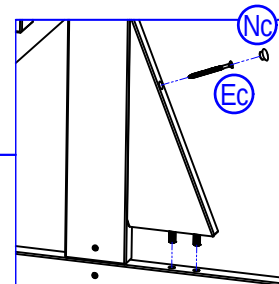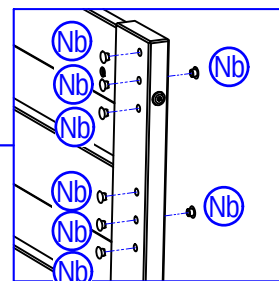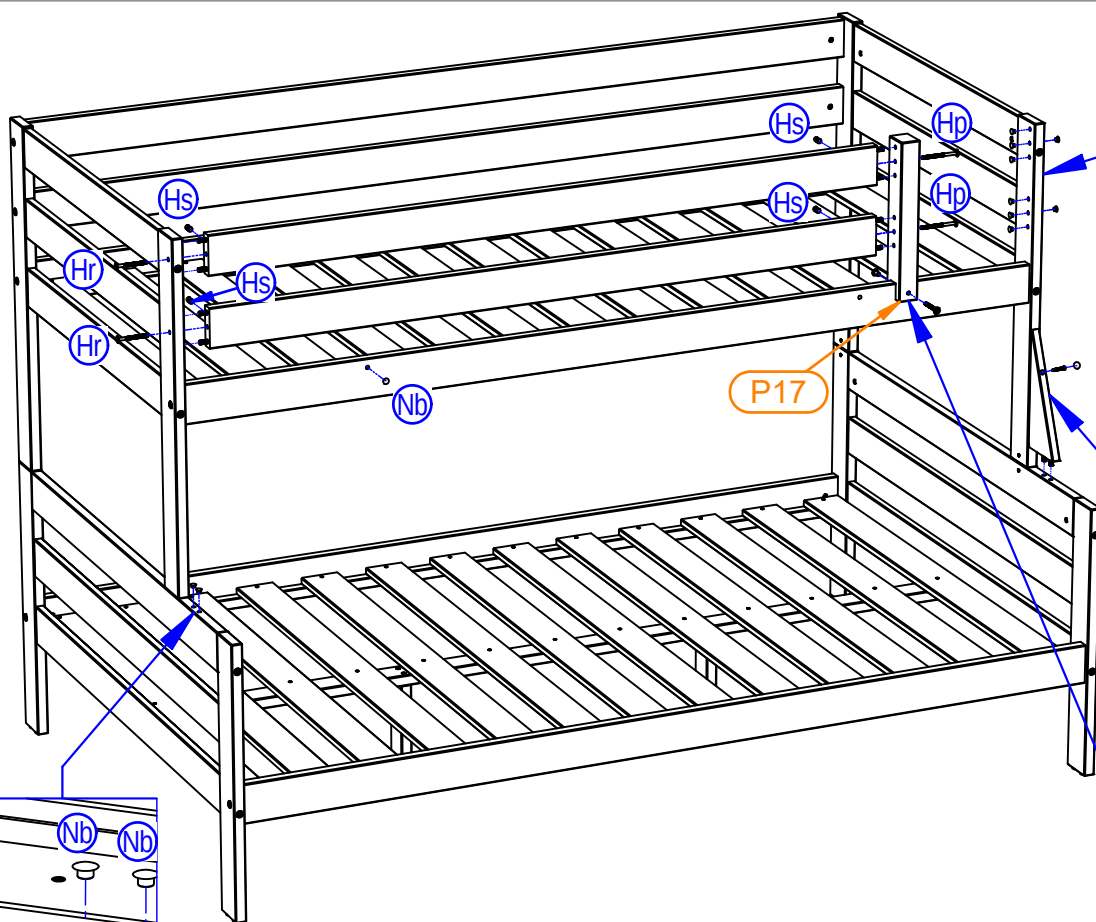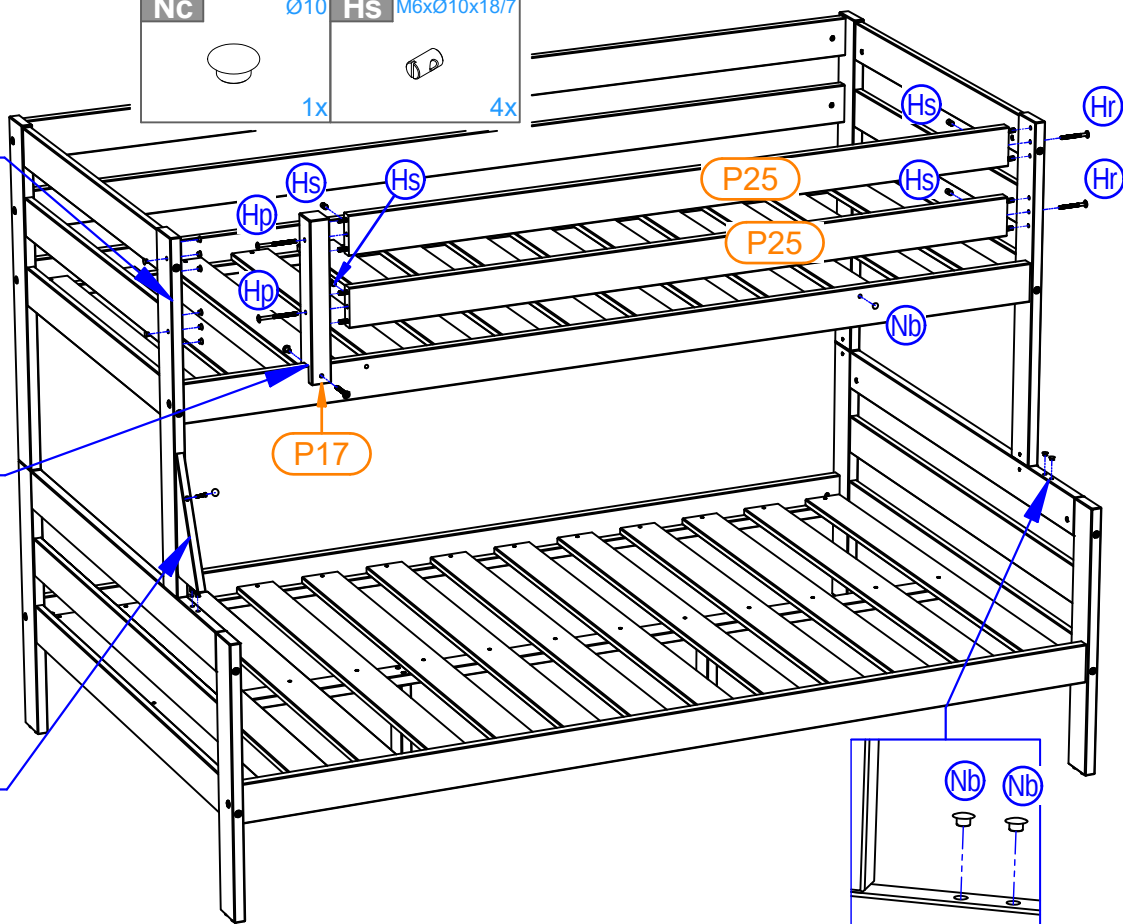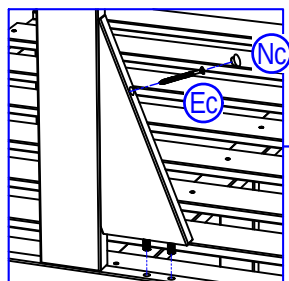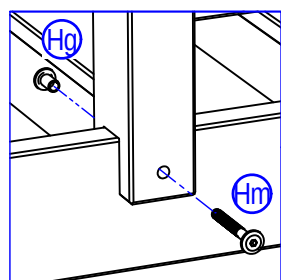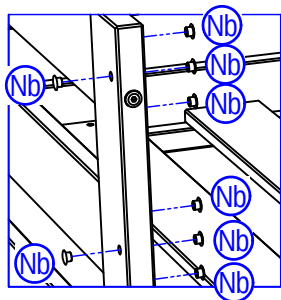



6x



2x

