

GPT.11.527.100/B

Revision: 02



TRIUMPH Sprint ST 1050 Bj. 05

ALU-RACK

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

Max. Zuladung 7,5 Kg inklusive Koffer und Adapter. Ist das Zuladungsgewicht des Fahrzeuges durch den Hersteller limitiert, gelten diese Grenzwerte.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

ALU-RACK

Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

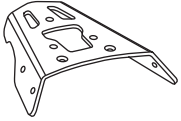

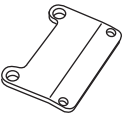

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

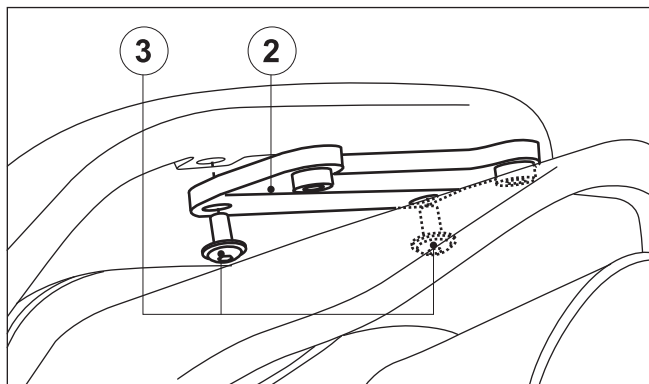
M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

Max. Load On Rear Carrier: 7,5 Kg (16,5 lbs) inclusive case and adapter or the motorcycle manufacturer's weight limit, whichever is less.

1 ALU-RACK ALU-RACK  schwarz/black GPT.11.527.001 03 Anzahl/ Pcs. 1	4 Unterbau Bed-Bracket  GPT.11.527.921/922 Anzahl/ Pcs. 2 (L/R)	8 Rohrendkappe Cap  KES.00.15.02 Anzahl/ Pcs. 2
2 Anbaublech Fixing Bracket  GPT.11.527.003 Anzahl/ Pcs. 1	5 Senkkopfschraube mit Innensechskant Countersunk Screw  schwarz/black M8 x 25 DIN 7991 Anzahl/ Pcs. 6	
3 Linsenkopfschraube Lenshead Screw  schwarz/black M6 x 16 ISO 7380 Anzahl/ Pcs. 4	6 Senkscheibe Countersunk Washer  schwarz/black SE.00.084.02 Anzahl/ Pcs. 4	
	7 Distanzbuchse Spacer  Da:20 Di:8,4 h:5 Anzahl/ Pcs. 2	



! Achtung: Falls die Montage einer Adapterplatte vorgesehen ist, **MÜSSEN** die Haltenocken am Alu-Rack vor dessen Anbau am Motorrad verschraubt werden.

Attention: Cam-locks from adapter kit **MUST** be installed before attaching the alu-rack to the bike.

