

Suzuki SV 650 / SV 1000 ab Bj. 03

ALU-RACK Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

Max. Zuladung 7,5 Kg inklusive Koffer und Adapter. Ist das Zuladungsgewicht des Fahrzeuges durch den Hersteller limitiert, gelten diese Grenzwerte.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

ALU-RACK Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

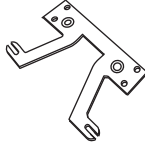



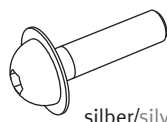

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

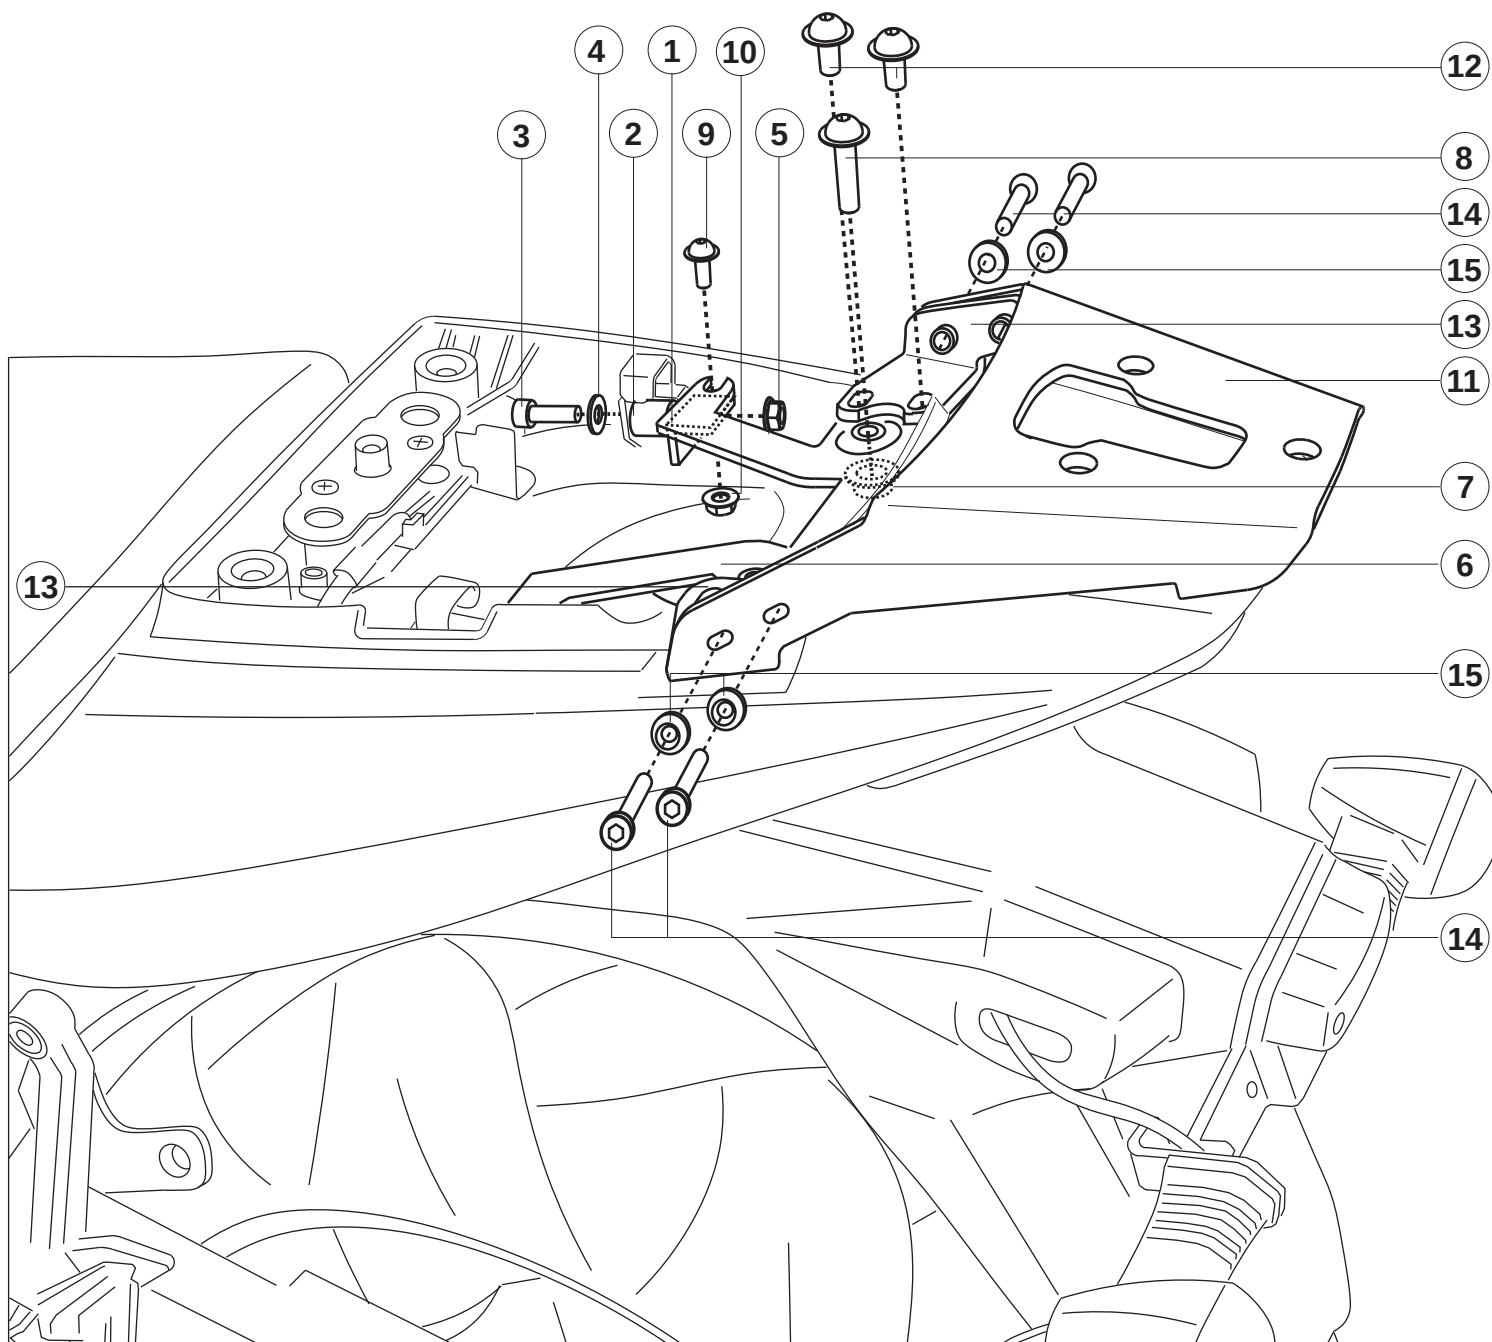
M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.

Max. Load On Rear Carrier: 7,5 Kg (16,5 lbs) inclusive case and adapter or the motorcycle manufacturer's weight limit, whichever is less.

1 Befestigungsblech Fixing Lug  KFT.05.227.001R/L Anzahl/ Pcs. 2	6 Befestigungsblech Fixing Lug  GPT.05.232.002 Anzahl/ Pcs. 1	11 ALU-RACK ALU-RACK  schwarz/silber GPT.05.233.003 03 Anzahl/ Pcs. 1
2 Distanzbuchse Spacer  Da=15 Di=6,4 h=24,5 Anzahl/ Pcs. 2	7 Formscheibe Moulding  KFT.05.227.003/1 Anzahl/ Pcs. 2	12 Linsenschraube Lensheadscrew  silber/silber M8 x 16 ISO 7380 Anzahl/ Pcs. 4
3 Zylinderschraube mit Innensechskant Hexagon Socket Screw  silber/silber M6 x 40 DIN 912 Anzahl/ Pcs. 2	8 Linsenschraube Lensheadscrew  silber/silber M8 x 40 ISO 7380 Anzahl/ Pcs. 2	13 Anbaublech Fixing Lug  GPT.05.233.002L/R Anzahl/ Pcs. 2(L/R)
4 Unterlegscheibe Washer  silber/silber A 6,4 DIN 125 Anzahl/ Pcs. 2	9 Linsenschraube Lensheadscrew  silber/silber M6 x 20 ISO 7380 Anzahl/ Pcs. 2	14 Senkkopfschraube mit Innensechskant Countersunk Screw  schwarz/silber M8 x 25 DIN 7991 Anzahl/ Pcs. 4
5 Mutter mit Bund Nut  silber/silber M 6 DIN 6927 Anzahl/ Pcs. 2	10 Mutter mit Bund Nut  silber/silber M 6 DIN 6927 Anzahl/ Pcs. 2	15 Senkscheibe Countersunk Spacer  schwarz/silber Da: 8,4 Anzahl/ Pcs. 4



! Achtung: Falls die Montage einer Adapterplatte vorgesehen ist, **MÜSSEN** die Haltenocken am Alu-Rack vor dessen Anbau am Motorrad verschraubt werden.

Attention: Cam-locks from adapter kit **MUST** be installed before attaching the alu-rack to the bike.