

SBL.05.376.100



SUZUKI GSF 650 Bandit

Schutzbügel Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

Crash Bar Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.


All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

1 Schutzbügel
Crash Bar




SBL.05.376.901/902 L/R
Anzahl/ Pcs. 2 (L/R)

2 Sechskantschraube
Hexagon Screw



M10 x 250 DIN 6921
Anzahl/ Pcs. 1

3 Distanzbuchse
Spacer

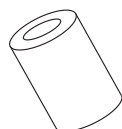


Da: 20; Di: 10,5; h: 50
Anzahl/ Pcs. 1

4 Distanzbuchse
Spacer



Da: 20; Di: 10,5; h: 9
Anzahl/ Pcs. 1

5 Bügelschraube
Bow Screw



BUS.00.08.043.058.01
Anzahl/ Pcs. 2

6 Mutter mit Bund,
selbstsichernd
Lock Nut




M 8 DIN 6927
Anzahl/ Pcs. 4

7 Schutzkappe
Plastic Cover



KEK.00.M8
Anzahl/ Pcs. 4

8 Sechskantschraube
Hexagon Screw




M10 x 1,25 x 60 DIN 960
Anzahl/ Pcs. 2

9 Unterlegscheibe
Washer



A 10,5 DIN 125
Anzahl/ Pcs. 2

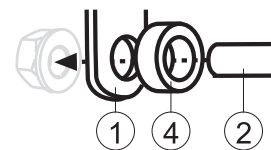

Montieren Sie Schraube (2) auf der rechten Seite des Motorrades mit original Mutter und Distanzbuchse (4).

Mount screw (2) on the right side with the original nut and Spacer (4)

