



Q-LIGHT II VW TRANSPORTER T7 25- FORD TRANSIT CUSTOM 24-

Art nr: Q900487 / Q900502
Monteringsatts: 93614



Installation

Produkten monteras med Q-GRIP
Infästningen kläms runt krockbalken







1.




2.

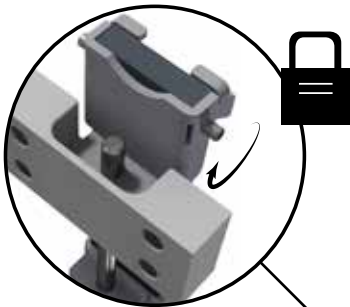

3.2

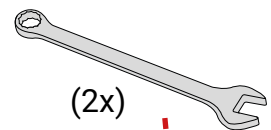

3.

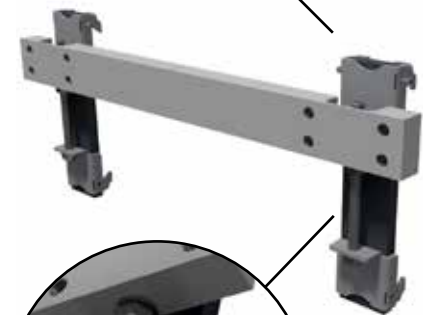

3.1

