


STEP 1

Carefully and cleanly cut the interconnect cables to the desired length using a sharp razor blade. Trim and clean any loose or overhanging strands of ground shielding. Make sure the cut is straight and the cable is evenly rounded.

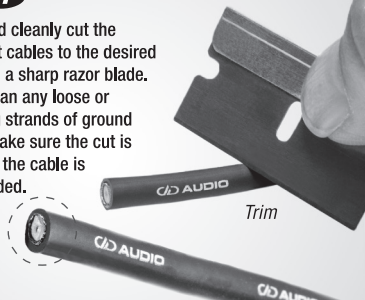

STEP 2

Loosen the set screw on the RCA Connector or Y-Adapter Block to the point it will not interfere with the cable jacket when pushing the connector onto the cable.

Front Views





Side Views



STEP 3

Push the RCA connector or Y-Adapter Block on the interconnect cable with a screwing motion. Make sure the cable fully seats into the RCA Connector or Y-Adapter Block then tighten the set screw until you feel it firmly seat.

Y-ADAPTER BLOCK

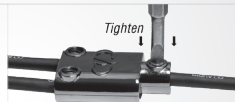

RCA CONNECTOR



FEMALE CONNECTOR



FEMALE CONNECTOR



STEP 4

Using a digital multi-meter test the center conductors and ground sleeves for continuity and shorts.



Z WIRE

DD AUDIO



Z-WIRE RCA System Assembly Instructions

DD AUDIO | DDAUDIO.COM

4025 NW 36th Street, Oklahoma City, OK 73112
(405) 239-2800