Assembly Instructions

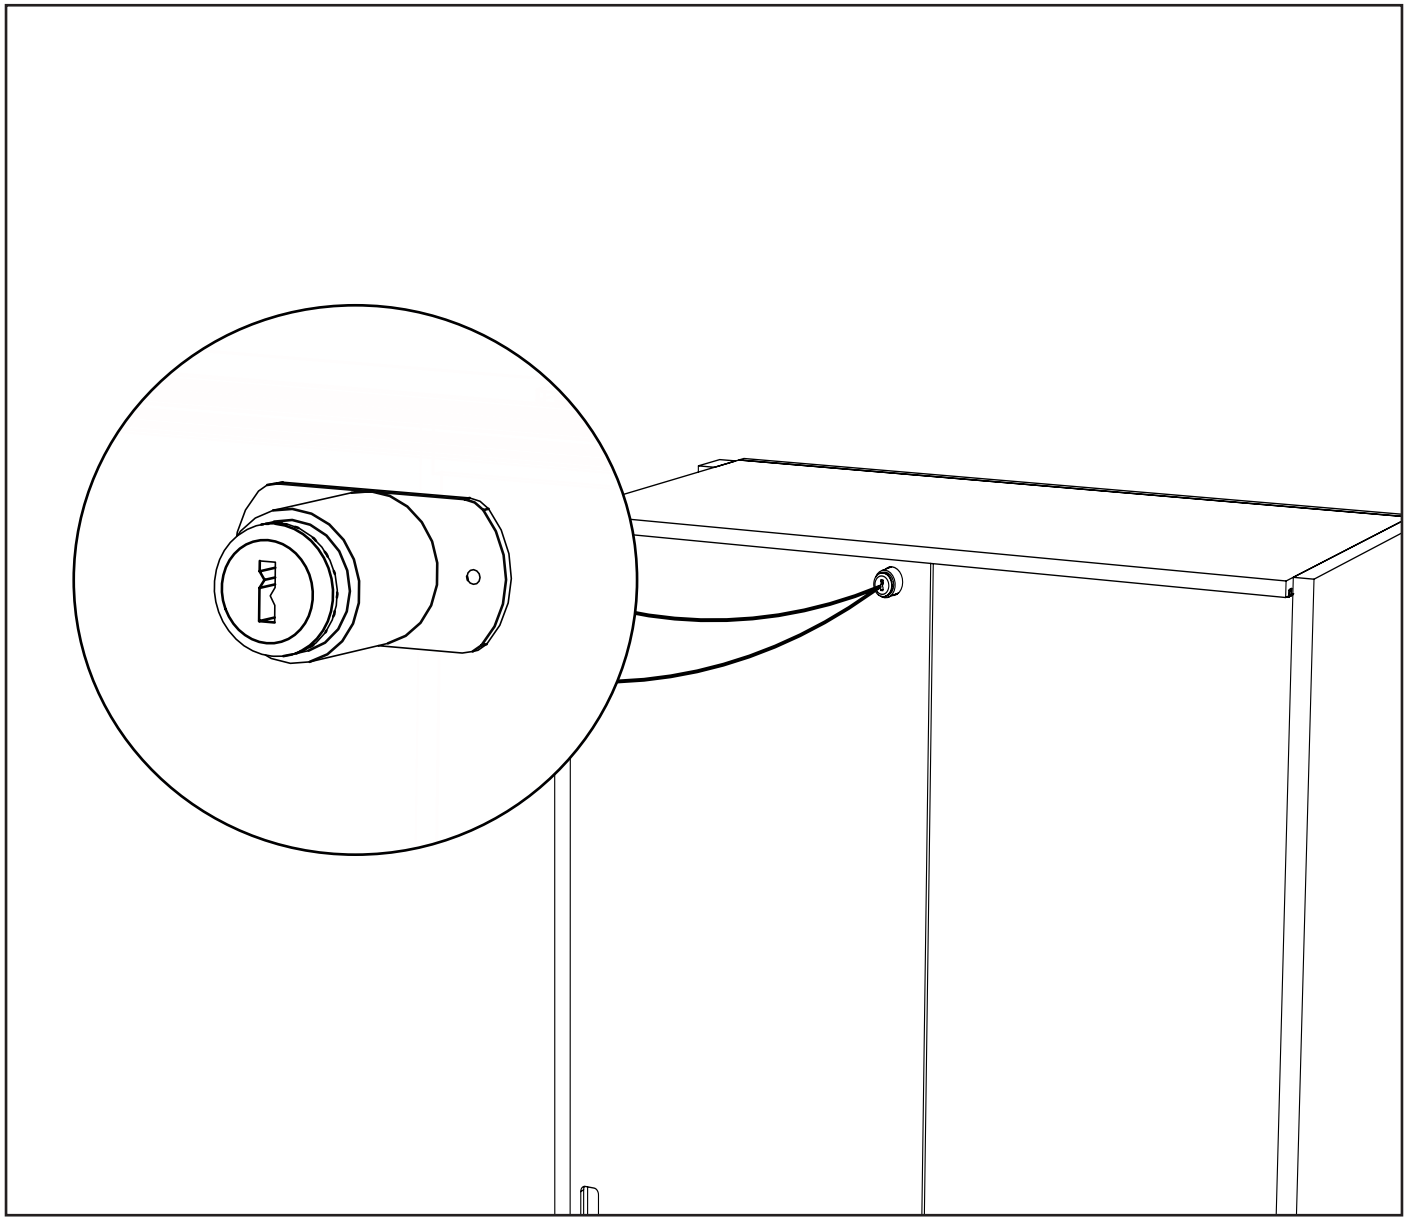

LOCK FOR CONSULTATION POINT

covers articles:

VRE2359 - Consultation point height adjustable, storage with lock
VRE2360 - Consultation point, storage with lock

2024-03-25

VOLVO RETAIL EXPERIENCE

CONTACT INFO: VRE@SENAB.COM
+46 31 351 51 00

Assembly Instructions

Drill a Ø 22mm hole in the right corner of the left door and install the lock.

On the following pages there is a template to print in scale 1:1 and instructions to follow step by step.

If you have questions, please contact us at Senab Concept at vre@senab.com

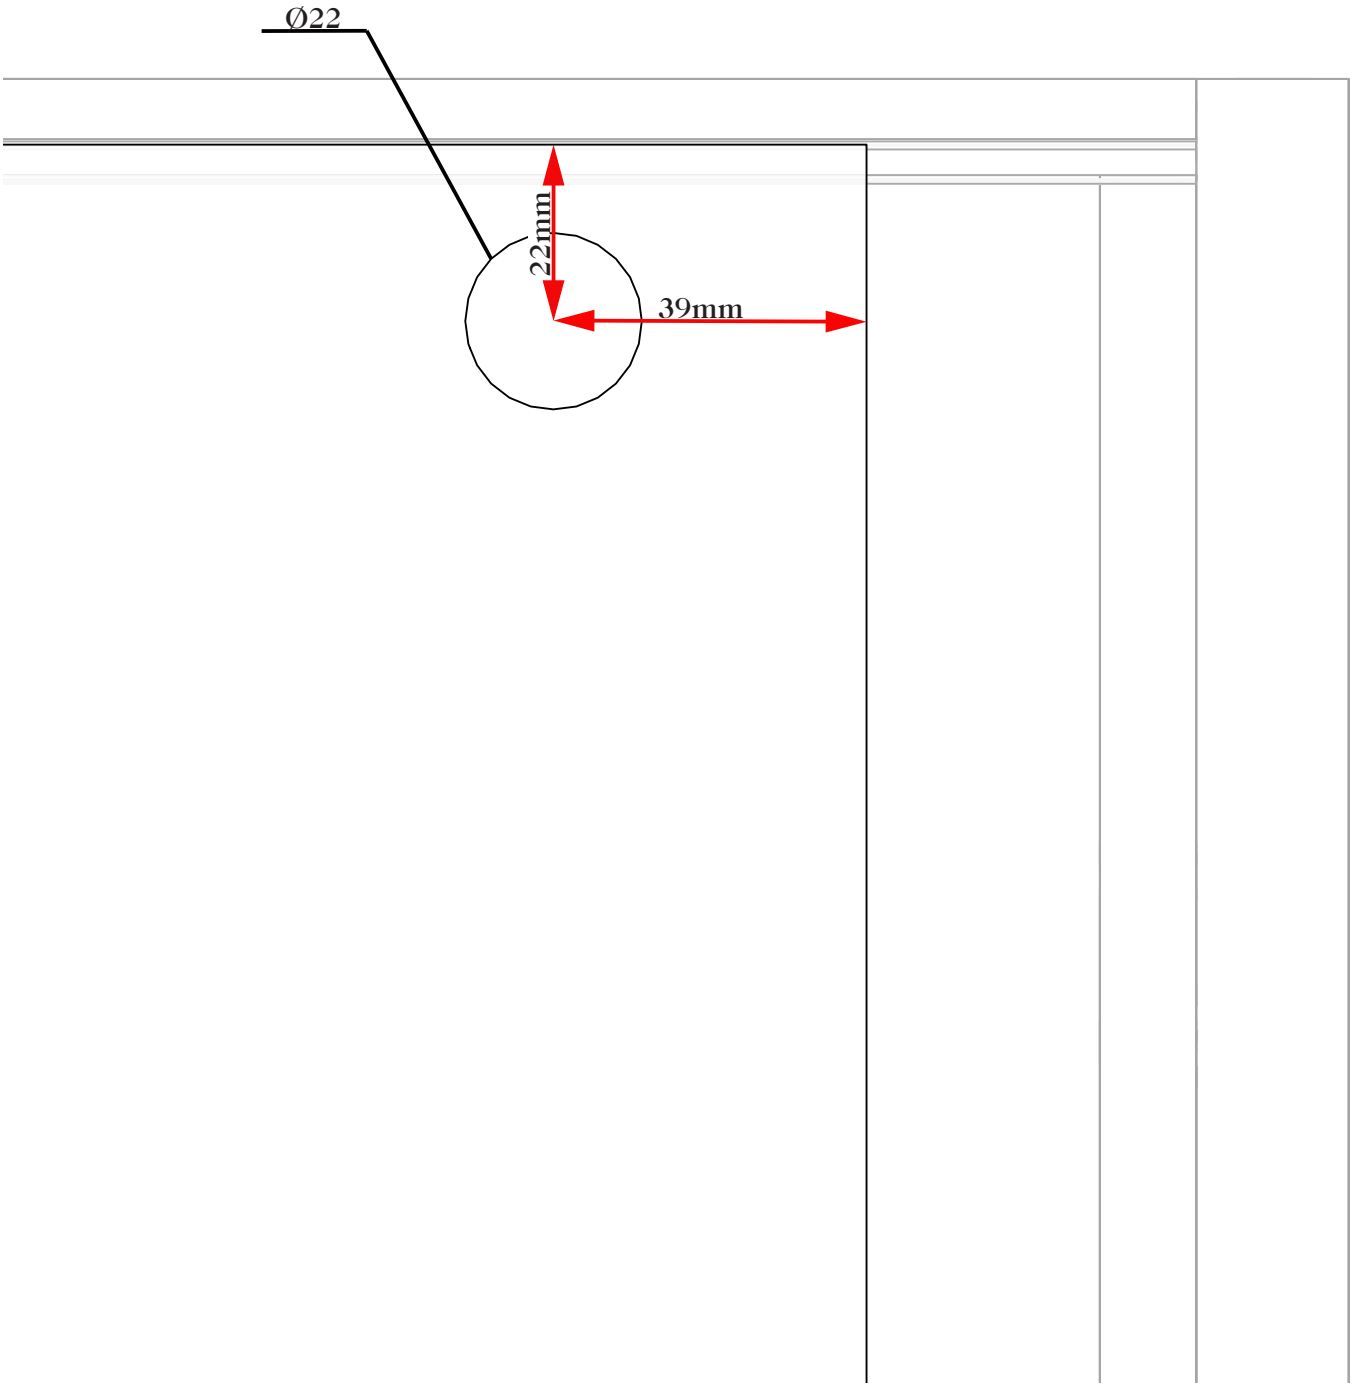

Assembly Instructions

Print in scale 1:1 and use as a template to mark up where to drill the hole.

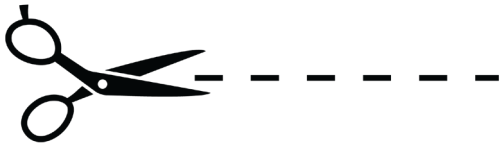

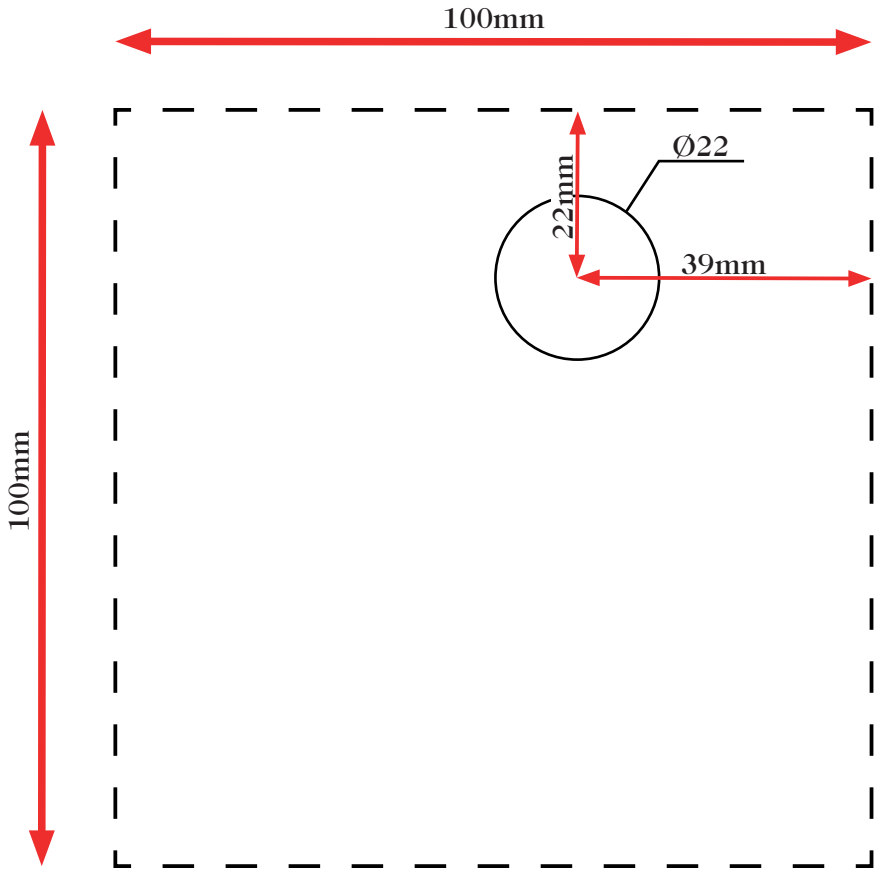

SCALE 1:1

Assembly Instructions

1

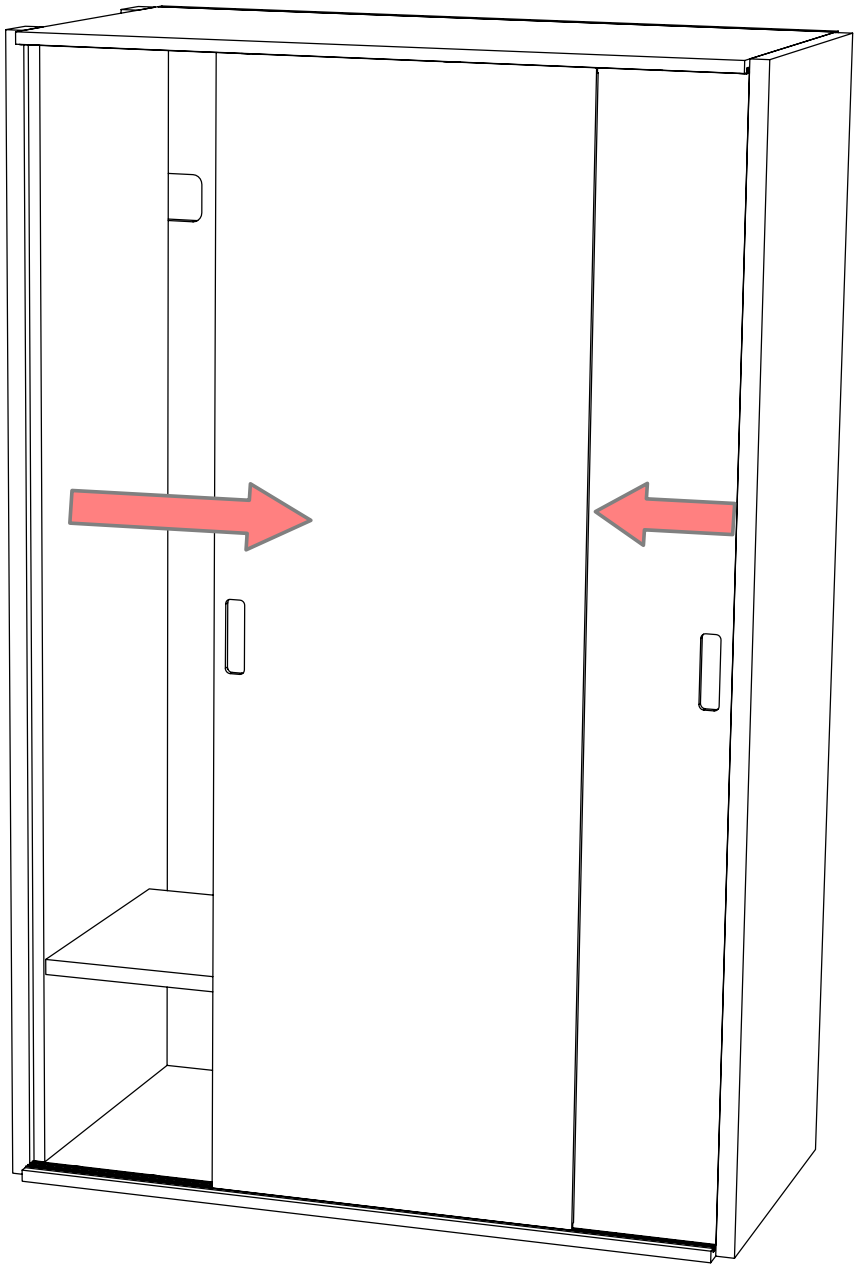

vre@senab.com

Assembly Instructions

2

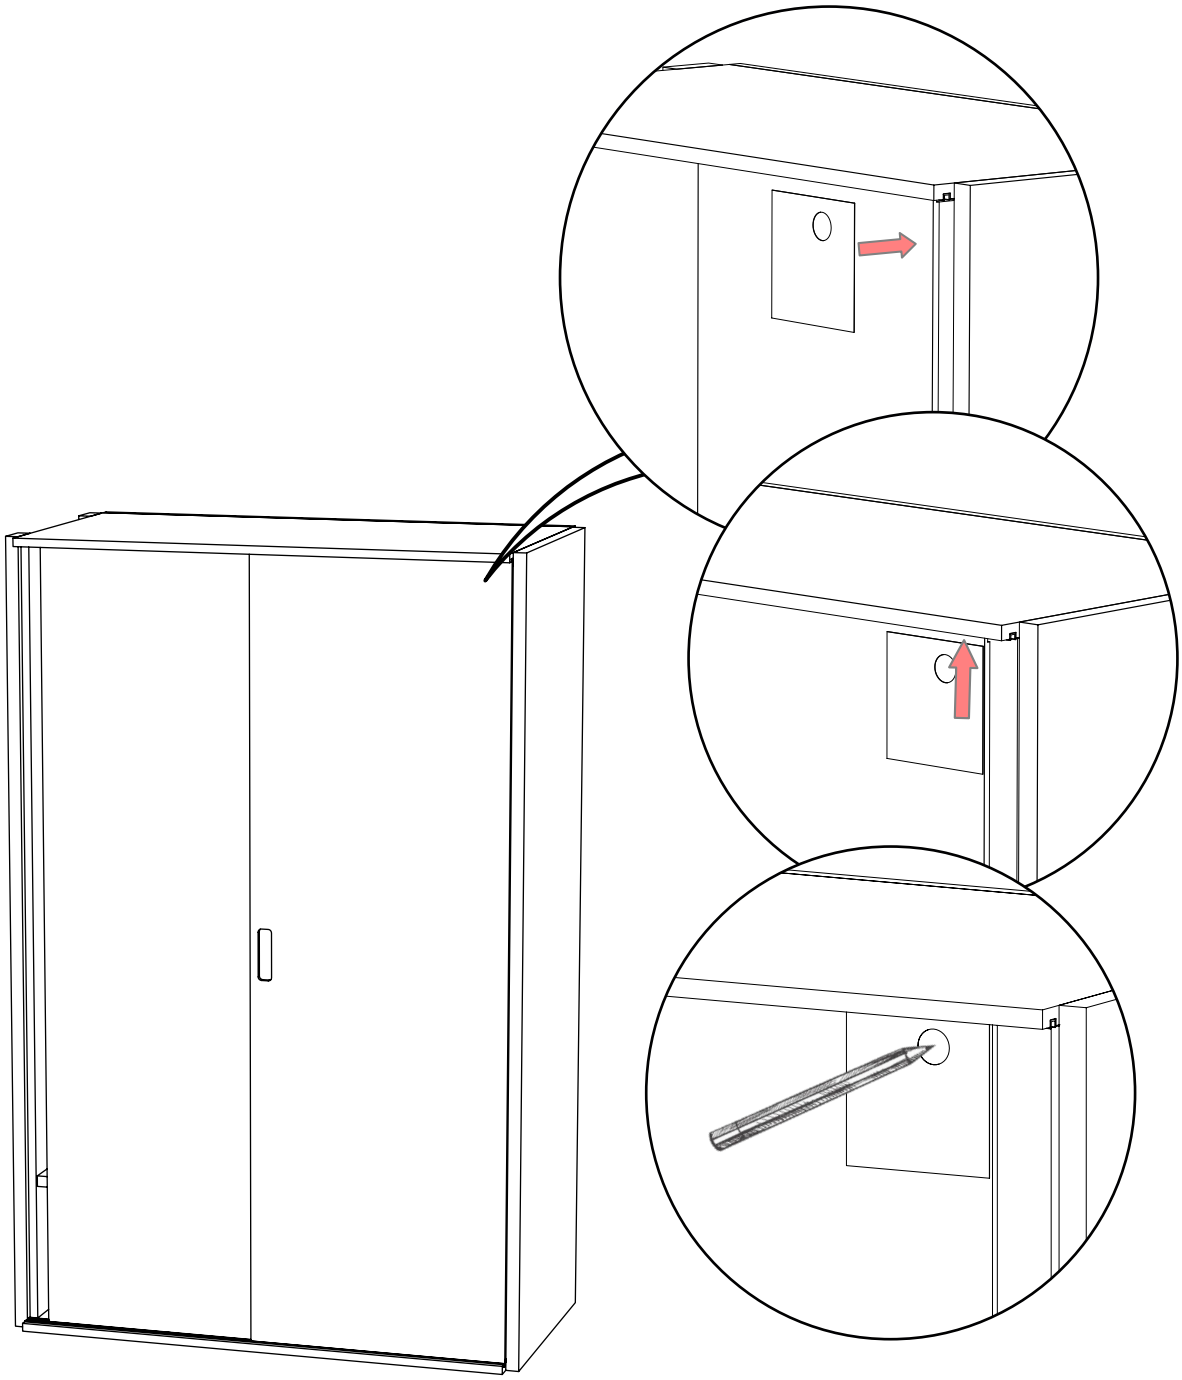

Assembly Instructions

3

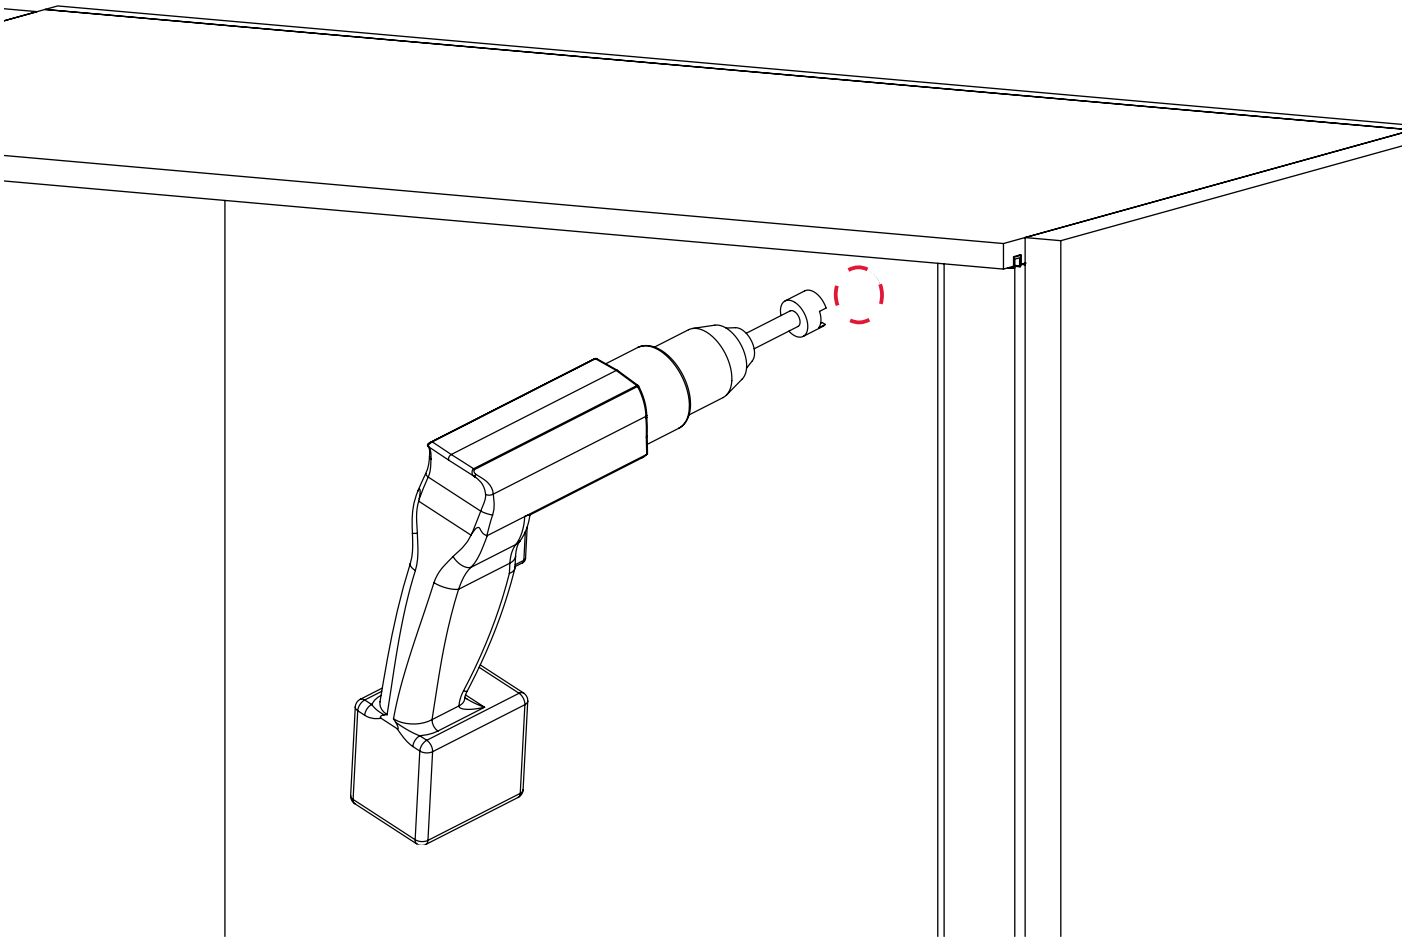

Assembly Instructions

4

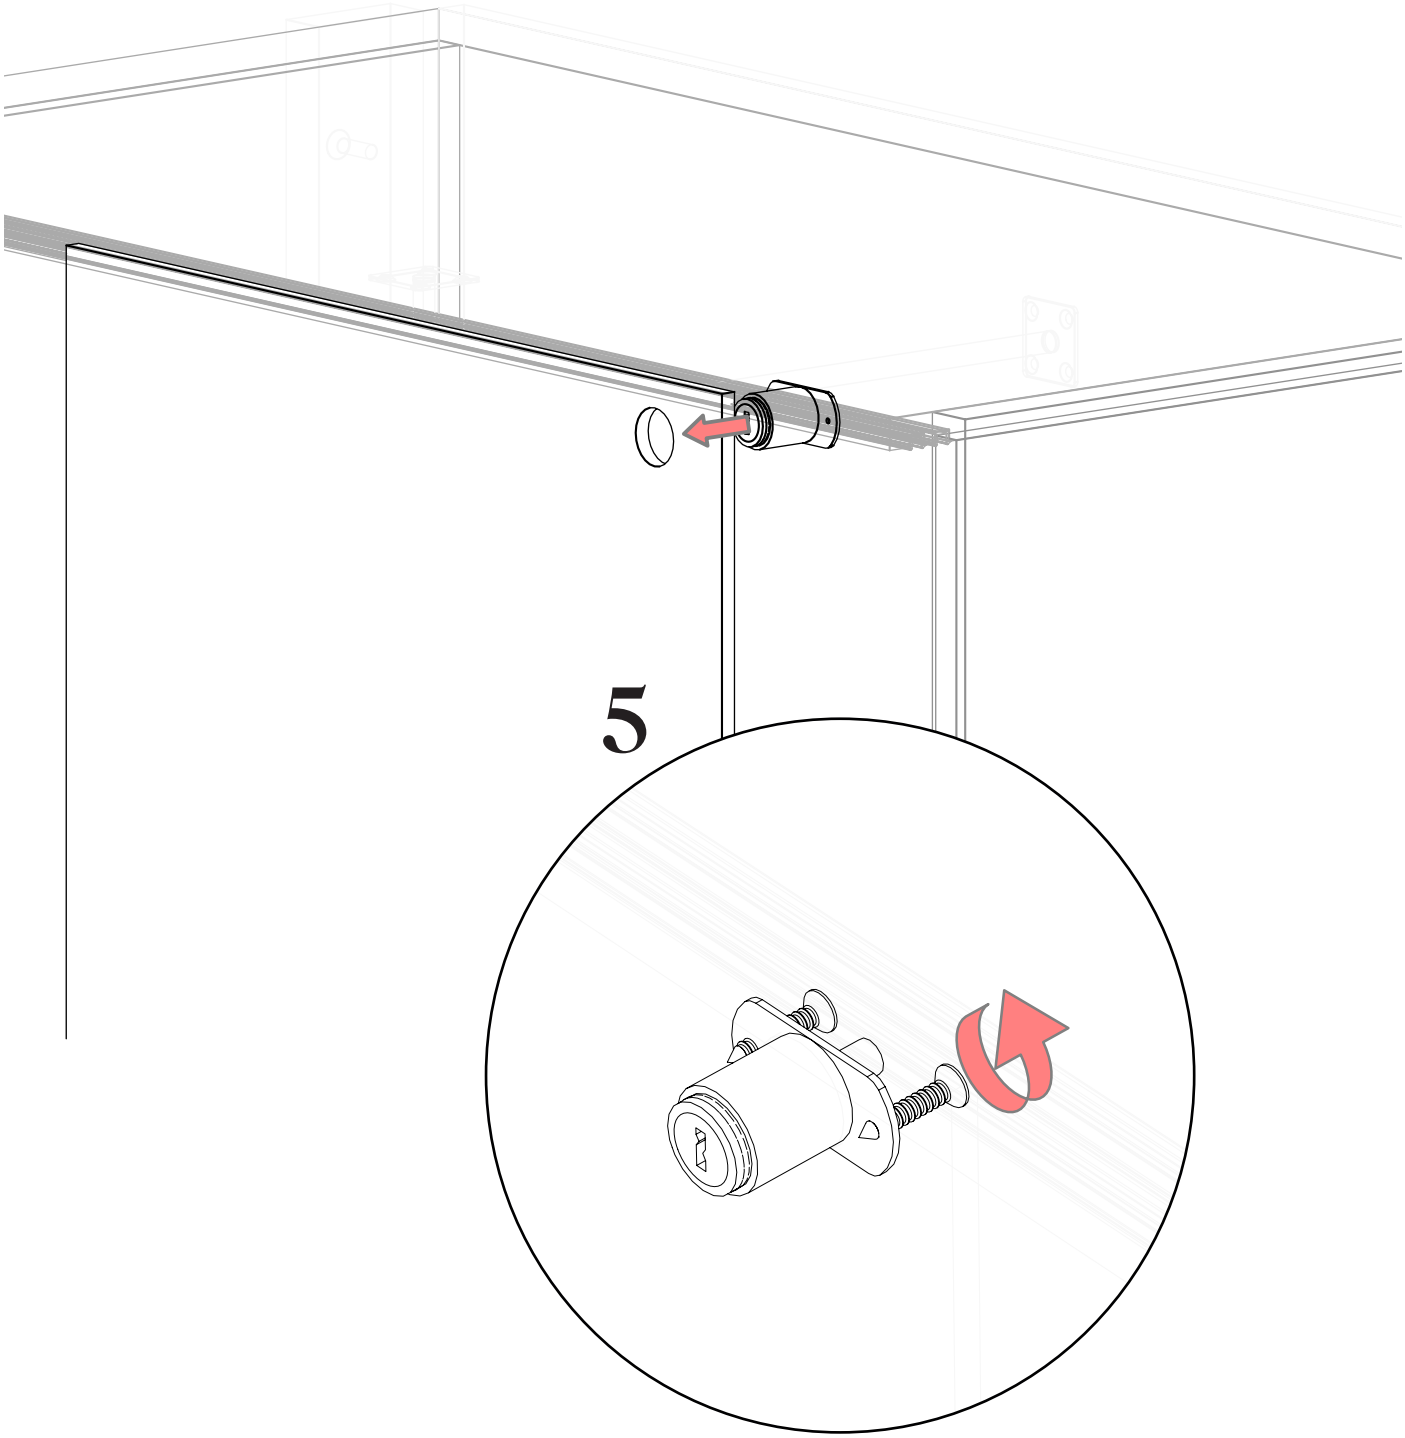

Assembly Instructions

6

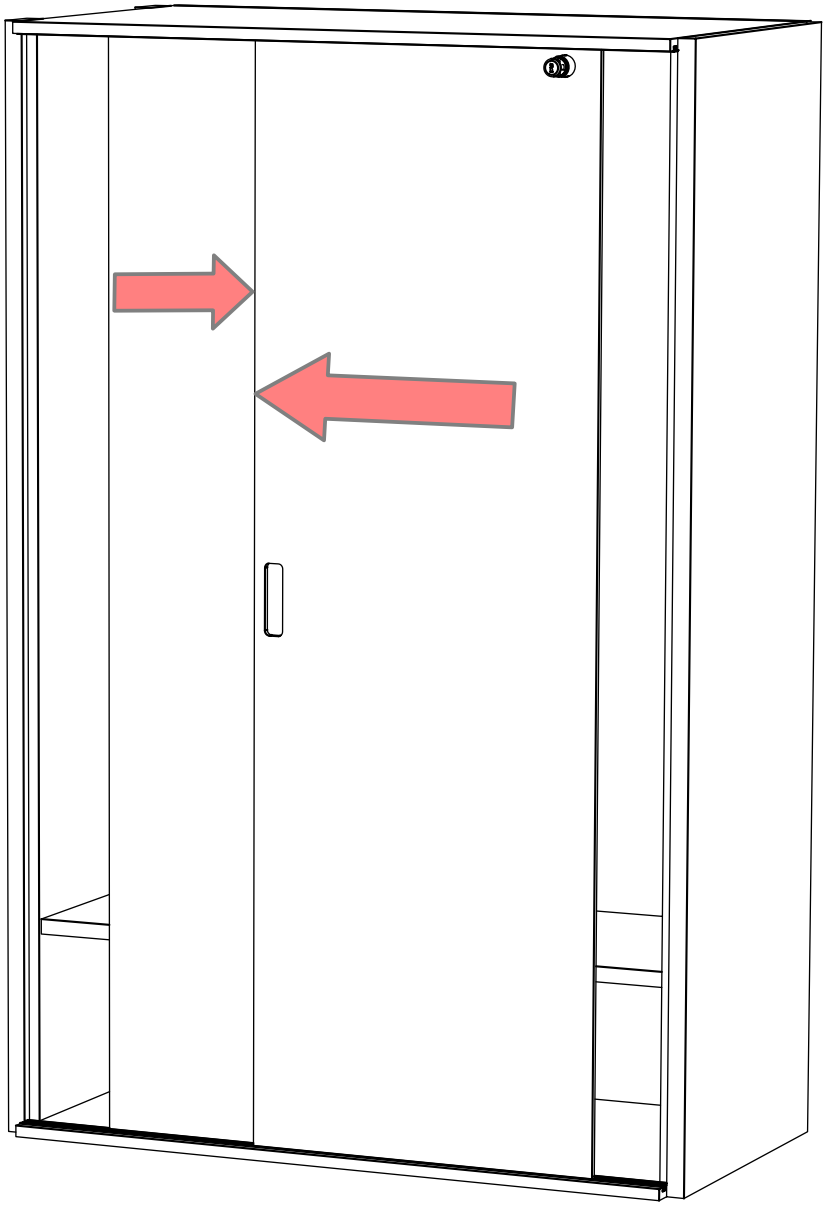

Assembly Instructions

7
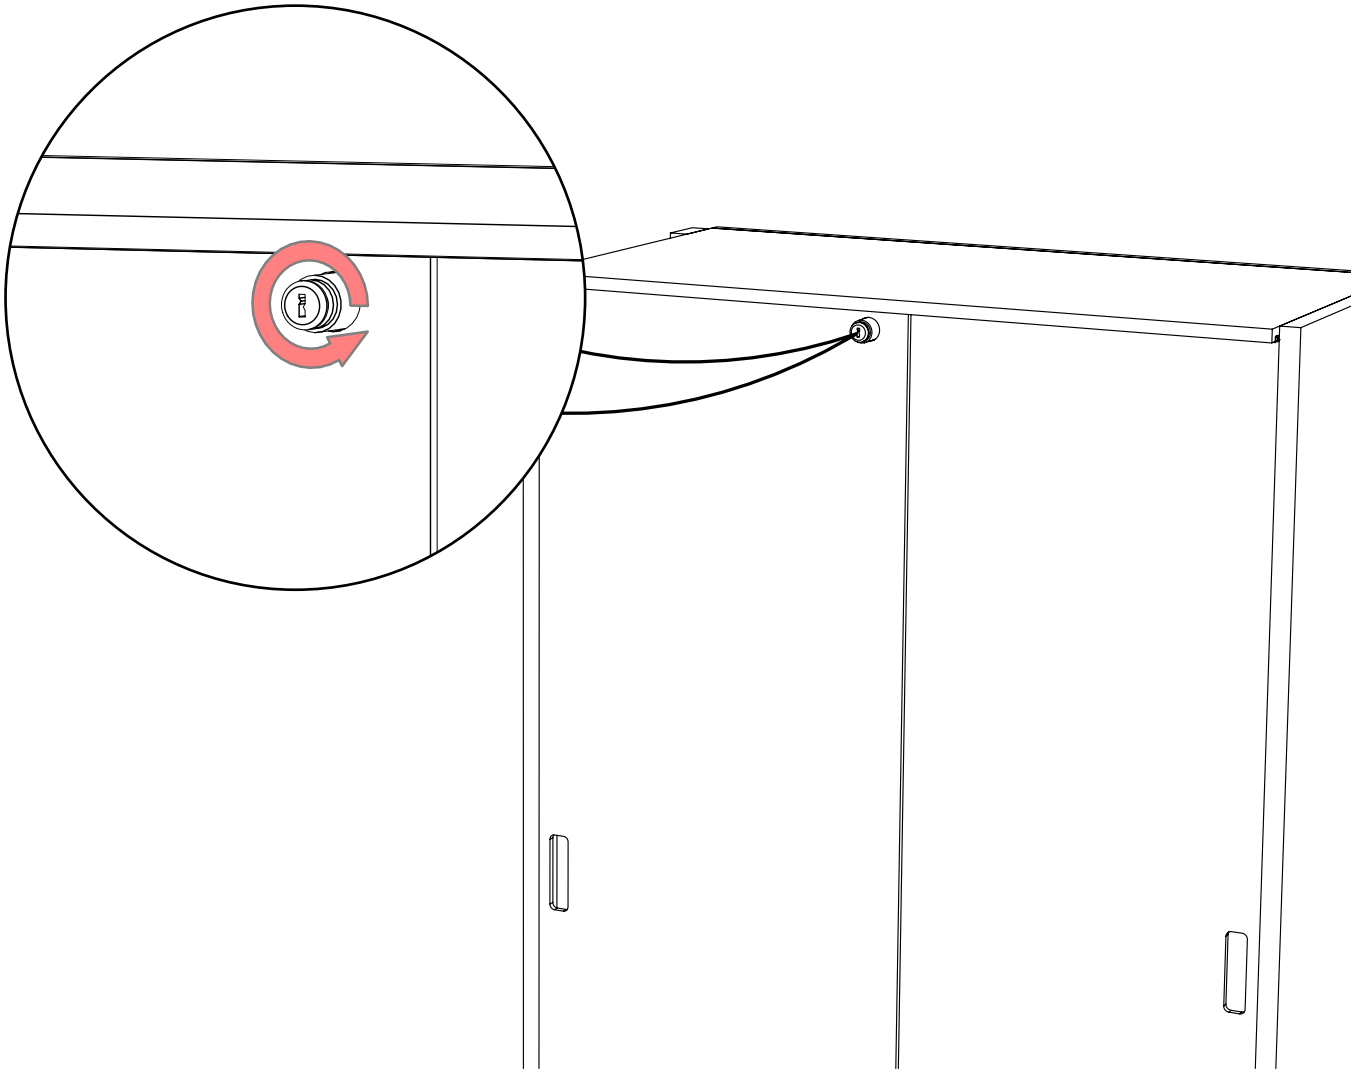
PRESS & TURN = LOCKED