


## Mounting the component tray

1

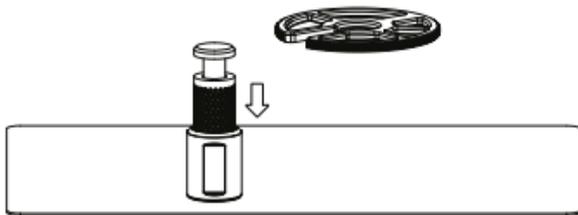


Place the PCBite holder on a base plate and press the sleeve downwards

2




Use the slot and slide the component tray over the pin

3

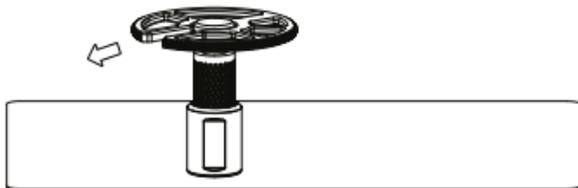

The component tray is in place when the pin is aligned with the center hole.

4

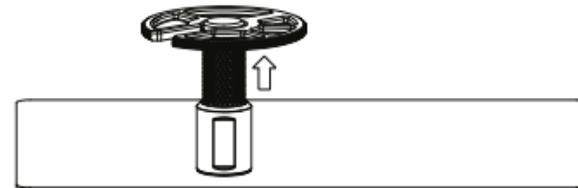

Release the spring loaded sleeve. Now the component tray is secured.