


SimWay

Mount rail and reddot

1. Remove the rear sight by unscrew this screw

2. Gentle bend up the upper part until you see a second screw, unscrew this screw

3. Remove the rear sight.

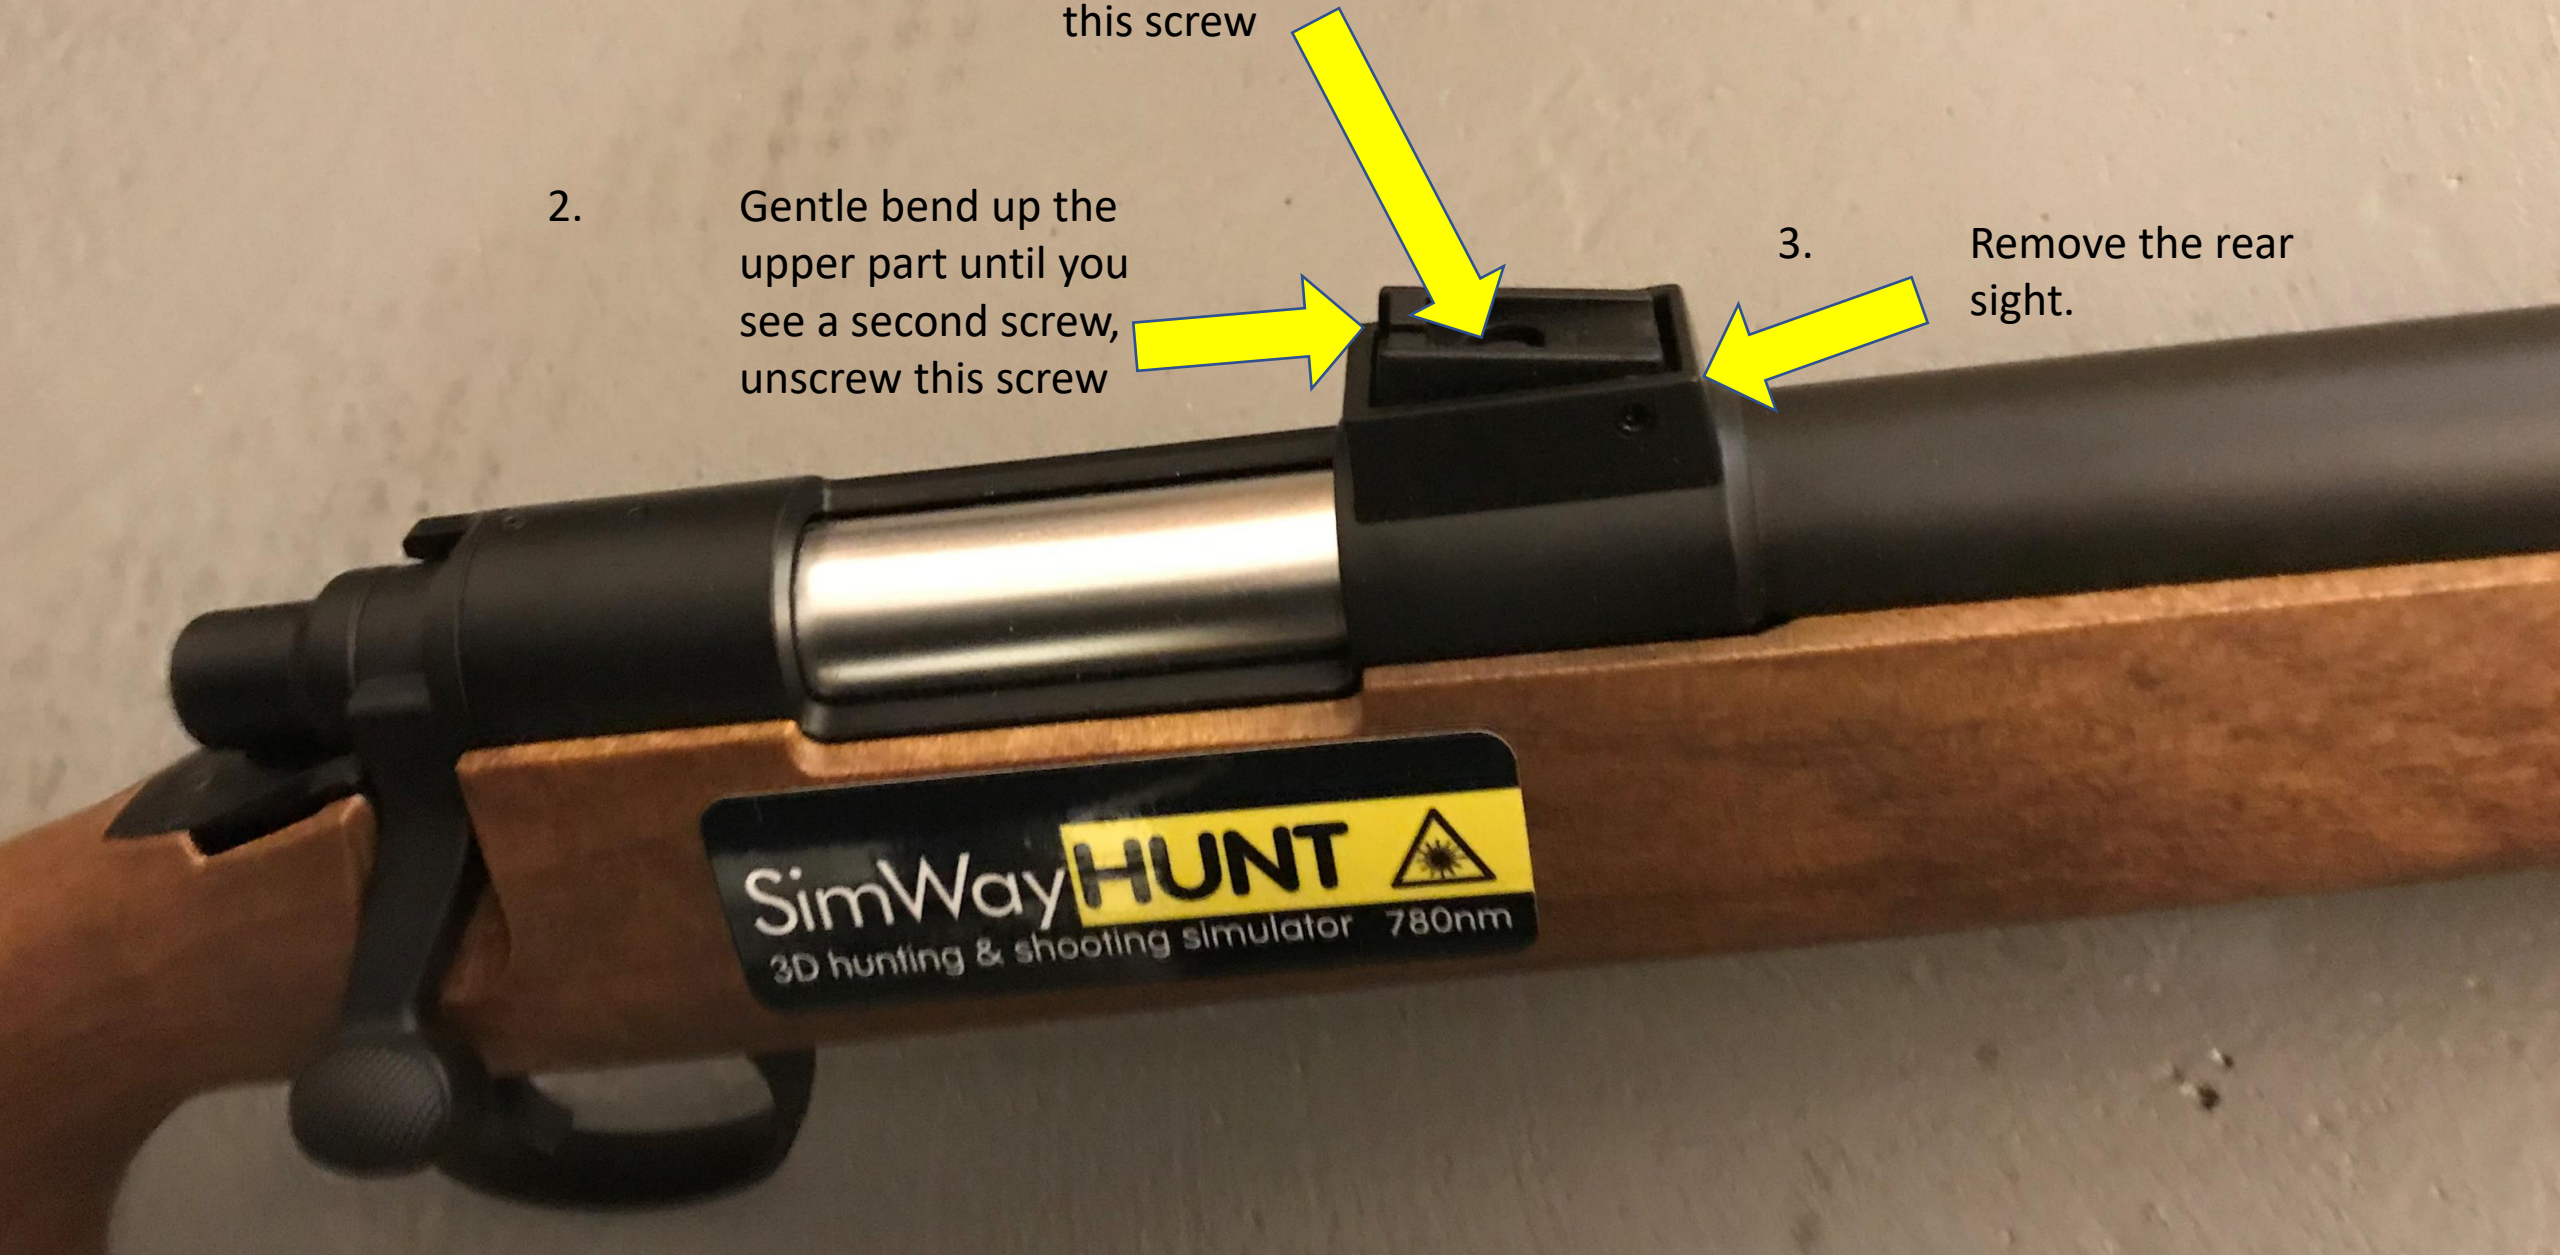

Mount this rail where the rear sight was



Mount the reddot sight at the rail.

