



A		Wheel 125 (without break) x 4pcs
B		Locknut M10 2pcs
C		Bolt M10x30 4pcs
D		Hex bolt M8x30, locknut M8 x 2set
E		Hex bolt M8x25, locknut M8 x 2set
F		Steel end cap with transparent plastic cover 2pcs
G		Allen key 6mm (1pcs) Spaner 13&17mm (2pcs)


ASSEMBLY INSTRUCTION (KM 4202- K)




Step 1:
Assemble the wheels on the bottom frame.

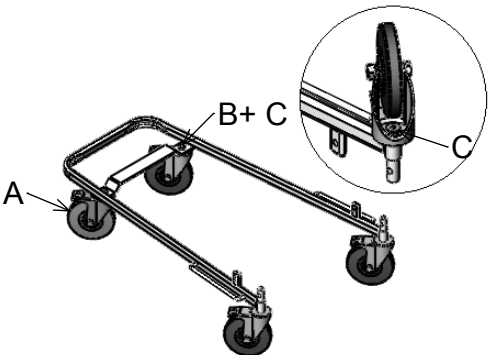

Step 2:
Don't cut off the rope between the bottom shelf and back leg. Assemble the back leg to bottom frame.

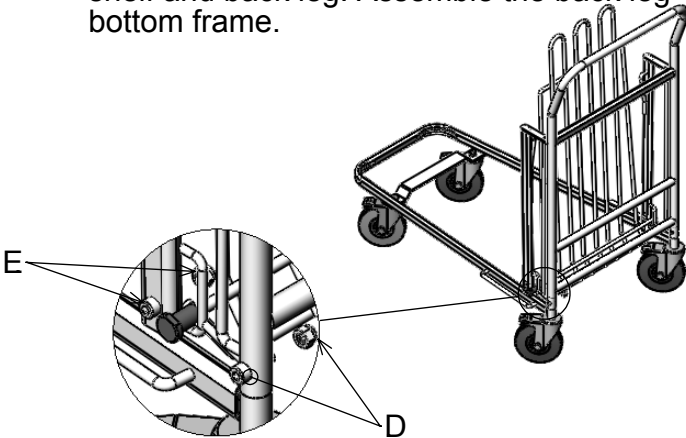


Step 3:
+ Cut off the rope
+ Assemble the top basket

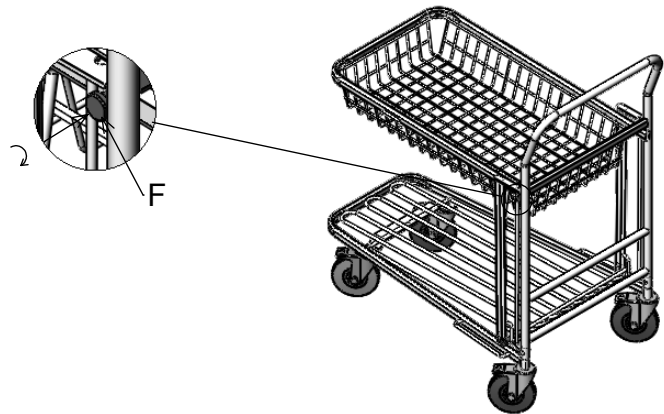

Finished.




A		Räder 125mm, 4 Stück Ungebremsst
B		Sicherheits- Muttern M10, 2 Stück
C		Senkkopfschraube M10, 4 Stück
D		Imbusgewindeschraube M8x30, Muttern M8, 2 Paar
E		Imbusgewindeschraube M8x25, Muttern M8, 2 Paar
F		Endkappen, 2 Stück
G		Imbusschlüssel 6 mm Schraubenschlüssel 13+ 17 mm


Montageanleitung für (KM 4202- K)




Schritt 1: Montieren Sie die Räder am Untergestell.

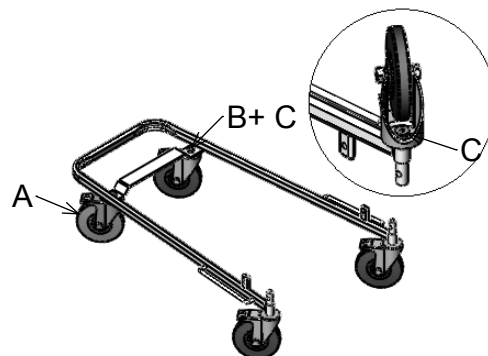

Schritt 2: Montieren Sie das Rückenteil
am Untergestell.

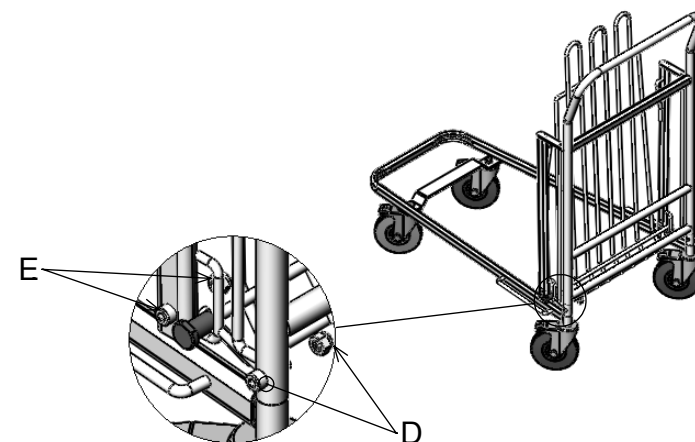

Schritt 3:
+, Montieren Sie den unteren Boden
+, Montieren Sie den oberen Körbchen

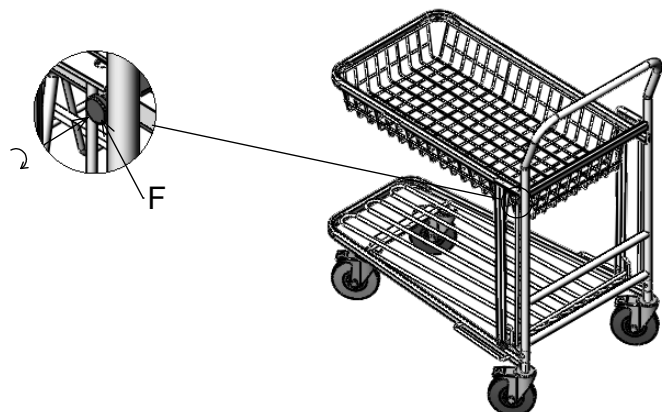

Fertig.

