


AUFBAUANLEITUNG

TRANSPORTWAGEN 2300 000




MATERIALAUFLISTUNG

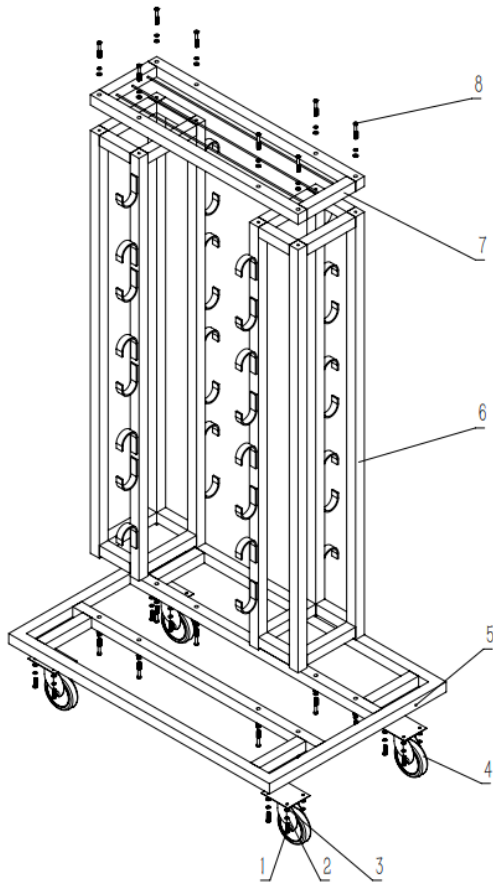

1. Außensechskantschraube
(16 Stück M8x20)
2. Federteller (32 Stück M8)
3. Flache Unterlegscheibe (32
Stück M8)
4. Rad (4 Stück)
5. Unterer Rahmen (1 Stück)
6. Standsäule (2 Stück)
7. Oberer Rahmen (1 Stück)
8. Innensechskantschraube
(16 Stück M8x55)


AUFBAUANLEITUNG

Schritt 1: Montieren Sie die Räder:

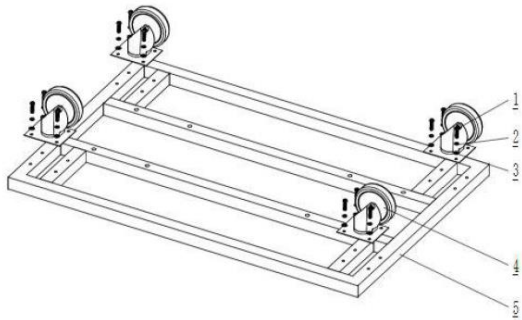


Befestigen Sie die 4 Räder mit jeweils 1 Schraube, 3 flachen Unterlegscheiben und 2 Federpuffern an den fünf markierten Stellen am Bodenrahmen (5) und drehen Sie die Schrauben fest.

Schritt 2: Installieren Sie die Säulen:

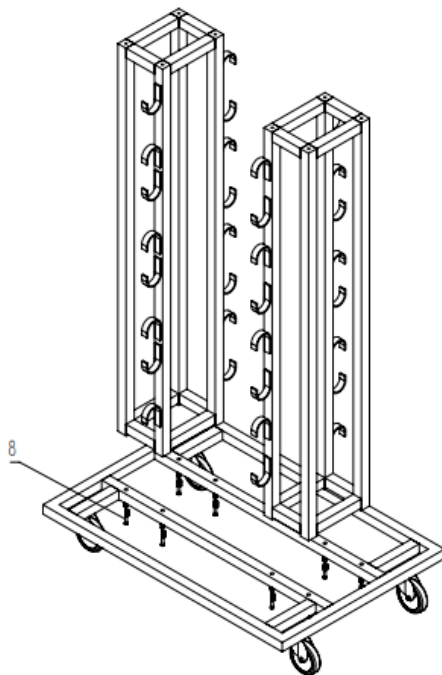

Zur Befestigung der Säulen am unteren Rahmen sind 8 Schrauben, 3 flache Unterlegscheiben und 2 Federteller vorgesehen. Montieren Sie diese am unteren Rahmen der Standsäulen.

Schritt 3: Montieren Sie den oberen Rahmen:

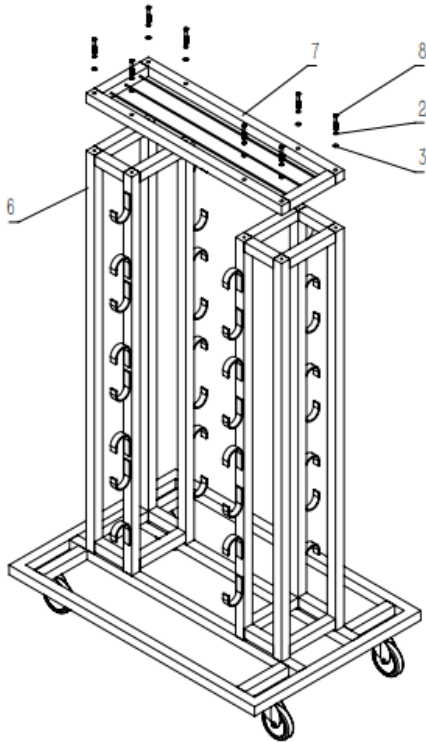

Bitte befestigen Sie zunächst 8 Schrauben, 3 flache Unterlegscheiben und 2 Federpuffer diagonal, um den oberen Rahmen (7) an den zwei Säulen zu befestigen.

Die Löcher am oberen Rahmen müssen so positioniert werden, dass sie mit den oberen Schraublöchern der Säulen übereinstimmen. Nach der Installation werden die restlichen 8 Schrauben montiert, aber noch nicht vollständig angezogen.

Schritt 4: Stellen Sie die Säule ein:


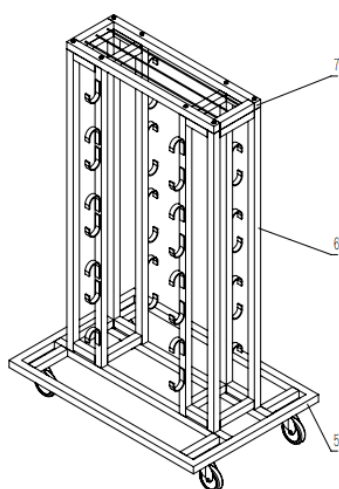


figure 1

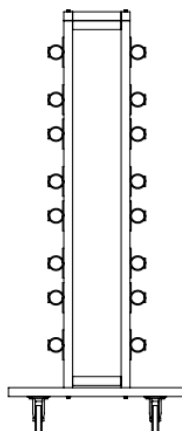

Positionieren Sie die Säulen wie in Abbildung 1 dargestellt.

Die beiden Säulen, der untere Rahmen (5) sowie die obere Konstruktion sollten in einer flachen Ebene aufeinander passen. Anschließend ziehen Sie alle 8 Schrauben fest.

SO ERREICHEN SIE UNS

Wenn Sie Fragen haben oder eine Beratung wünschen, kontaktieren uns bitte unter:

office@wasgermany.com

wasgermany.com

0049 41 08 41 88 0

WAS Germany
Am Oheberg 1
21224 Rosengarten




INSTRUCTION MANUAL

TROLLEY 2300 000




LIST OF MATERIALS

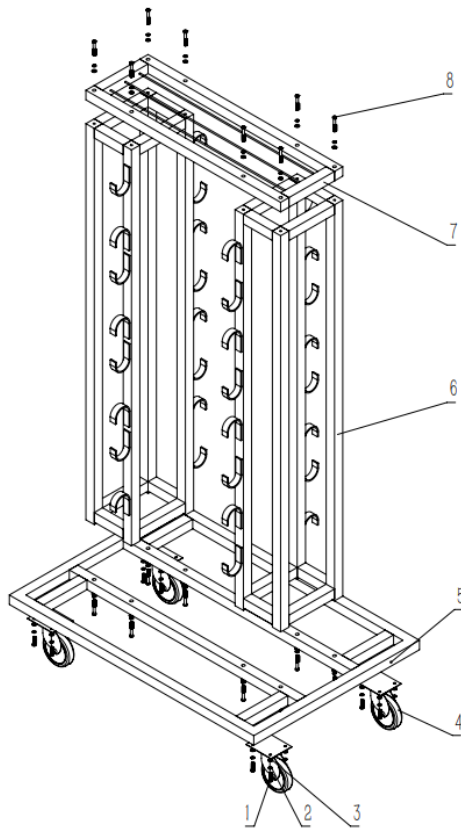

1. outer hexagon bolt
(16 pieces M8x20)
2. spring pad (32 pieces M8)
3. flat pad (32 pieces M8)
4. wheel (4 pieces)
5. bottom frame (1 piece)
6. stand column (2 pieces)
7. top frame (1 piece)
8. inner hexagon bolt
(16 pieces)


INSTALLATION INSTRUCTION

Step 1: install the wheels.

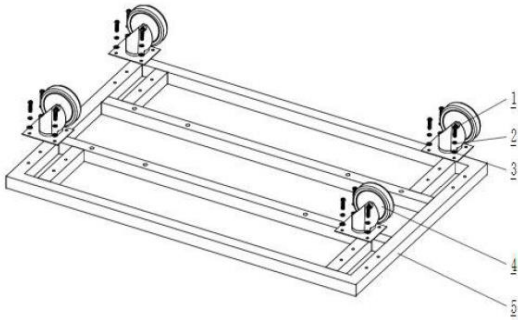


Fix the 4 wheels on the (5) bottom frame with 1 bolt, 3 flat pads and 2 spring pads, and lock the bolts.

Step 2: install the column:

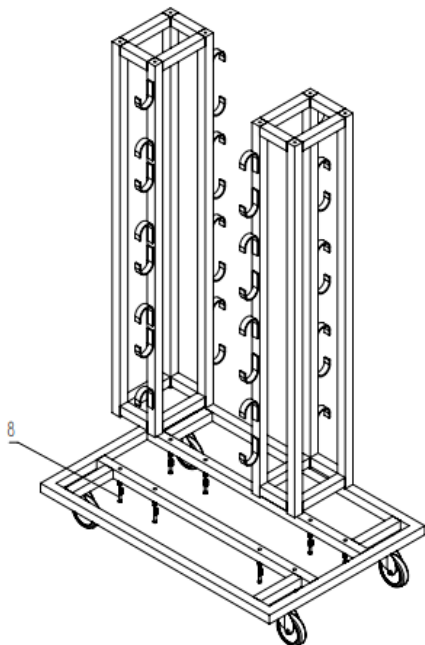

8 bolts, 3 flat pads and 2 spring pads were used to fix the column on the bottom frame, but the 8 bolts were not locked.


Step 3: install the upper frame:

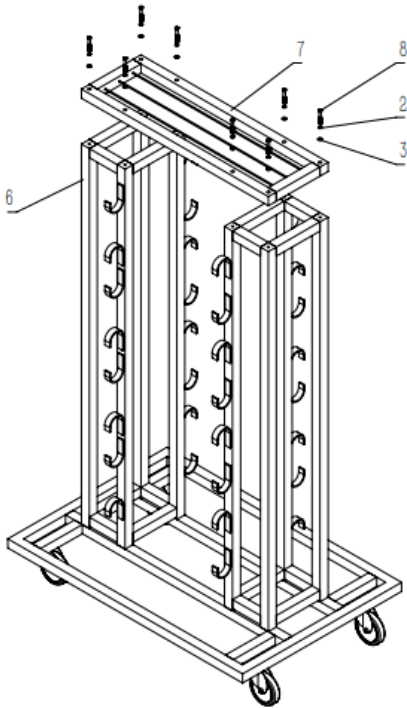

Firstly, 8 bolts were twisted diagonally, 3 flat pads and 2 spring pads were added to fix the (7) upper frame on two (6) columns.

During the process, the position of (6) columns could be adjusted to make the hole position of (7) upper frame align with the corresponding hole position above (6) columns. After installation, the remaining 8 bolts are installed, but all 8 bolts are not tightened.

Step 4: adjust the column:

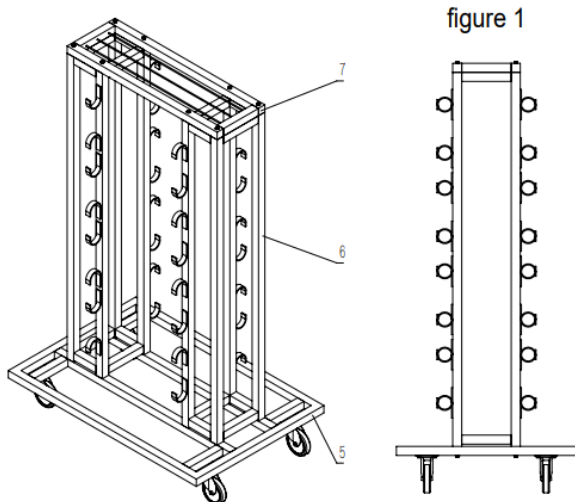

Adjust the position of (6) columns to make the two columns as shown in Fig. 1.

The two (6) columns and the bottom frame of (5) upper frame (7) are flat and good-looking, and then tighten all 8 bolts.

HOW TO CONTACT US

If you have any questions or require advice, please contact us:

office@wasgermany.com
wasgermany.com
0049 41 08 41 88 0

WAS Germany
Am Oheberg 1
21224 Rosengarten

