

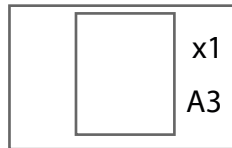


Grillhus **LAPLANDSKÅTA**


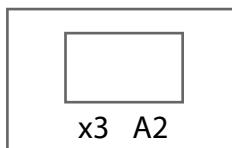


LIST OF DETAILS

Wall elements

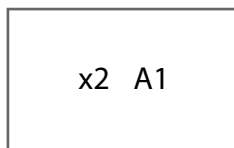

Roof elements

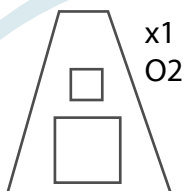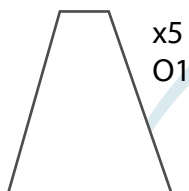

Roof hat



Door




Corner cover elements



Fluted brim planks



Triangle details



Door posts




Inner corner strips



Roof's inner strips



Door strips




Bench beams




Bench planks





Window strips




Door's triangle details




Floor grid elements

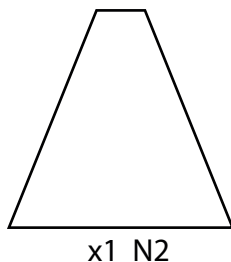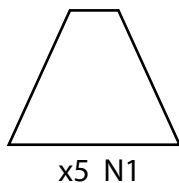


Cabin Details

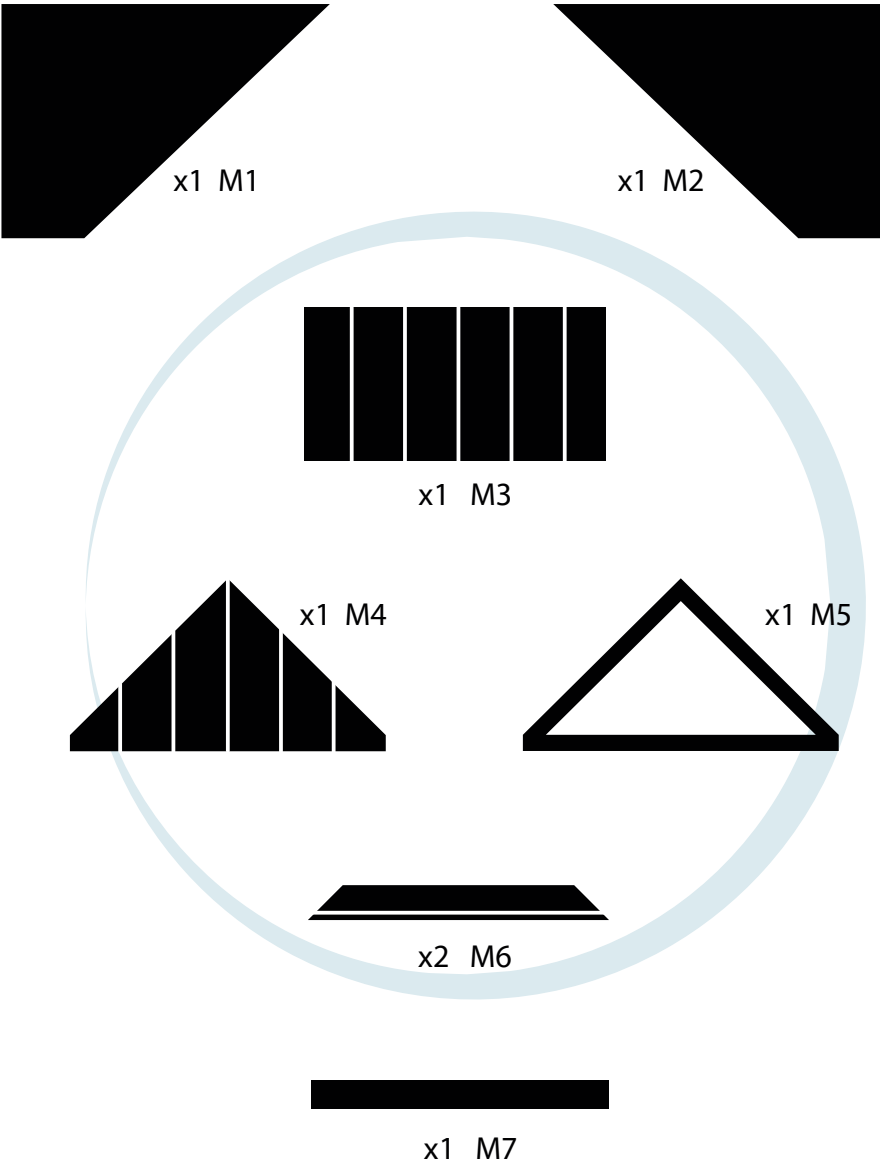

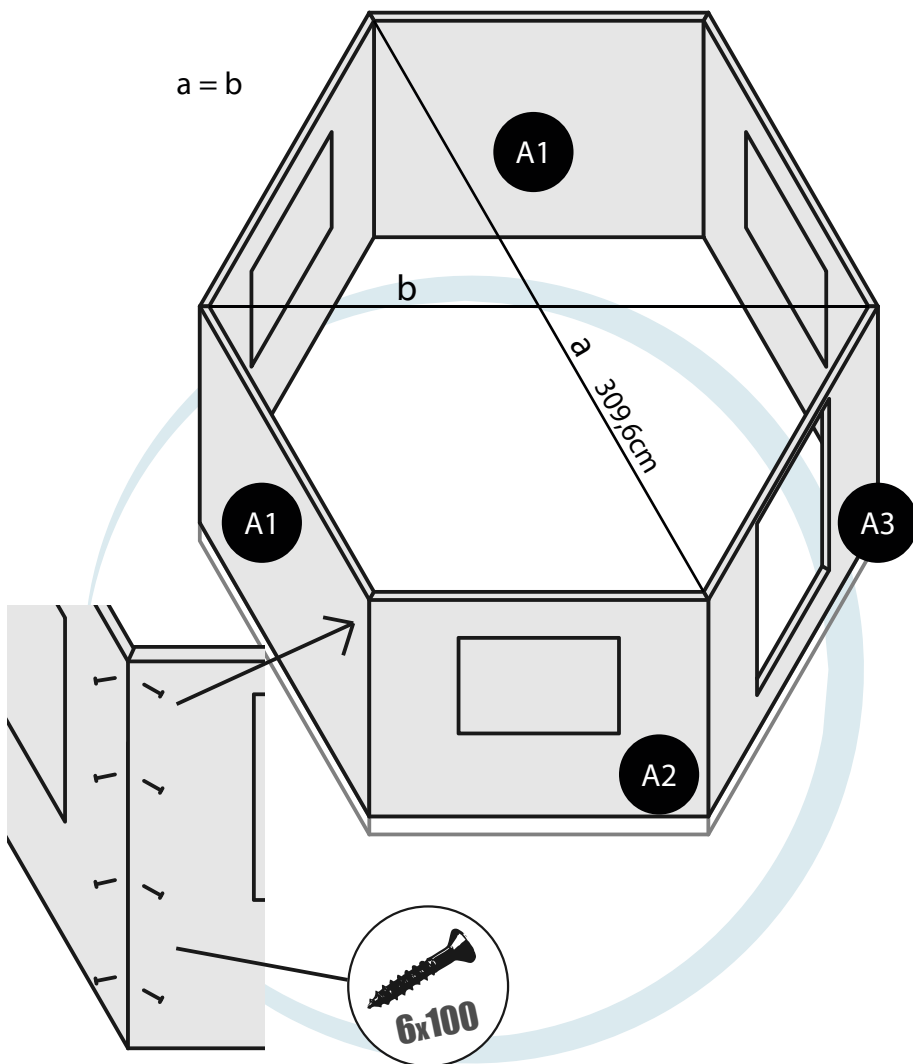


Attach the wall elements to each other using 8 screws per corner. The wall element with the openable window should be opposite to the wall element for the door.


6

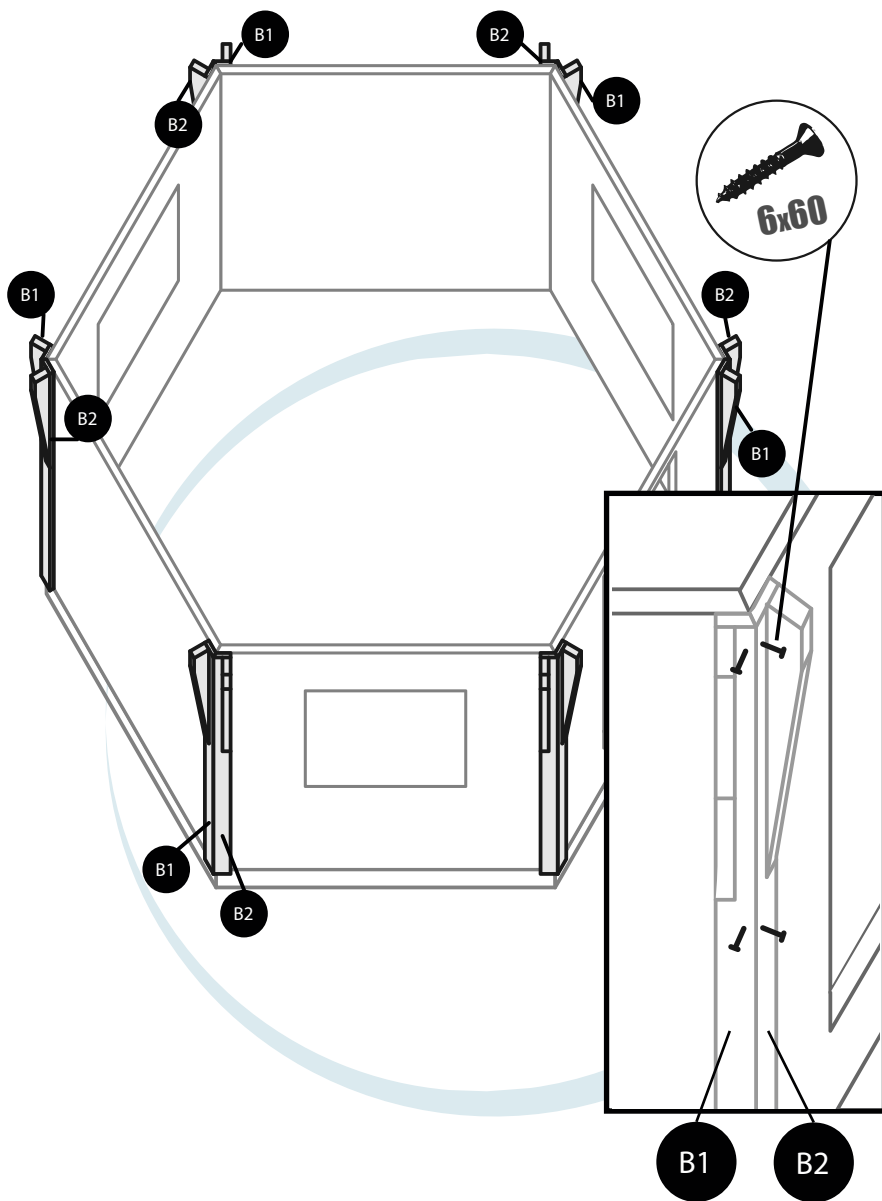



Make sure the planks inner edge is even with the walls inner side and that the corners fit nicely.

8

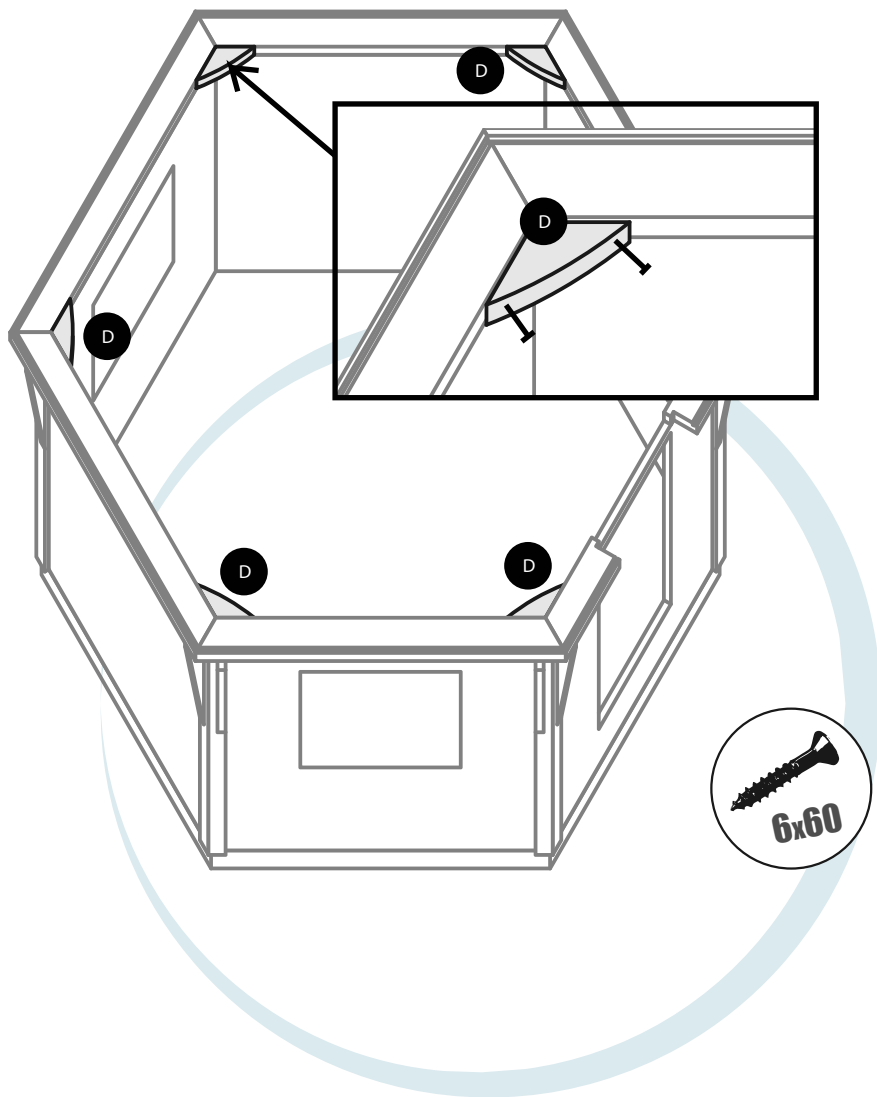


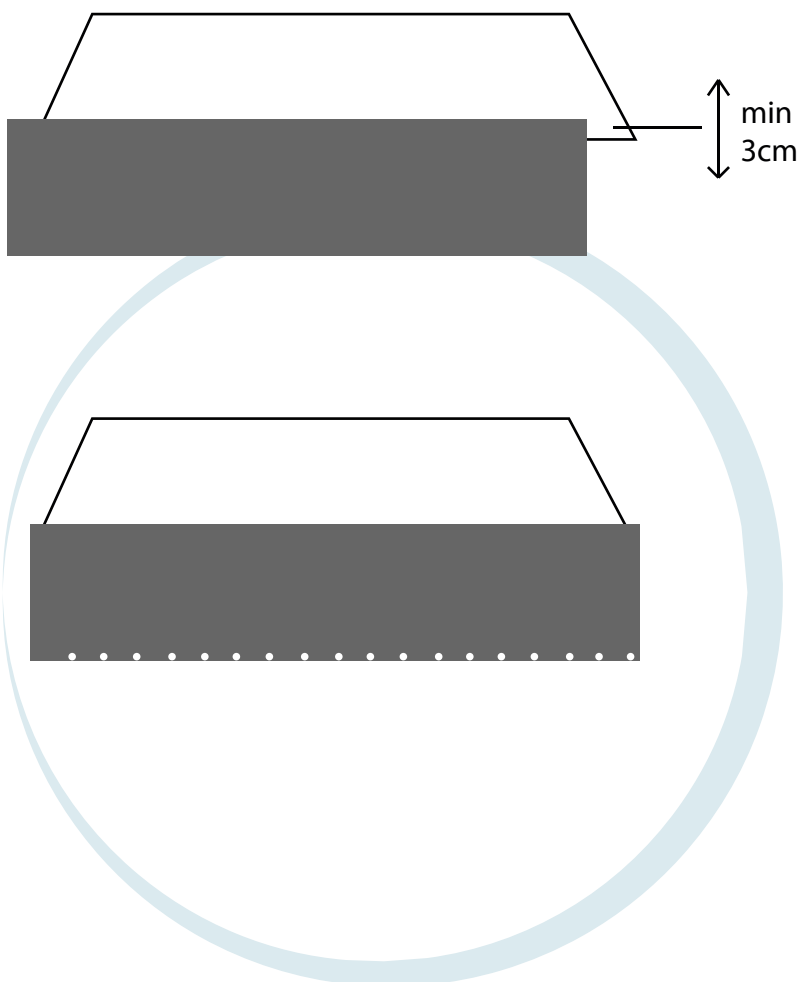

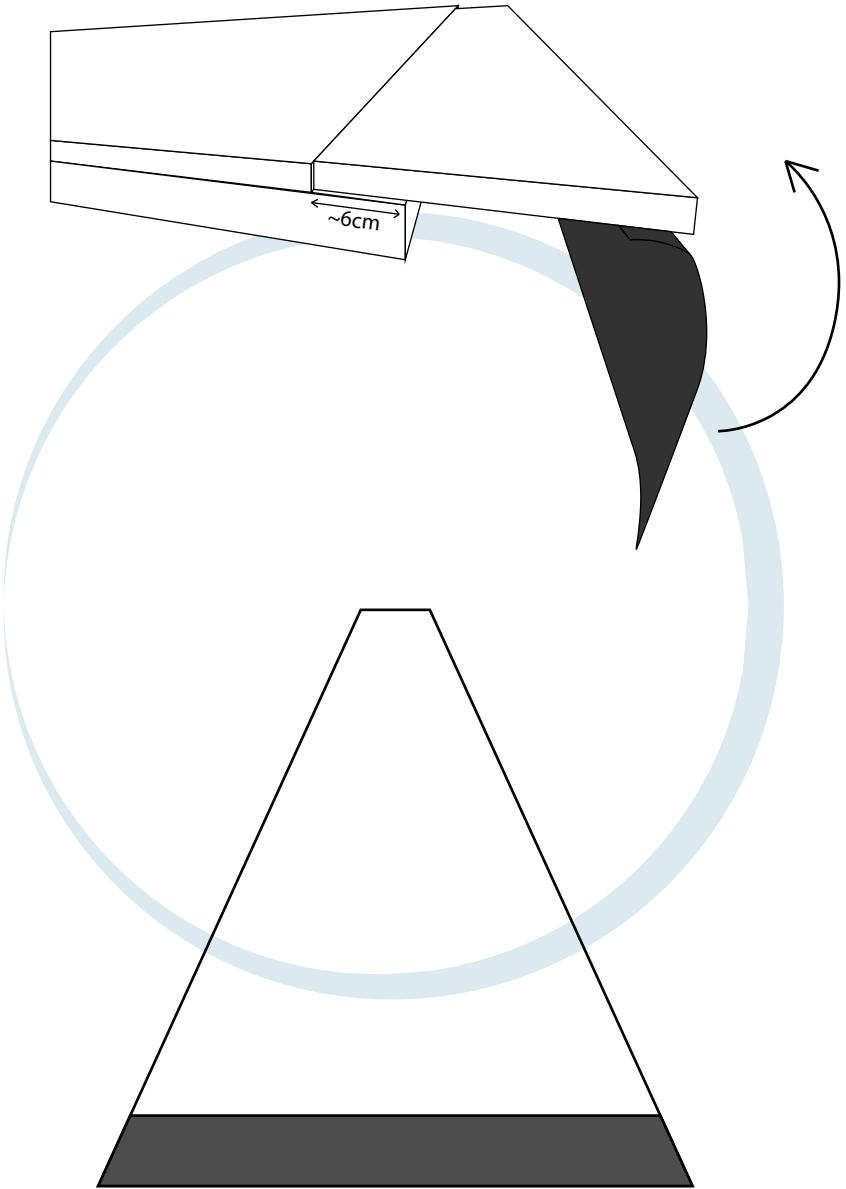

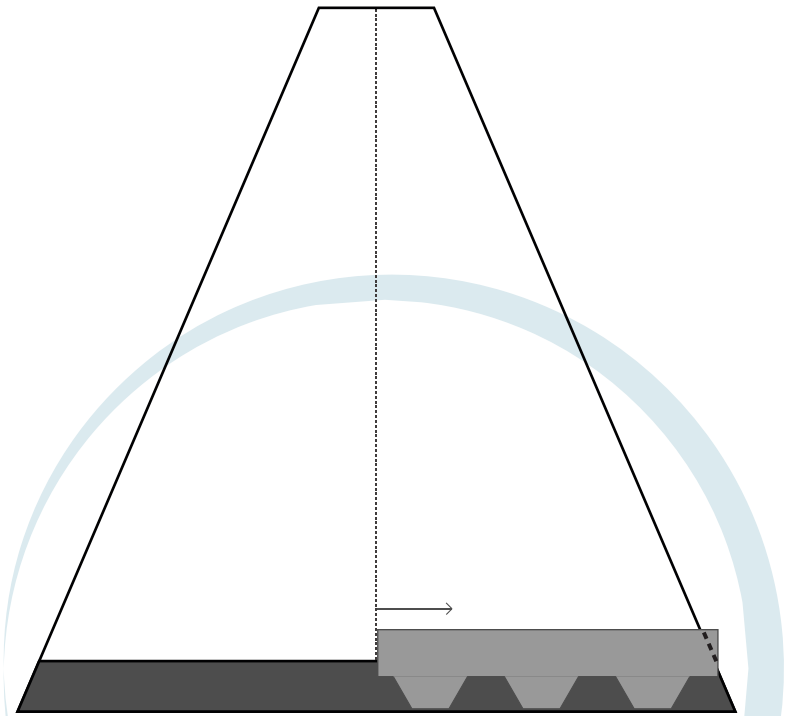



Always start from the center.

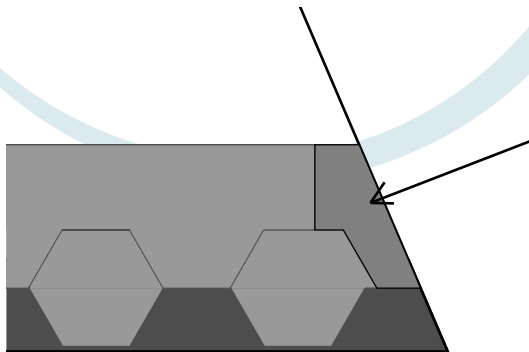


Use leftovers for the edges.



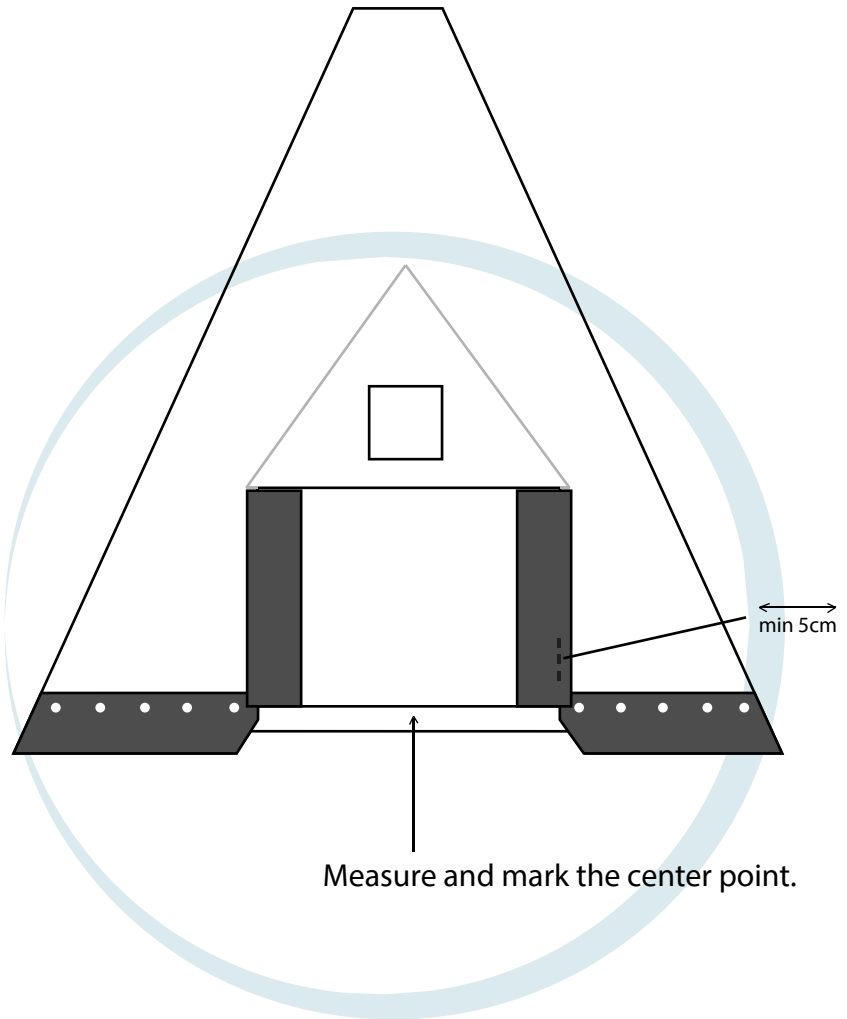


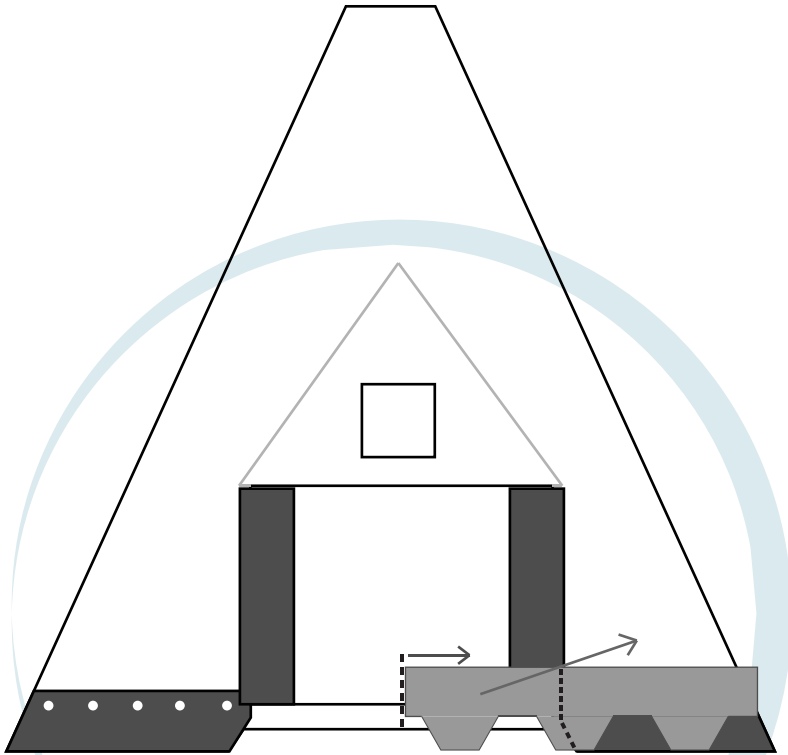


Always start from the center.

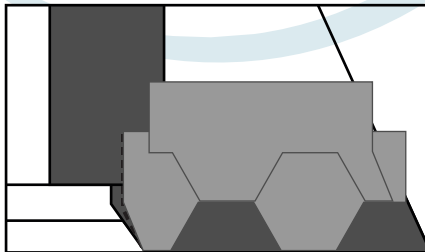




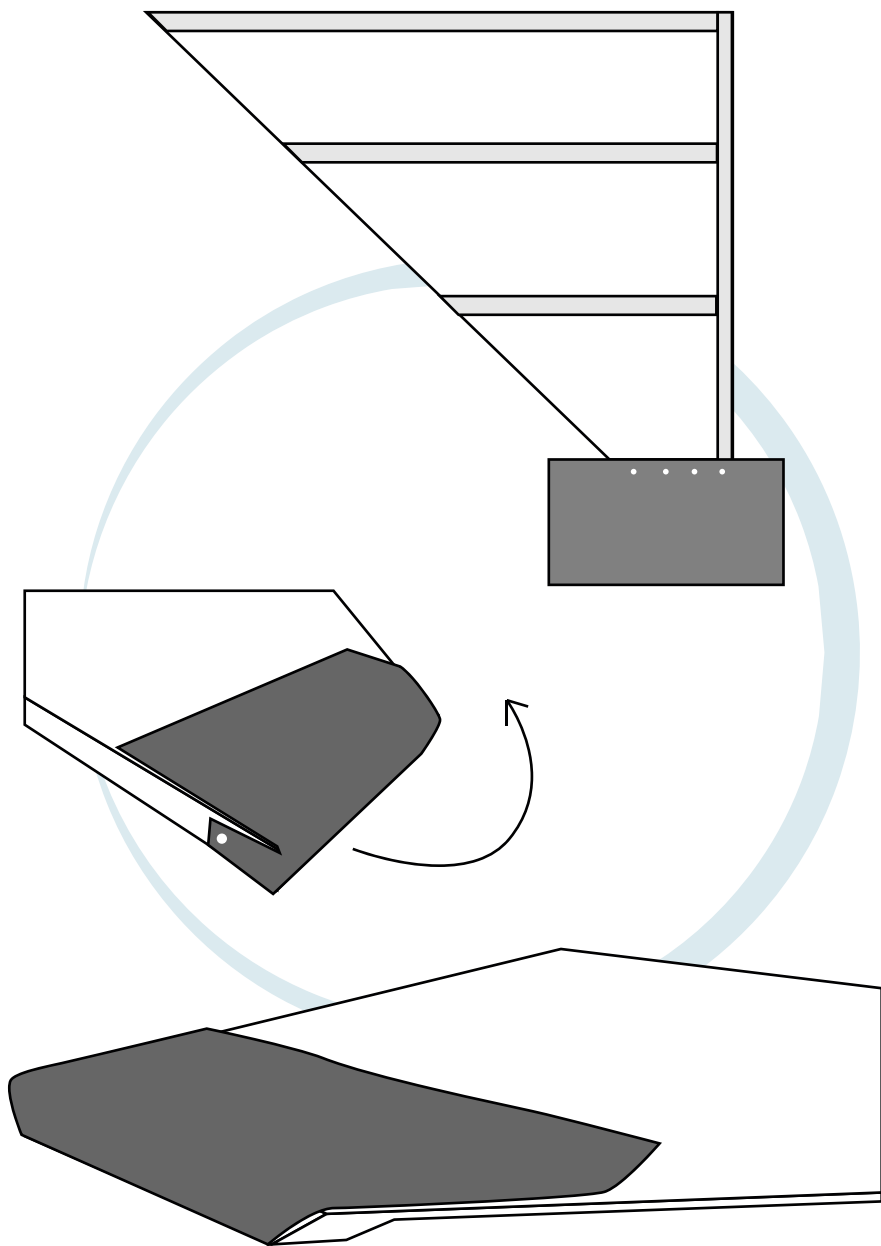


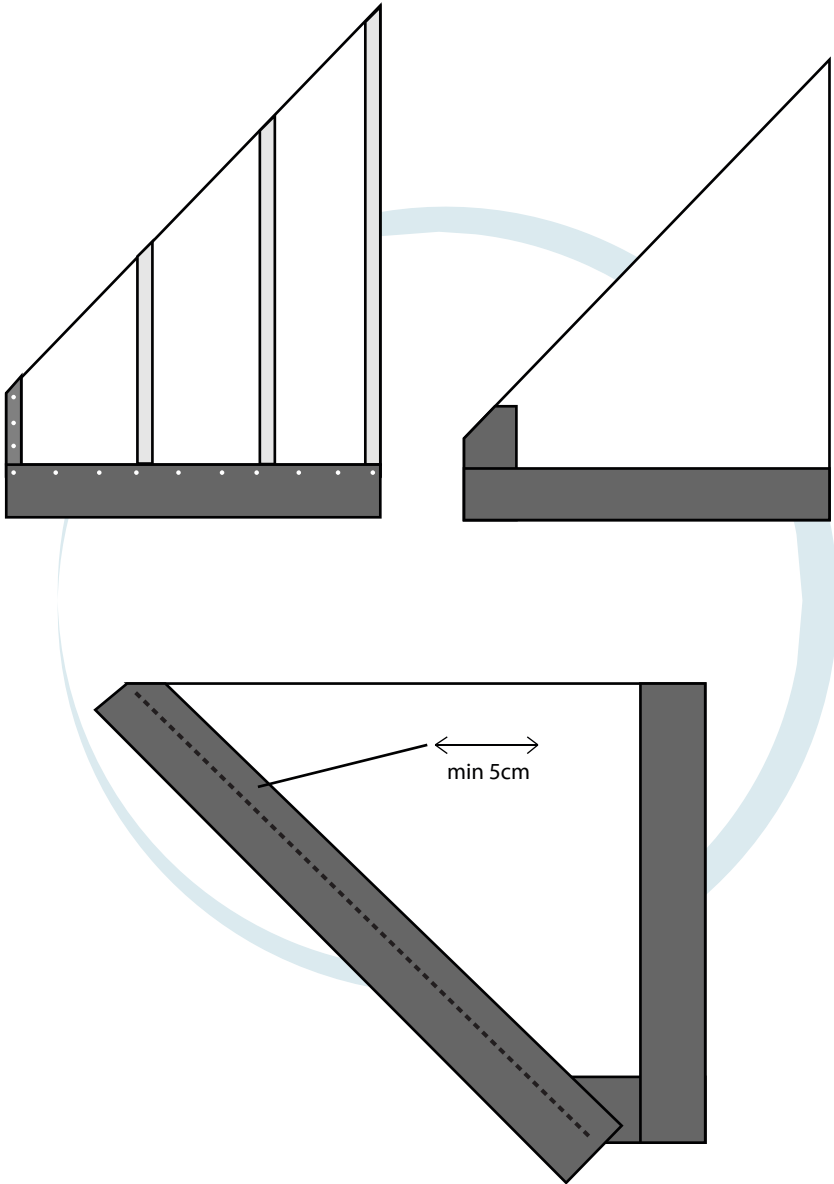











Be sure to provide support for each roof element while assembling. Use 8 screws to attach wall elements to one another and another 4 from under the brim planks. Make sure when placing the roof element with door hole (O2) that it the gaps are even to the wall element's.

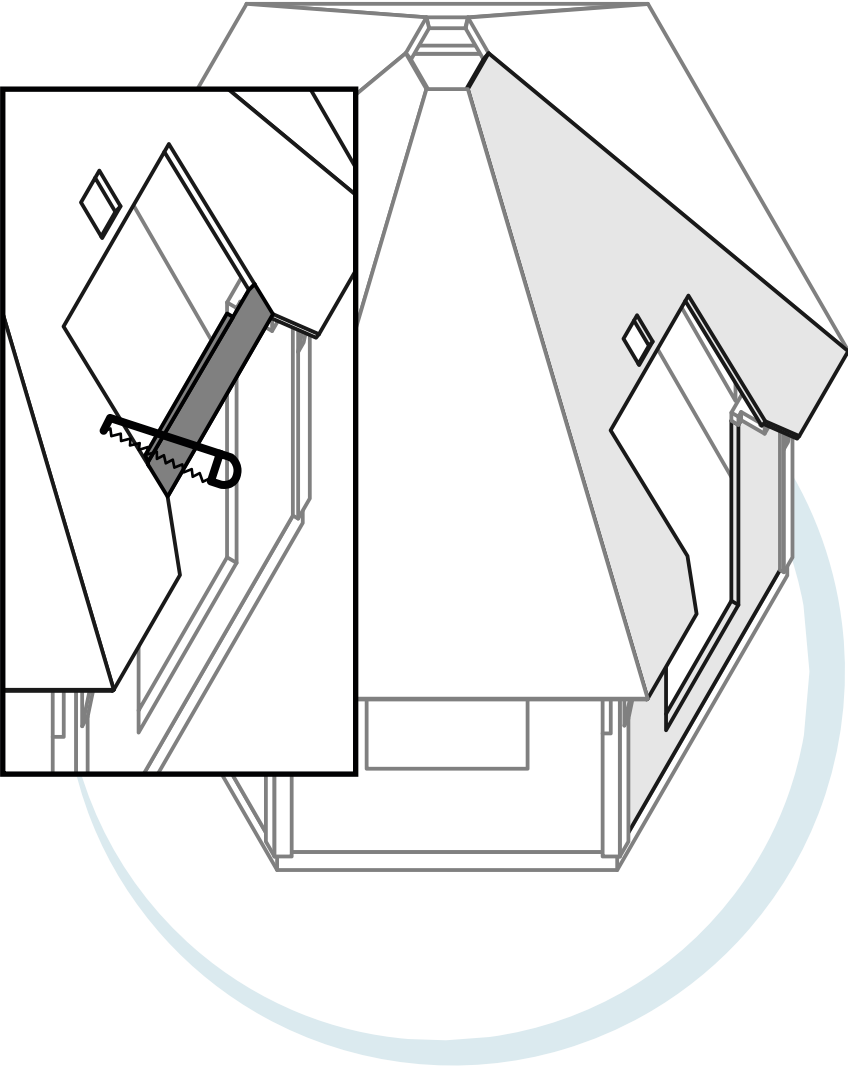


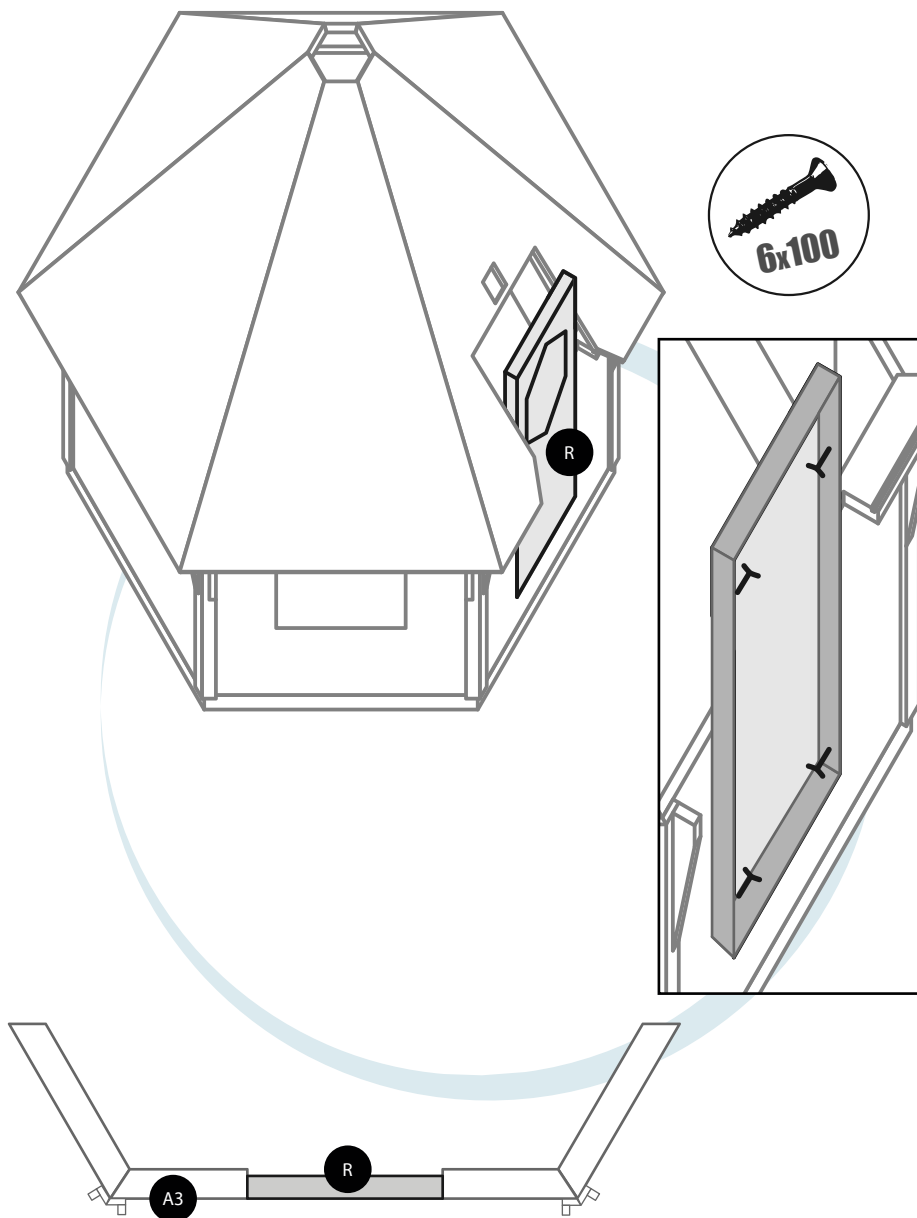

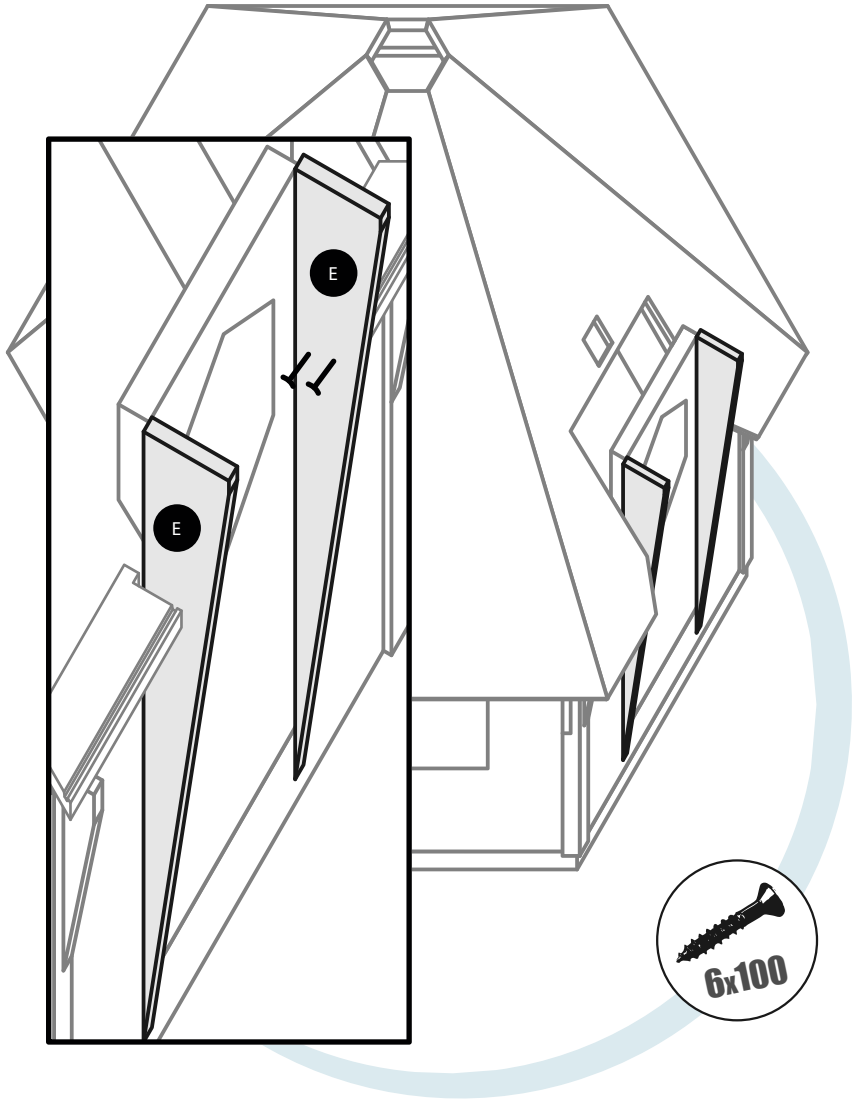


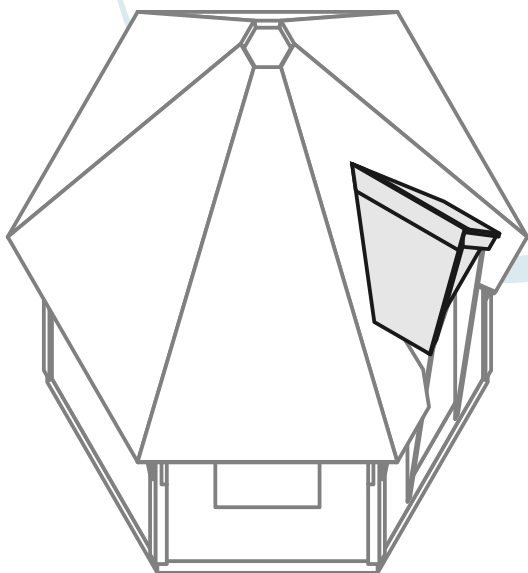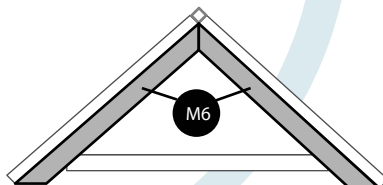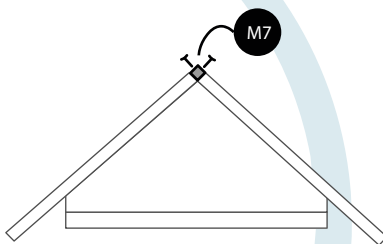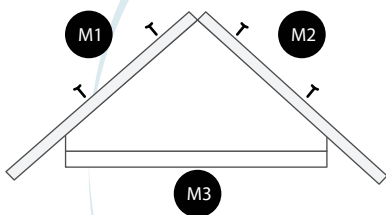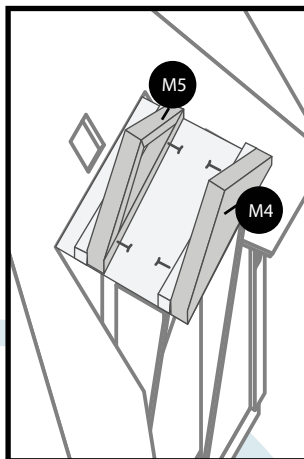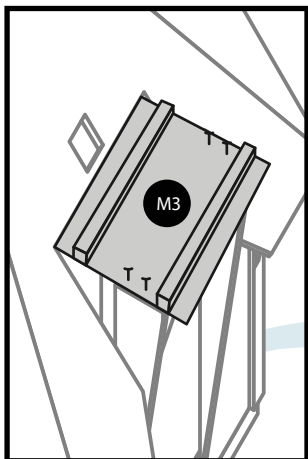

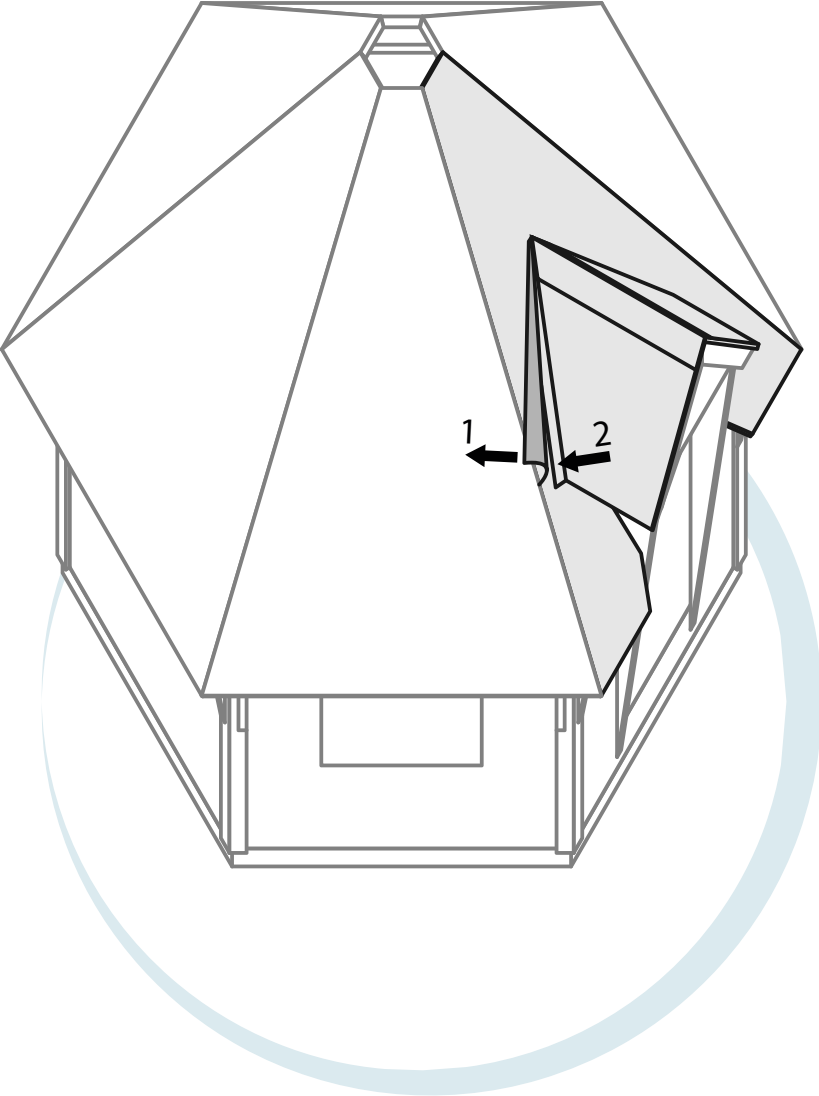


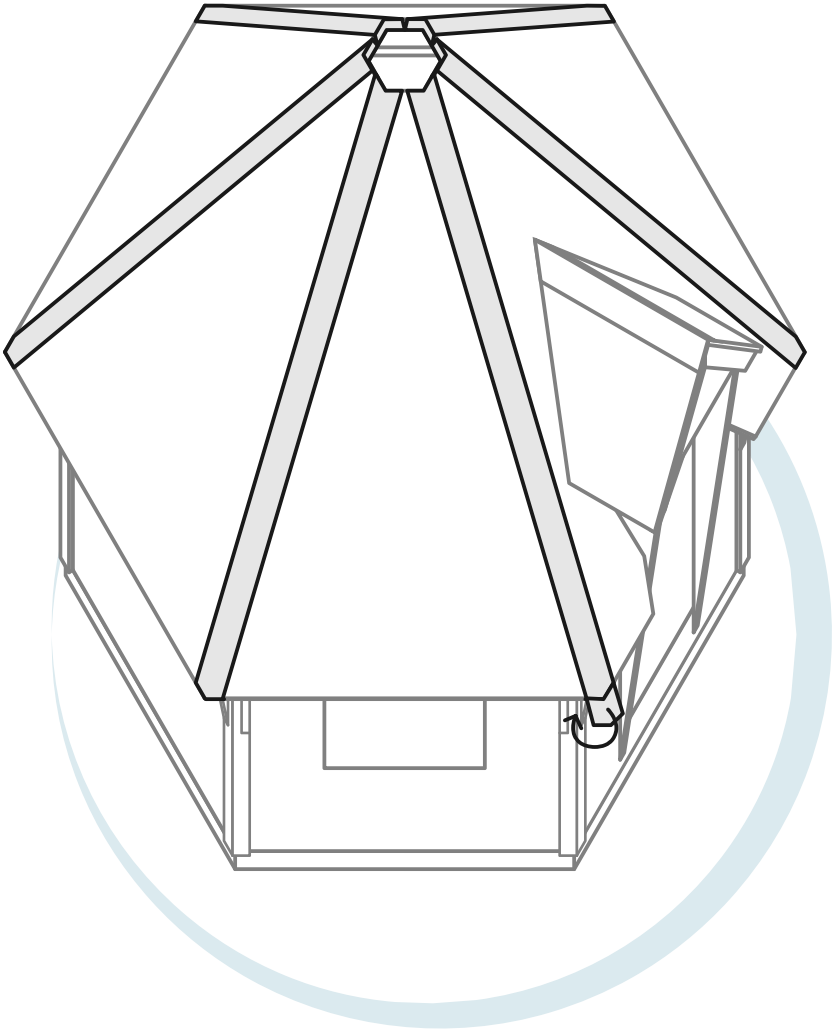



Attach peak plates to the connecting brims of the roof elements. Use felt nails. The lowest plate should be placed 7cm over the lower brim, flipped under the eaves and secured with nails.

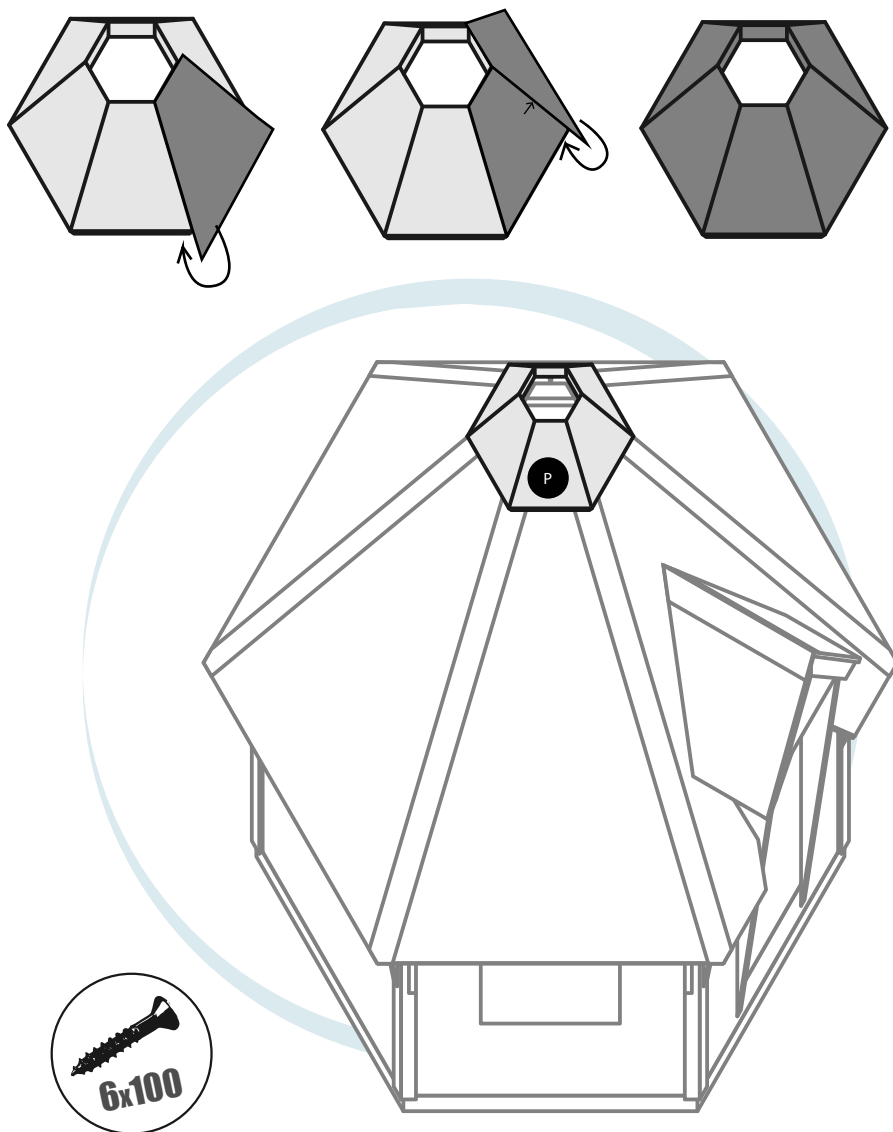


Attach the roof hat to the roof elements from below with 3 screws.

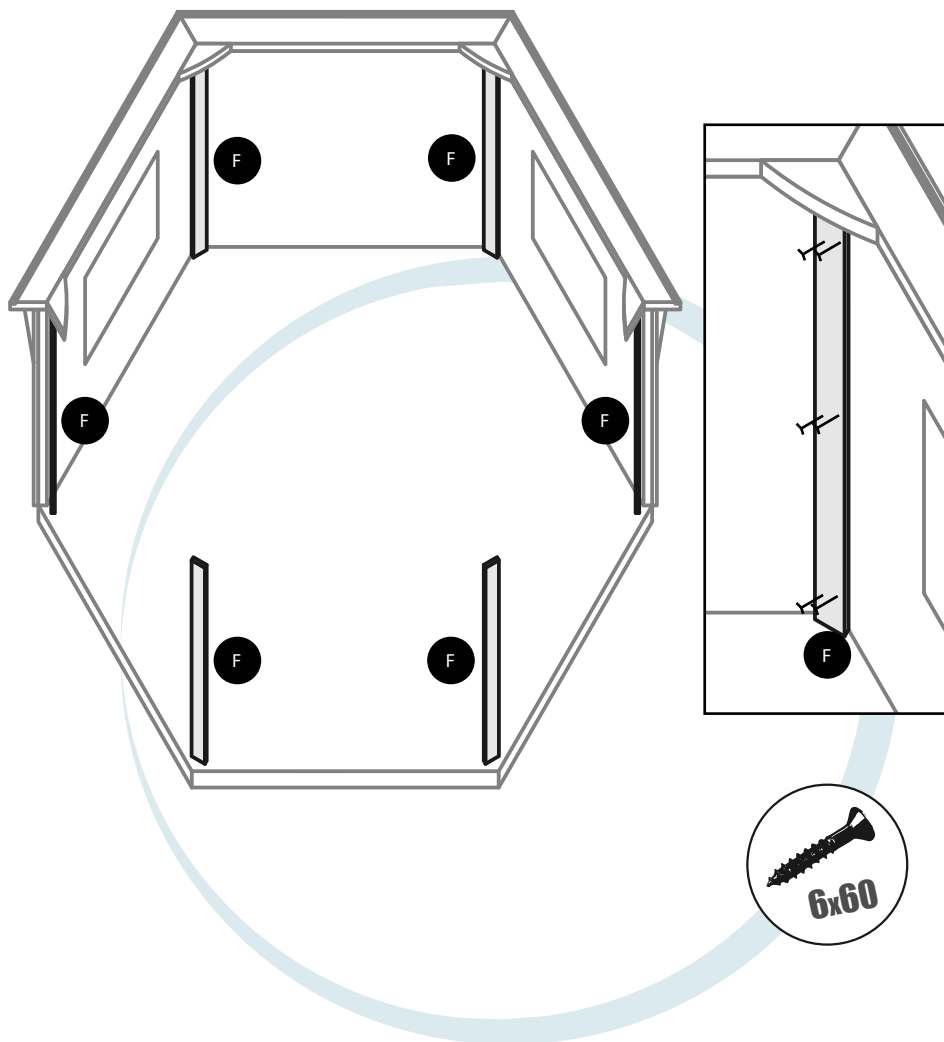

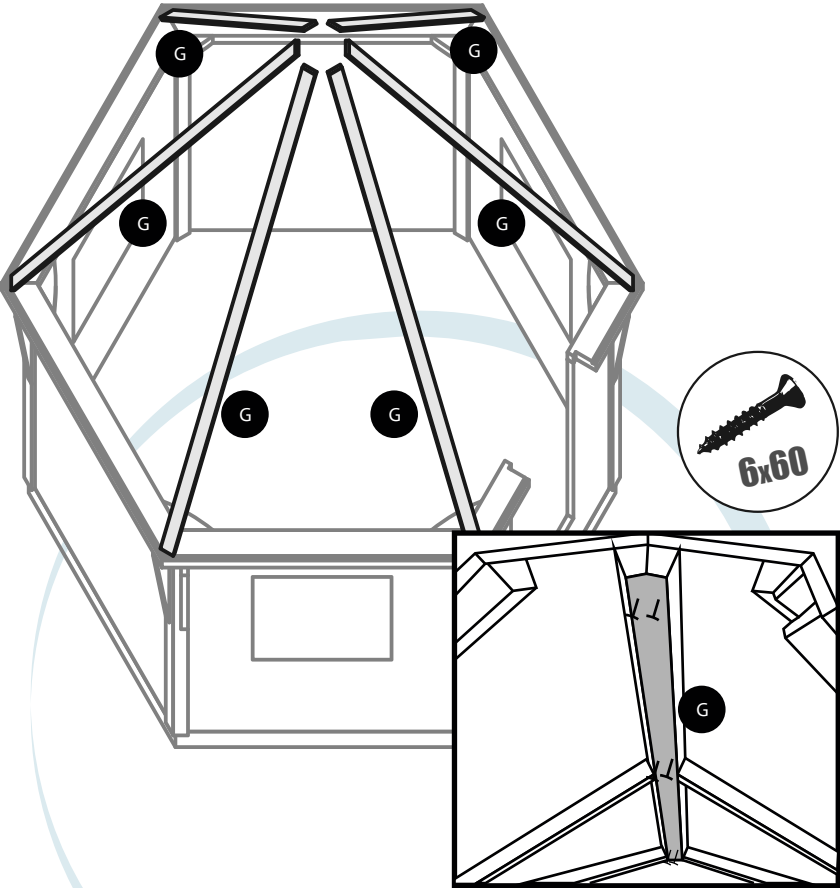


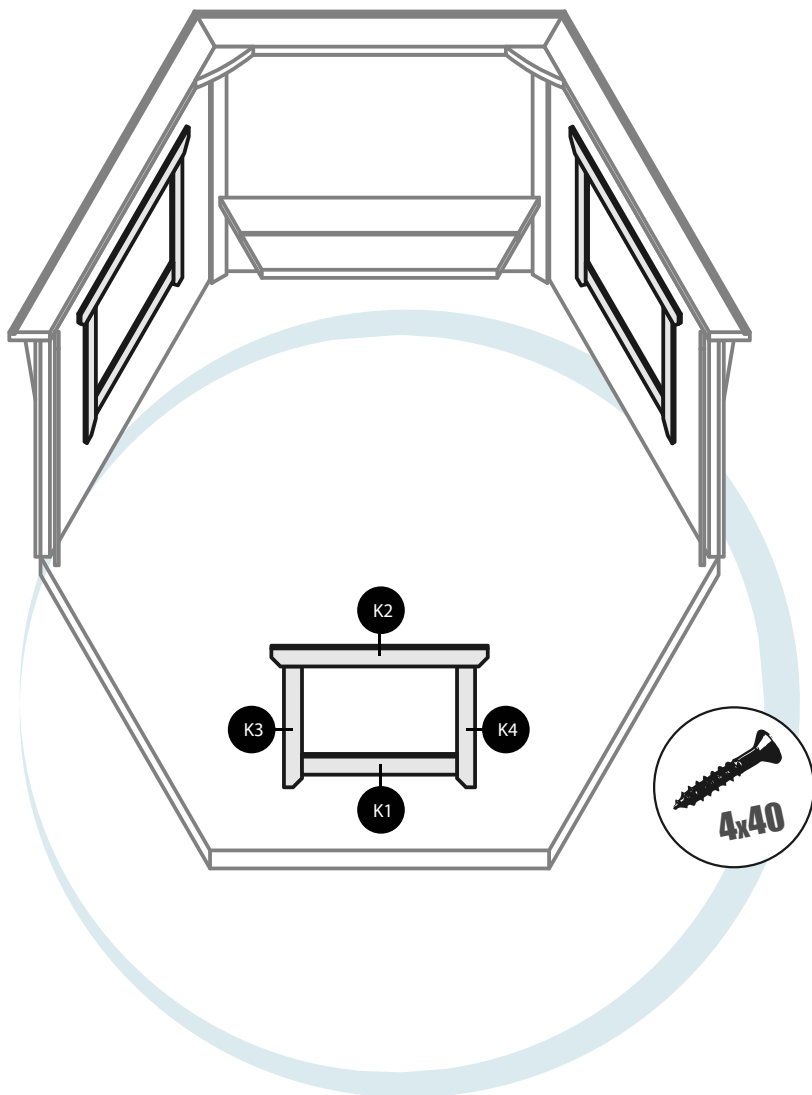



Attach the window strips inside the grillhouse. Strips are attached to the frame with ca 1.5cm overlay.

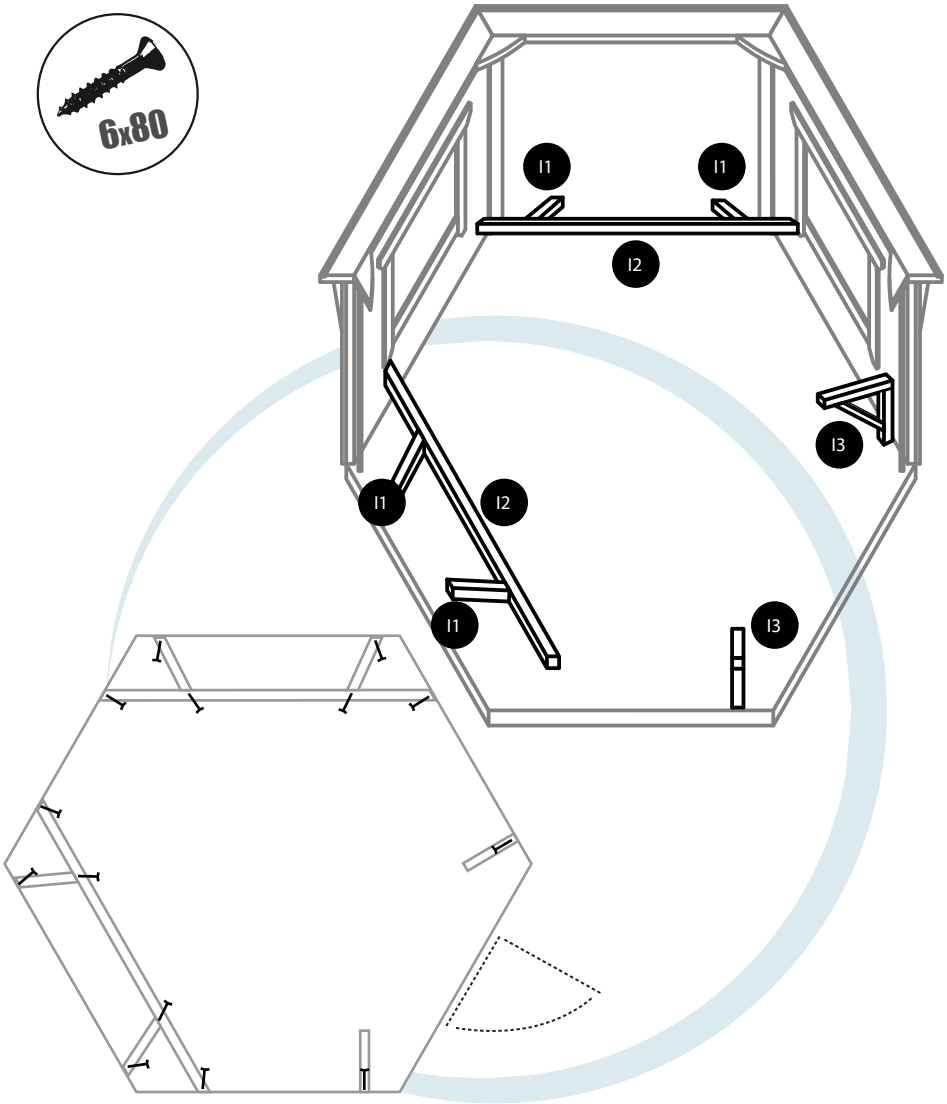


Attach the bench beams by first attaching the longer detail to the wall elements from the ends. Make sure they are parallel to the wall. Then attach the two shorter details to the previously attached detail and to the wall. Beams should be placed 39cm above the floor.

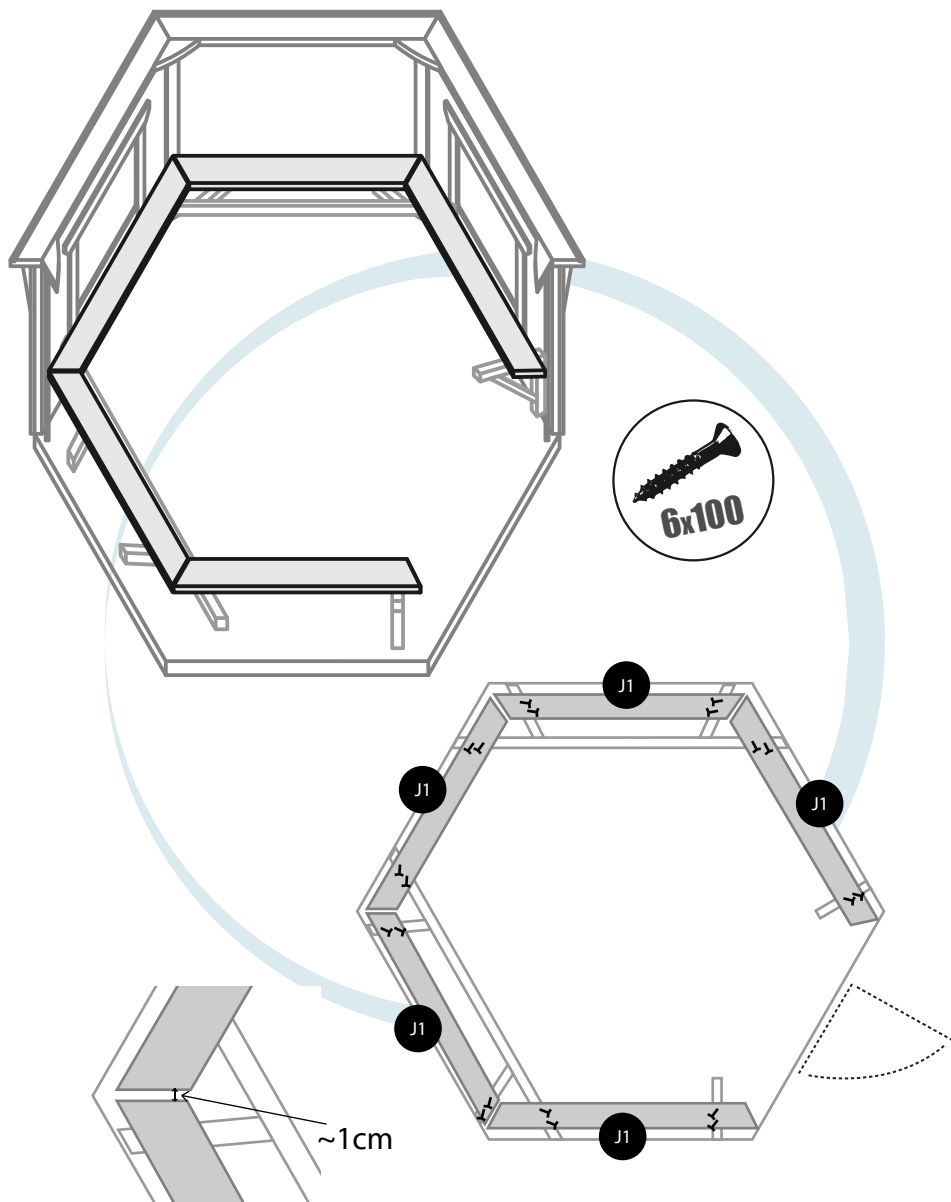


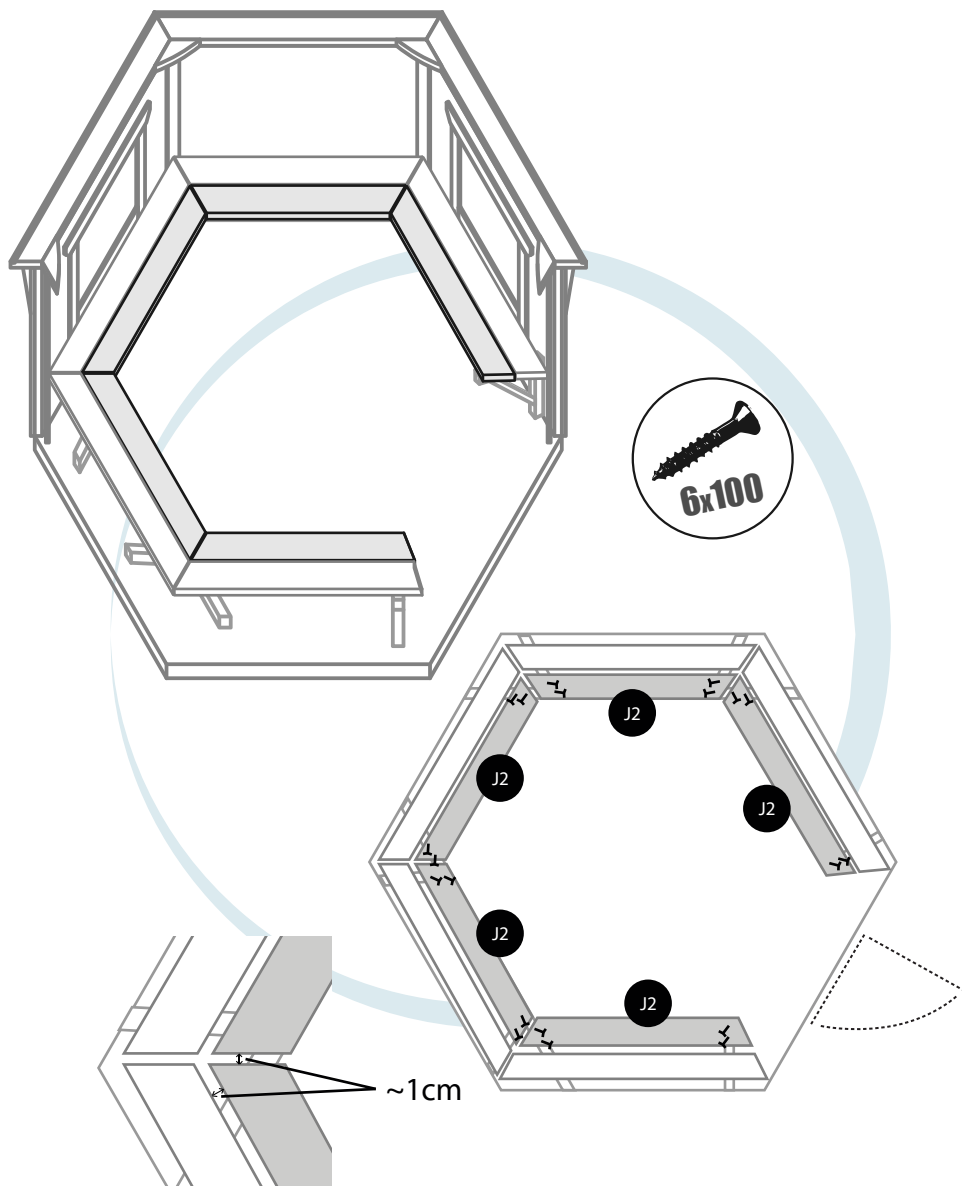


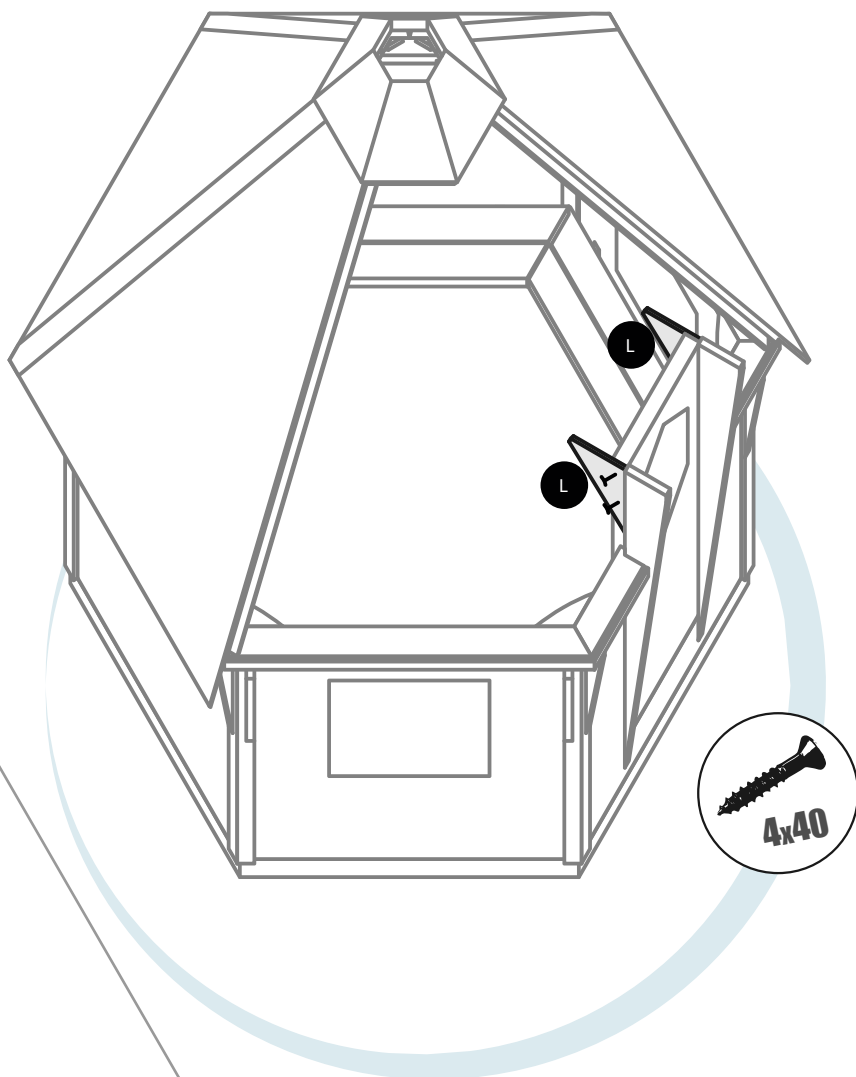

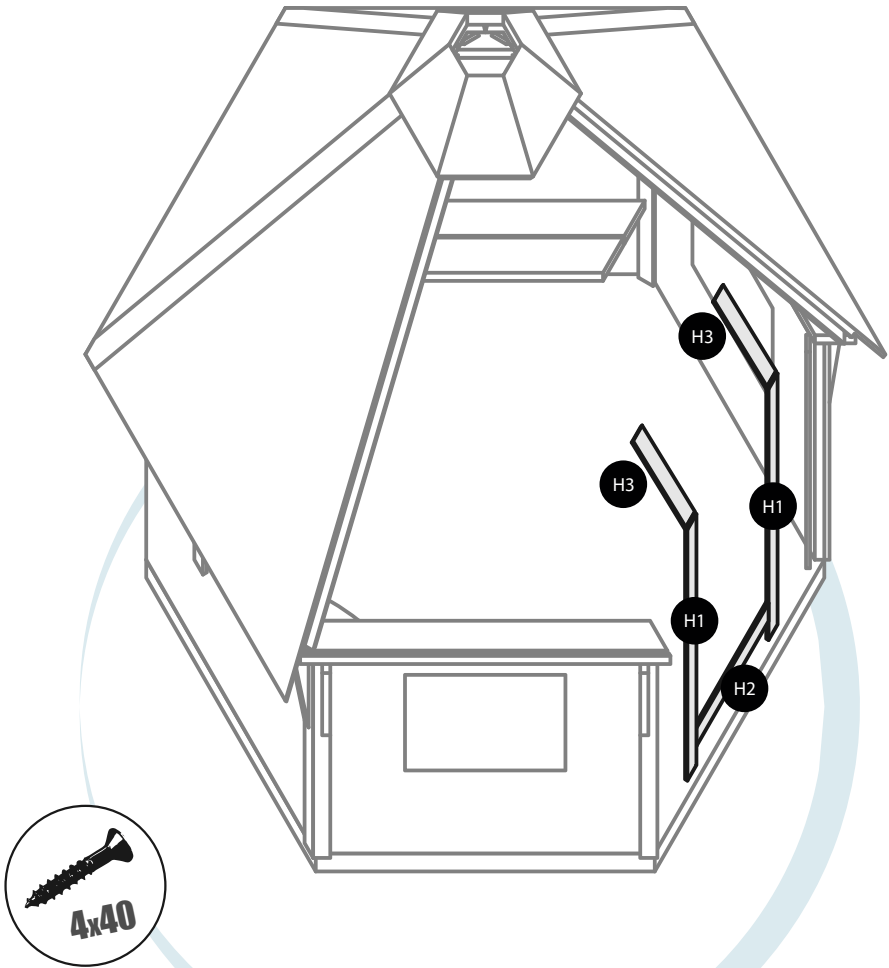


Attach door strips inside the grillhouse. The strips are attached to the door frame, wall element and roof element with 3 screws per detail.

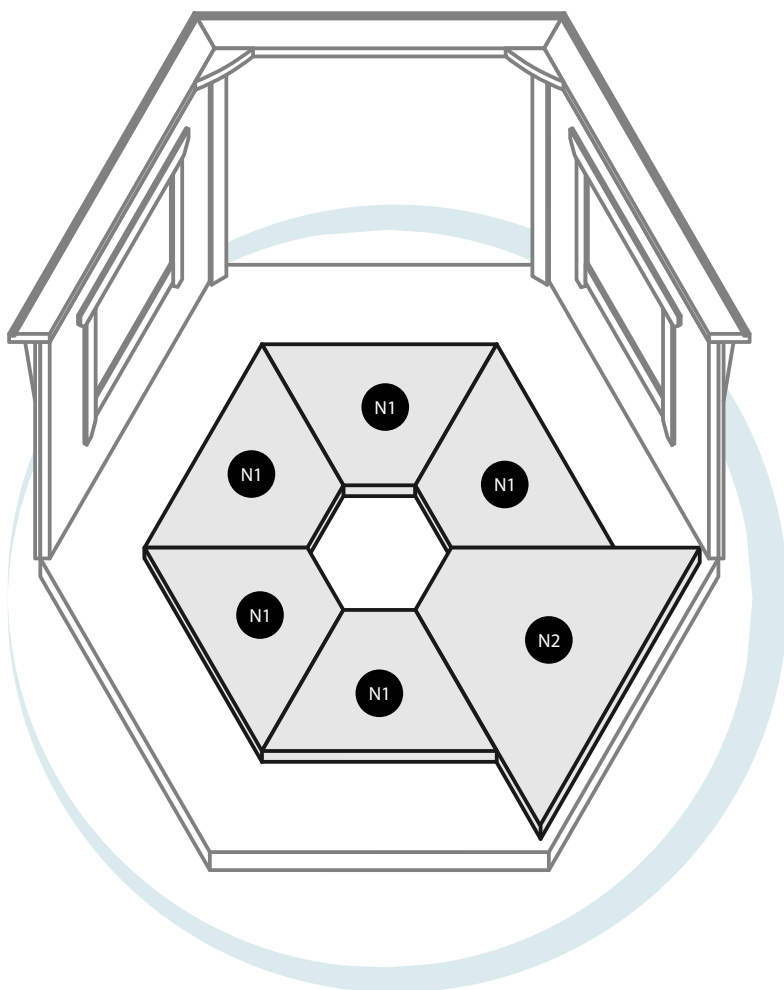


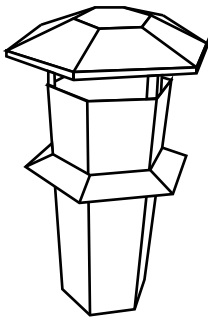

x1 T1

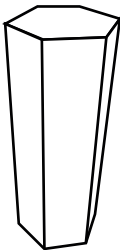


x1 T2

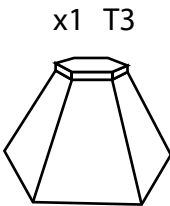


x1 T3



x3 T4

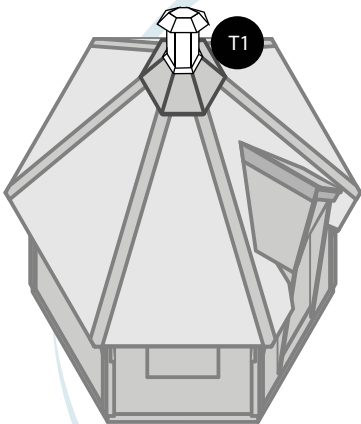

T1

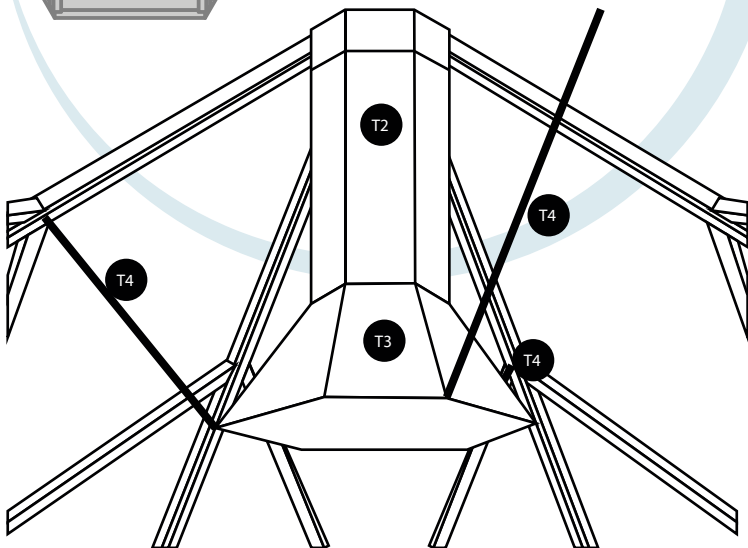

T2

T4

T4

T3

T4



NORDKAPP E - COM AB

Box 24063,
104 50 STOCKHOLM, SWEDEN

E-MAIL: CS@NORDKAPP.NU
WWW.NORDKAPP.NU