



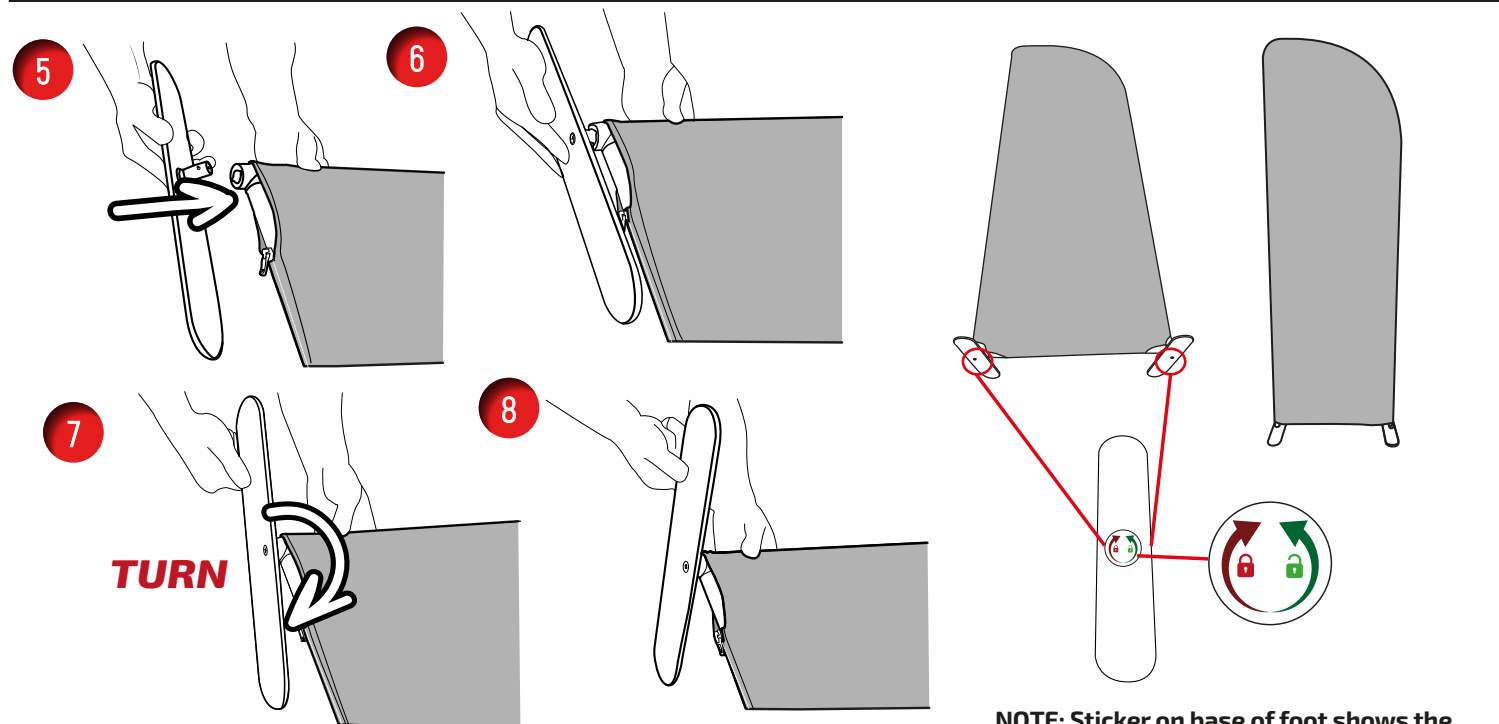

Modulate Sloped Frames

Modulate 824 (Slope 2)

Aug 2018




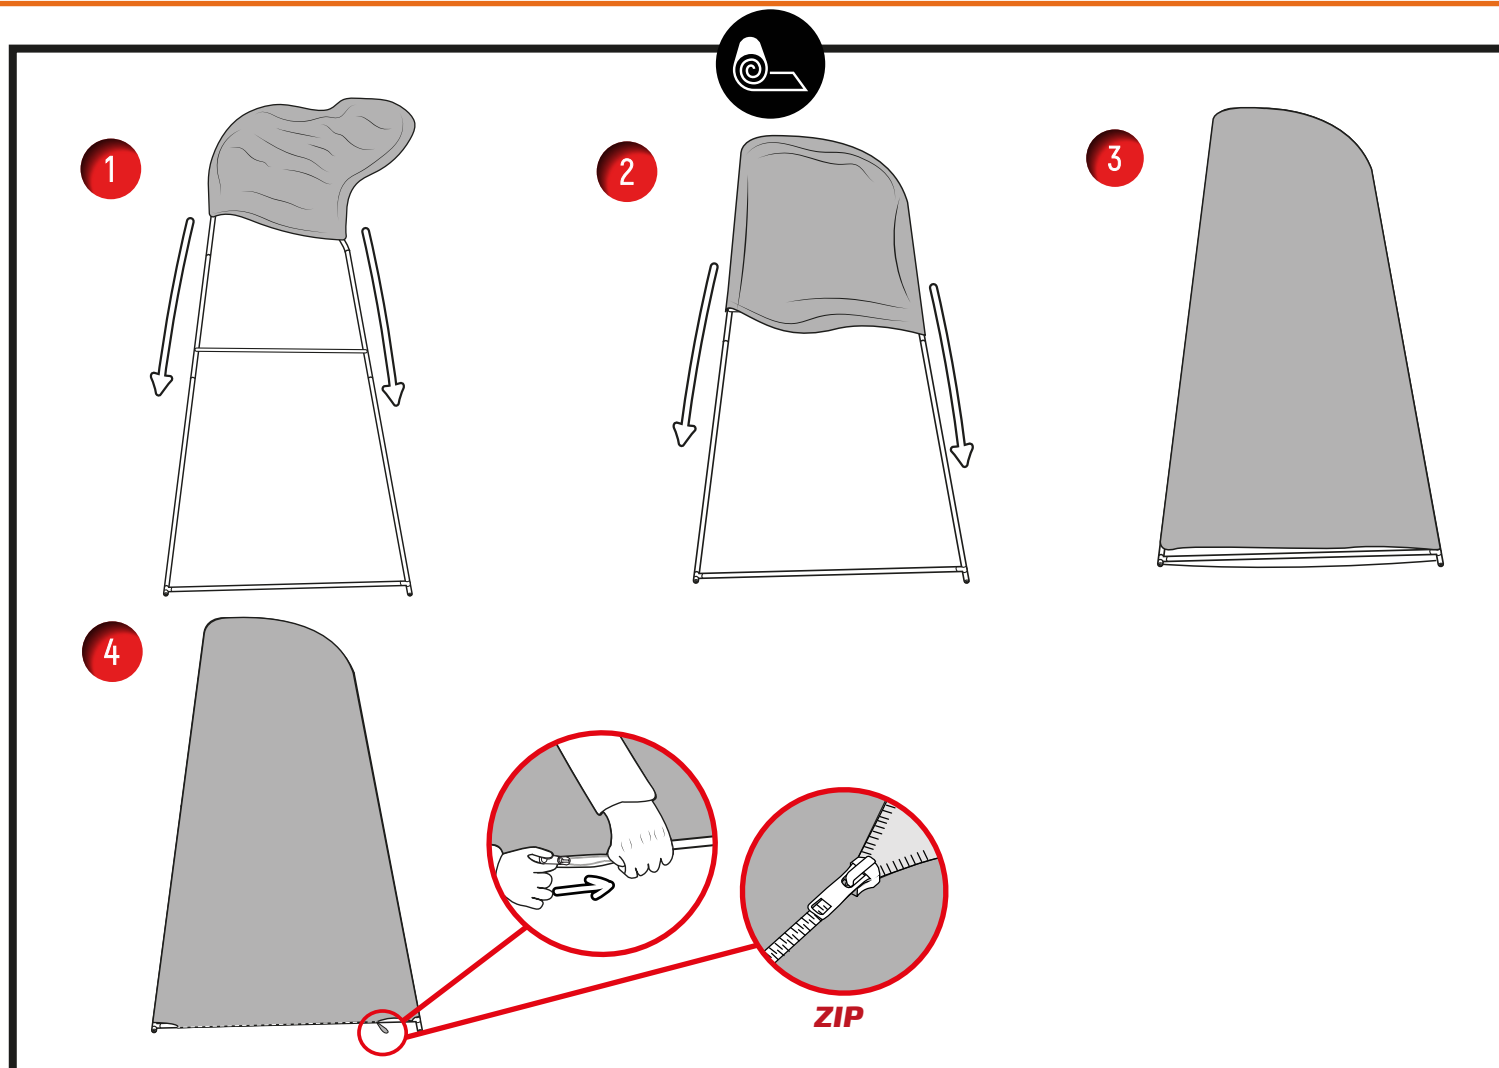


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot


NOTE: TWO POSITIONS FOR THE FEET (SEE OPTION 1 FOR SECOND POSITION)

OPTIONAL (HALF FEET)






OPTION 1 NOTE: HALF FEET CAN BE POSITIONED ONTO THE FRAME TWO DIFFERENT WAYS

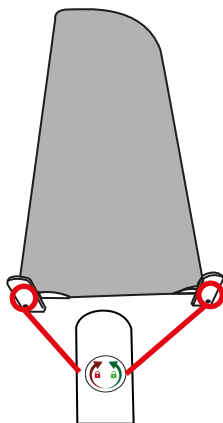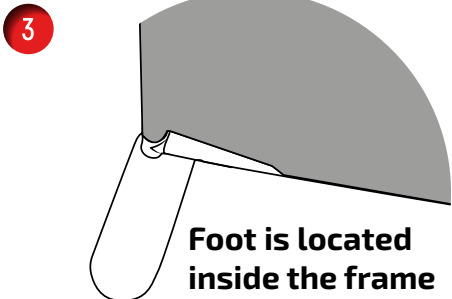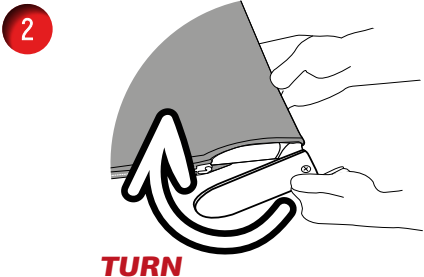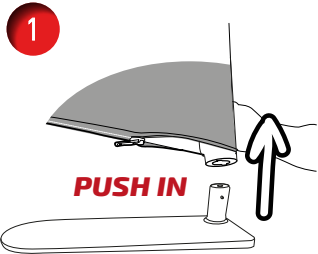


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

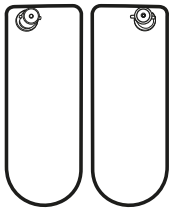

OPTION 2

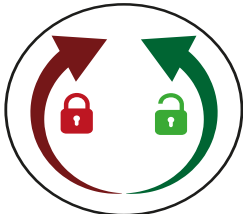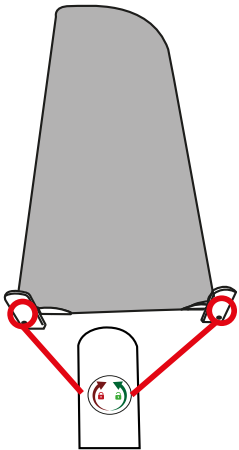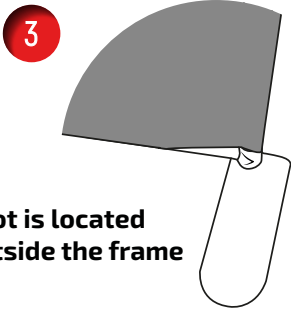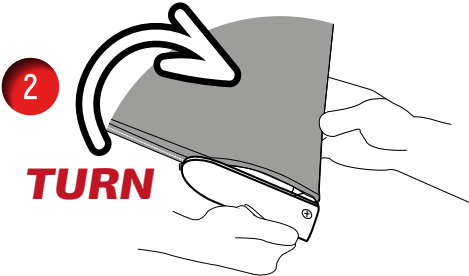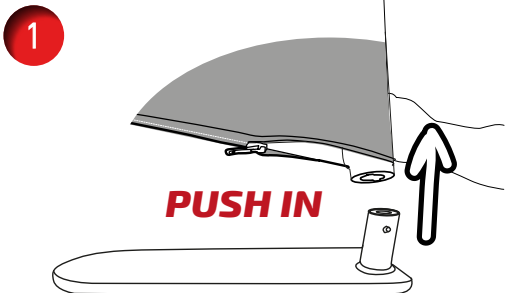


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

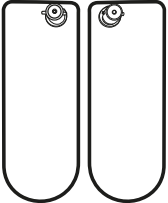



CONNECTING MULTIPLE FRAMES

NOTE: SECOND FRAME (820 CURVED NOT INCLUDED)

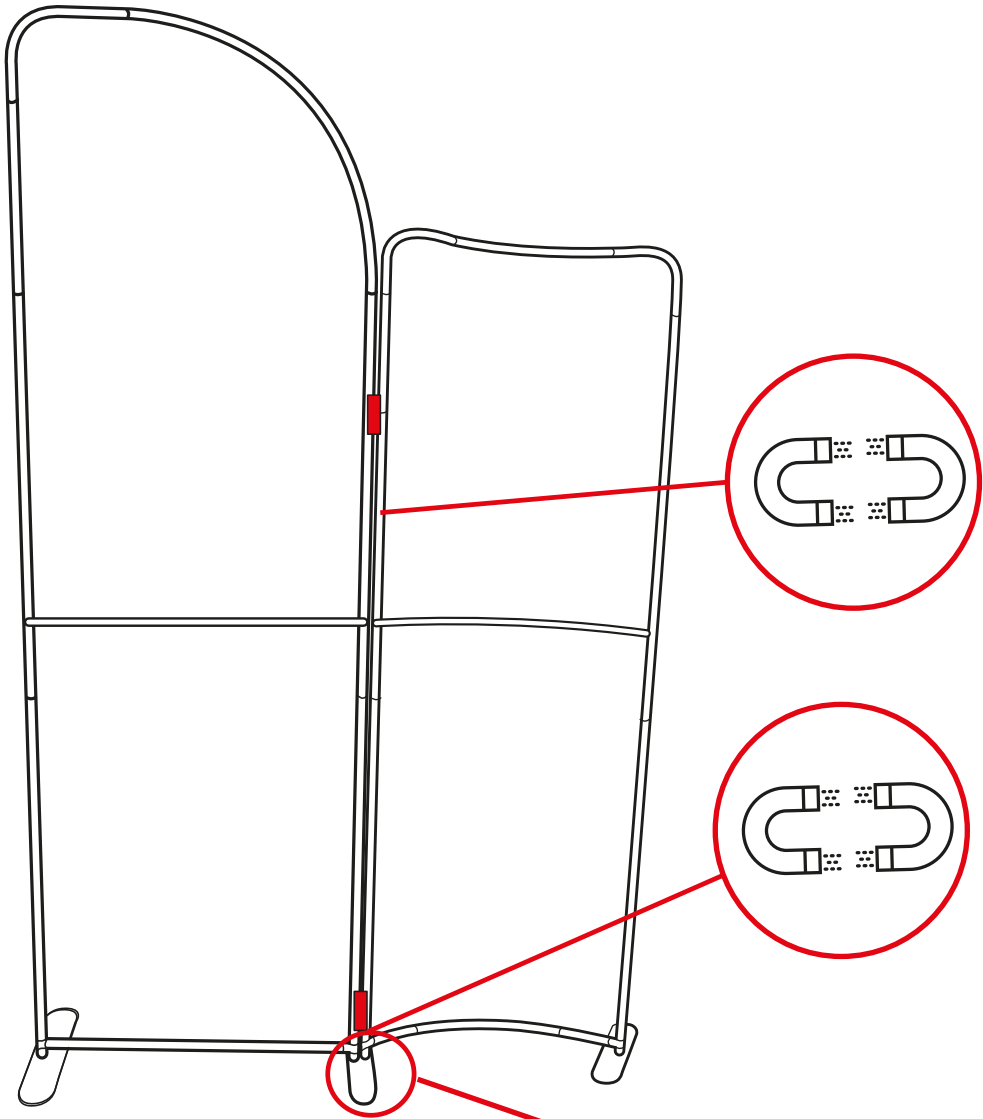

824 Slope 2 Frame and 820 Curved Frame

Remove one foot from second frame and align both frames on one foot

NOTE: FOLLOW OPTION 2 FOR HALF FEET TO CONNECT TWO FRAMES ON ONE FOOT

