


Modulate 810 (Straight)




**PARTS** *(NOT TO SCALE)*

Vertical Pole Sections (x2)
1  0
5  4

Bottom Pole Sections (x1)
5  0

Top Pole Section (x1)
3  2




Radius Top Corner Sections (x2)
 3  1
4 1

Feet


Gloves


Optional Half Feet




**NOT SUPPLIED WITH KIT AND
THEY ARE SOLD SEPARATELY**

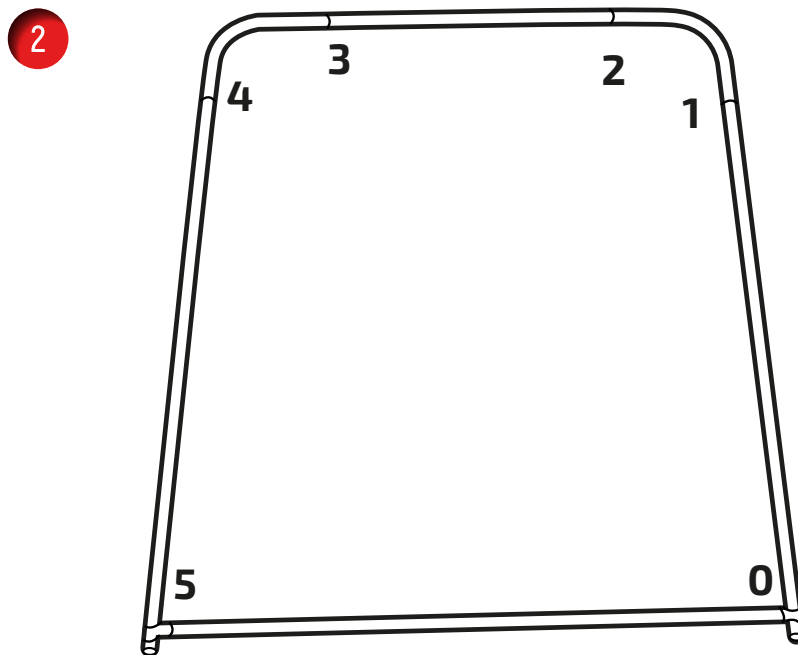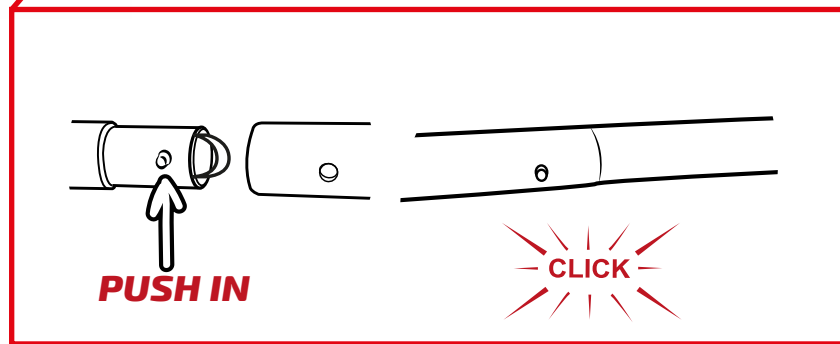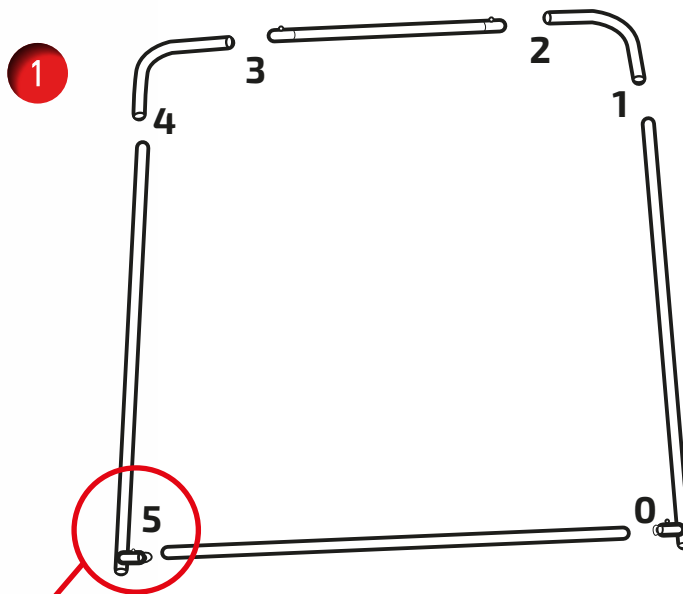

Modulate Straight Frames

Modulate 810 (Straight)

Aug 2018

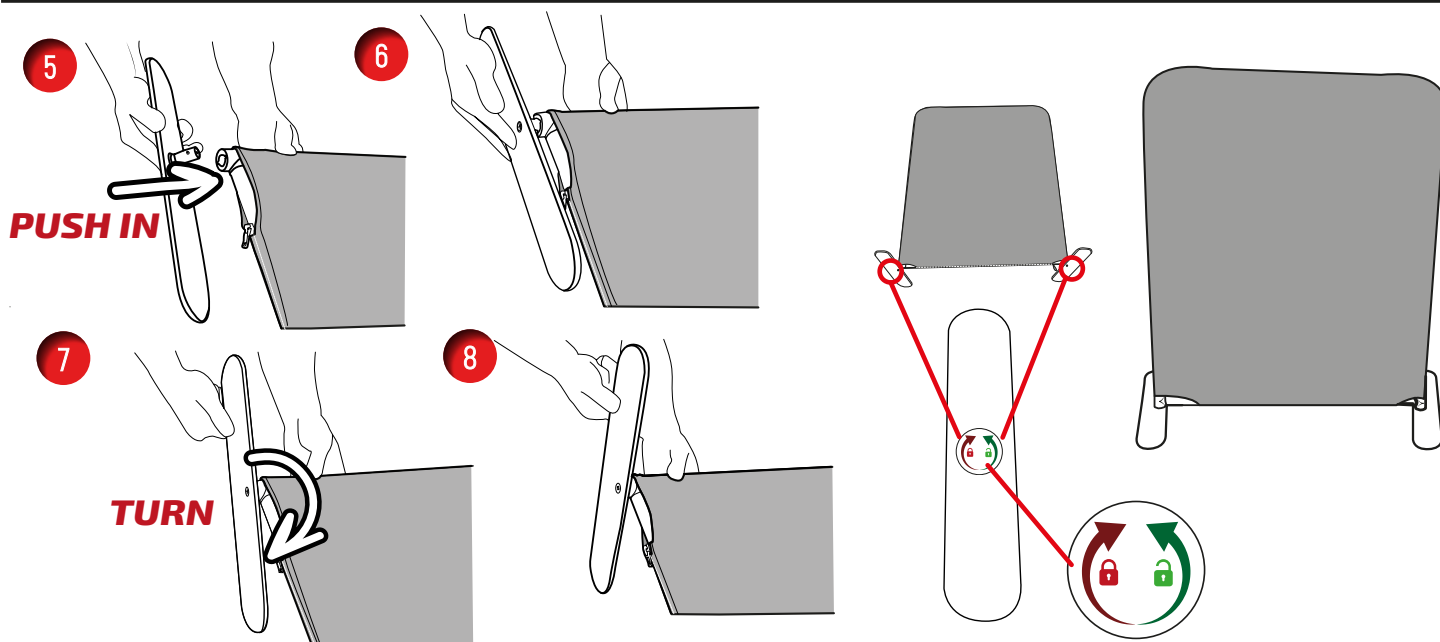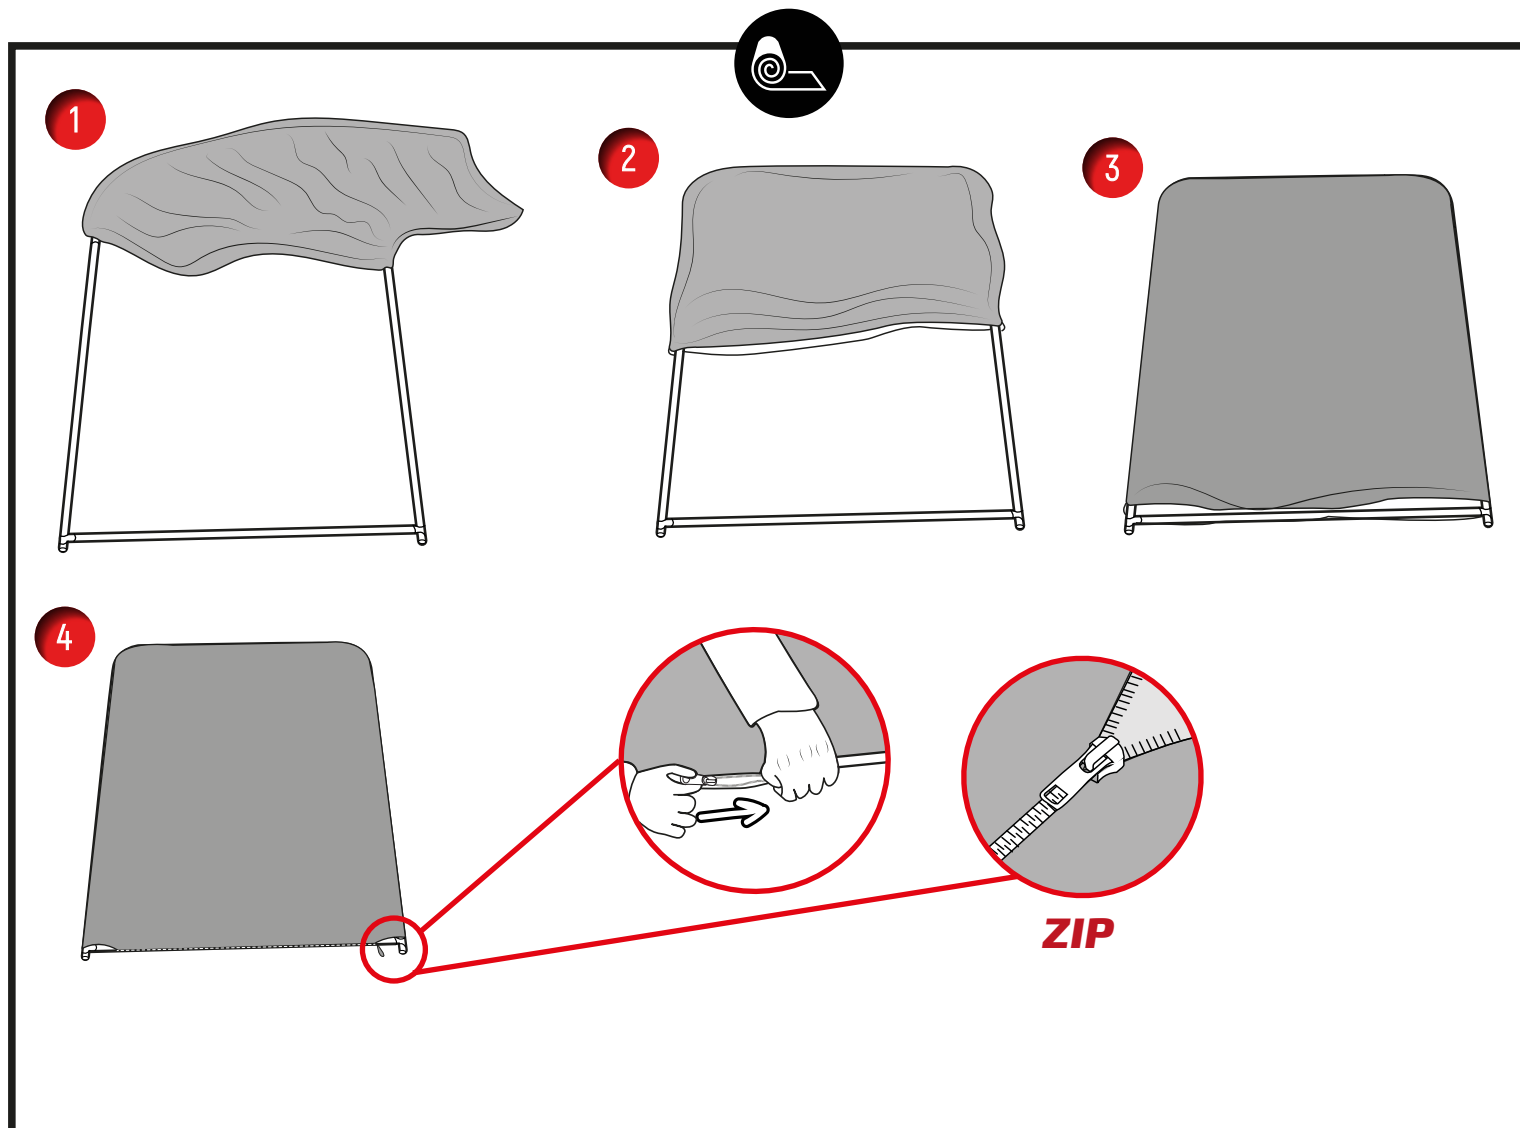


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

NOTE: Sticker on base of foot shows the directions for locking/unlocking foot


NOTE: TWO POSITIONS FOR THE FEET (SEE OPTION 1 FOR SECOND POSITION)

OPTIONAL (HALF FEET)

OPTION 1 NOTE: HALF FEET CAN BE POSITIONED ONTO THE FRAME TWO DIFFERENT WAYS

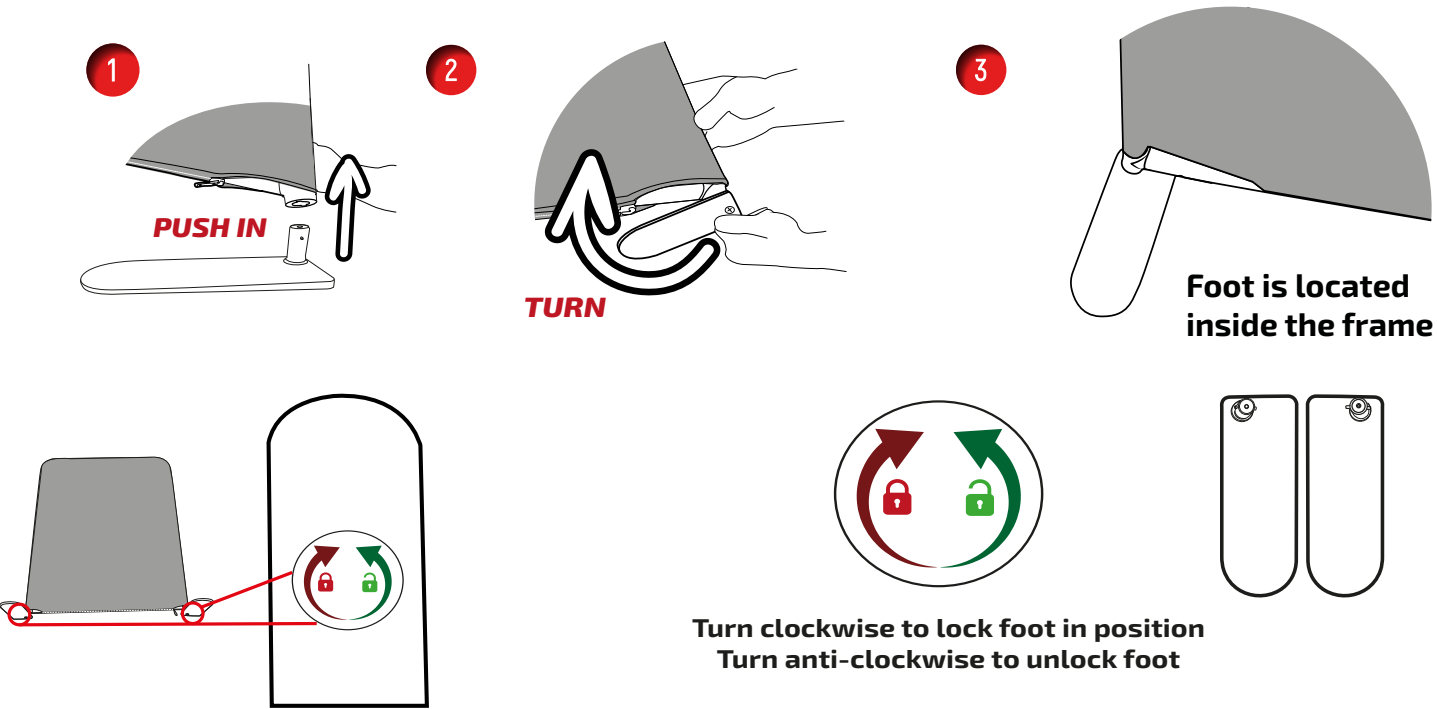

OPTION 2

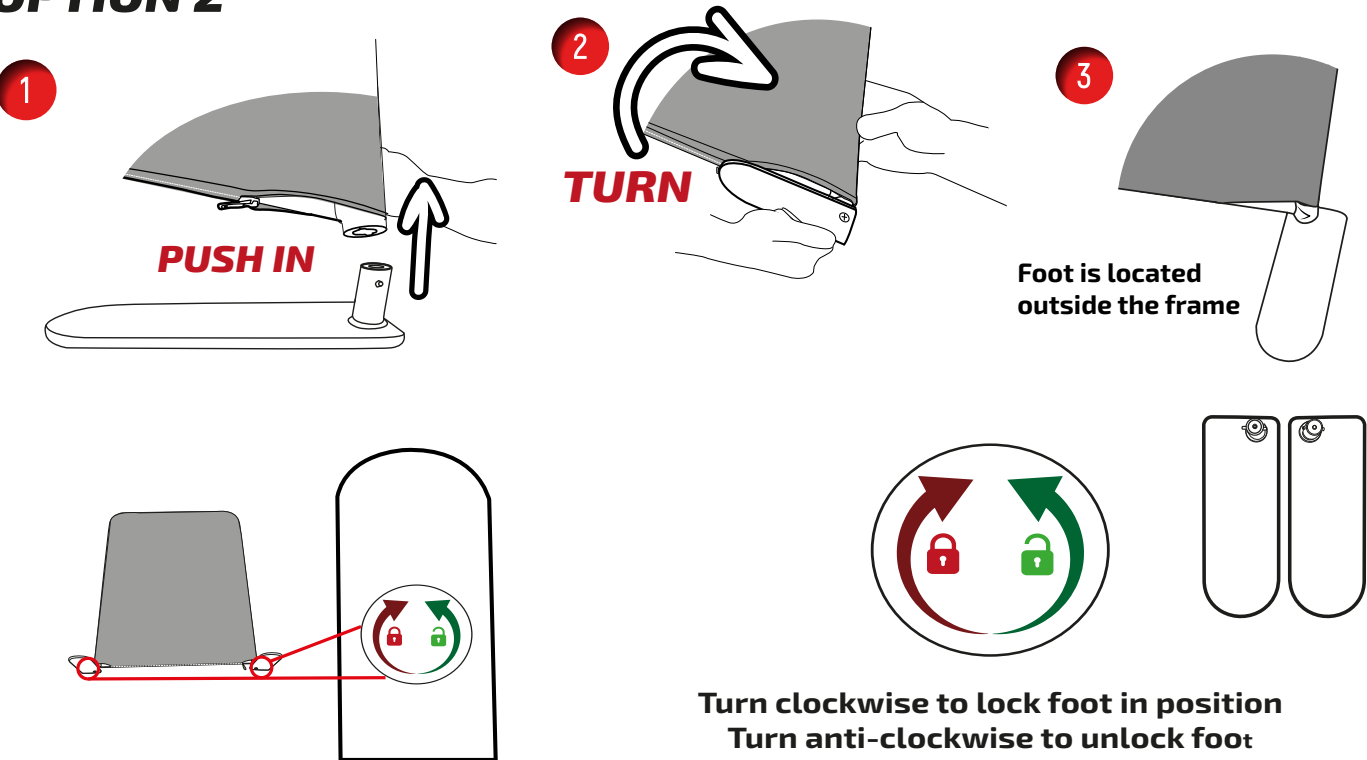




x1



CONNECTING MULTIPLE FRAMES
NOTE: SECOND FRAME (820 STRAIGHT NOT INCLUDED)

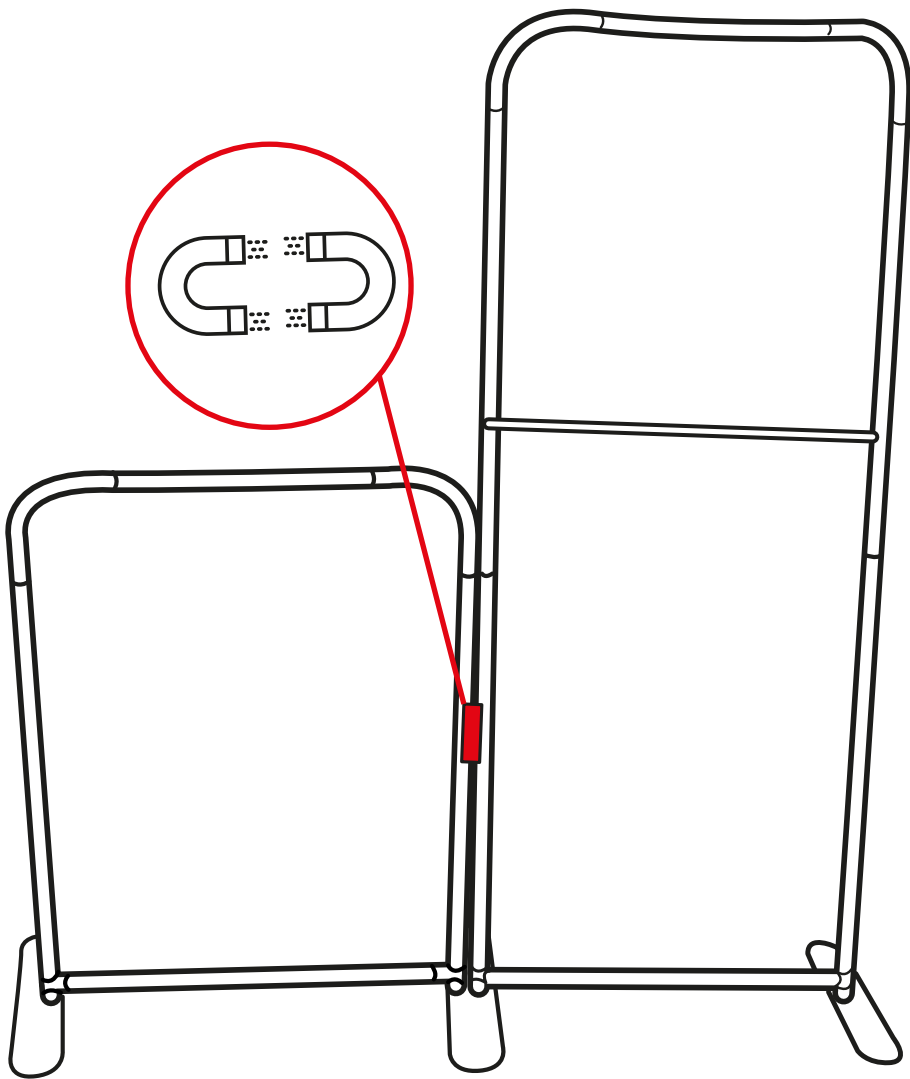

810 Straight Frame and 820 Straight Frame

Remove one foot from second frame and align both frames on one foot

NOTE: FOLLOW OPTION 2 FOR HALF FEET TO CONNECT TWO FRAMES ON ONE FOOT

