


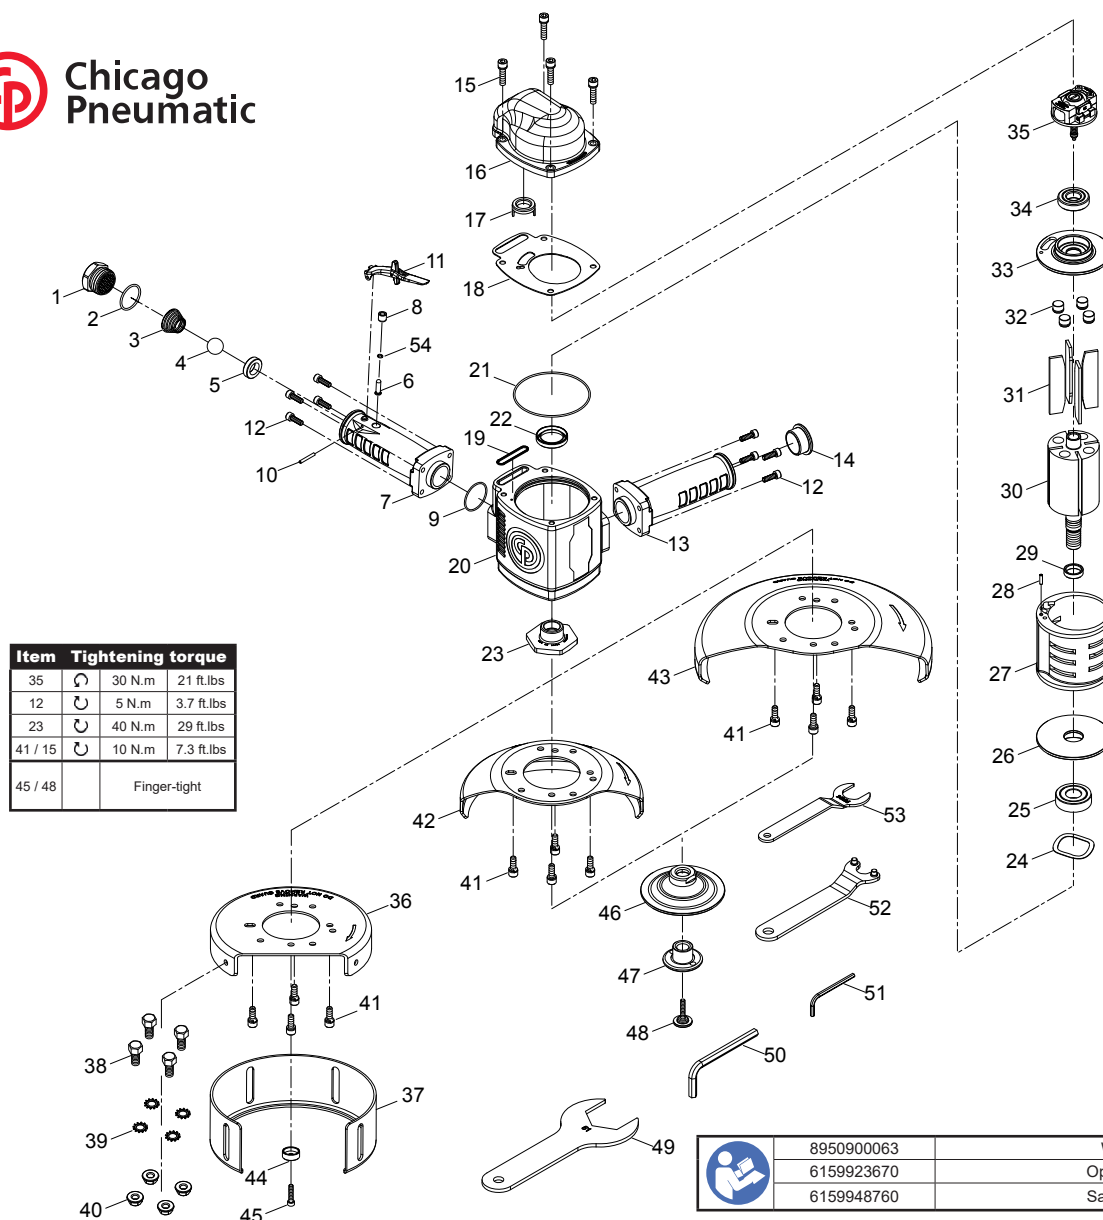

|                                                                                     |            |                     |
|-------------------------------------------------------------------------------------|------------|---------------------|
|  | 8950900063 | Warning Label       |
|                                                                                     | 6159923670 | Operator's manual   |
|                                                                                     | 6159948760 | Safety Instructions |


| Item     | CP Part No.       | Description                                      | Q'ty |
|----------|-------------------|--------------------------------------------------|------|
| <b>A</b> | <b>6153951310</b> | <b>Air inlet kit</b>                             |      |
| 1        |                   | Inlet with screen                                | 1    |
| 2        |                   | O-ring                                           | 1    |
| <b>B</b> | <b>6153101200</b> | <b>Throttle handle ass'y</b>                     |      |
| 3        | 6156812220        | Spring                                           | 1    |
| 5        | 6151431930        | Valve seat                                       | 1    |
| 7        |                   | Throttle handle                                  | 1    |
| 8        |                   | Valve bushing                                    | 1    |
| 9        |                   | O-ring                                           | 1    |
| 12       | 6156102780        | Screw (set of 4) (Hex Key 4 mm)                  | 2    |
| <b>C</b> | <b>8940173447</b> | <b>Safety lever kit</b>                          |      |
| 10       |                   | Spring pin                                       | 1    |
| 11       |                   | Lever ass'y                                      | 1    |
| <b>D</b> | <b>6153900710</b> | <b>Side handle ass'y</b>                         |      |
| 12       | 6156102780        | Screw (set of 4) (Hex Key 4 mm)                  | 2    |
| 13       |                   | Side handle                                      | 1    |
| 14       | 6156701620        | Handle plug                                      | 1    |
| <b>E</b> | <b>6155657630</b> | <b>Motor cover kit</b>                           |      |
| 15       | 6156102800        | Screw (set of 4) (5mm hex key)                   | 1    |
| 16       |                   | Cover                                            | 1    |
| 17       |                   | Ball seat                                        | 1    |
| 18       |                   | Gasket                                           | 1    |
| 19       |                   | Rubber seal                                      | 1    |
| <b>F</b> | <b>6155657650</b> | <b>Motor housing kit</b>                         |      |
| 20       |                   | Motor housing                                    | 1    |
| 21       |                   | O-ring                                           | 1    |
| 22       |                   | Oil seal                                         | 1    |
| <b>G</b> | <b>6155042320</b> | <b>6" guard top kit (CP3340 SALAVET only)</b>    |      |
| 36       |                   | Guard 6"                                         | 1    |
| 41       | 6156102790        | Screw (set of 4) (5mm hex key)                   | 1    |
| <b>H</b> | <b>6155042330</b> | <b>6" guard bottom kit (CP3340 SALAVET only)</b> |      |
| 37       |                   | Protector 6"                                     | 1    |
| 38       |                   | Bolts (set of 4)                                 | 1    |
| 39       |                   | Washer (set of 4)                                | 1    |
| 40       |                   | Nut (set of 4)                                   | 1    |
| <b>I</b> | <b>6155042340</b> | <b>7" guard kit (CP3340 SALAVAD)</b>             |      |
| 41       | 6156102790        | Screw (set of 4) (5mm hex key)                   | 1    |
| 42       |                   | Guard 7"                                         | 1    |

| Item     | CP Part No.       | Description                                                                     | Q'ty |
|----------|-------------------|---------------------------------------------------------------------------------|------|
| <b>J</b> | <b>6155042350</b> | <b>9" guard kit (CP3340 SALAVEL)</b>                                            |      |
| 41       | 6156102790        | Screw (set of 4) (5mm hex key)                                                  | 1    |
| 43       |                   | Guard 9"                                                                        | 1    |
| <b>K</b> | <b>6155483070</b> | <b>Type 6 and 11 wheel retention kit (CP3340 SALAVET)</b>                       |      |
| 44       |                   | Cover                                                                           | 1    |
| 45       | 6156102750        | Safety screw (Hex key - 5/32")                                                  | 1    |
| <b>L</b> | <b>6155483080</b> | <b>Type 27 and 42 wheel retention kit (CP3340 SALAVAD &amp; CP3340 SALAVEL)</b> |      |
| 46       |                   | Hub (Spanner - 24 mm)                                                           | 1    |
| 47       |                   | Front flange (Pin wrench 32mm / Ø3)                                             | 1    |
| 48       | 6156102750        | Safety screw (Hex key - 5/32")                                                  | 1    |
| <b>M</b> | <b>6153994130</b> | <b>Tune Up Kit (included : 2, 9 18, 19, 21, 22, 31 &amp; 54)</b>                |      |


| Item      | CP Part No. | Description                                              | Q'ty |
|-----------|-------------|----------------------------------------------------------|------|
| 4         | 6151431830  | Ball valve                                               | 1    |
| 6         | 6151431850  | Valve stem                                               | 1    |
| 23        | 6156701750  | Nut (Spanner - 51mm)                                     | 1    |
| 24        | 6156401230  | Wave washer                                              | 1    |
| 25        | 8940167993  | Front bearing                                            | 1    |
| 26        | 6154201780  | Front end plate                                          | 1    |
| 27        | 6154001790  | Cylinder (incl. 28)                                      | 1    |
| 29        | 6154321060  | Spacer                                                   | 1    |
| 30        | 6154270090  | Rotor (Hex key - 5/16")                                  | 1    |
| 31        | 6154340740  | Blades (set of 4)                                        | 1    |
| 32        | 6156701720  | Rotor plug (set of 5)                                    | 1    |
| 33        | 6154201770  | Rear end plate                                           | 1    |
| 34        | 6157530990  | Rear bearing                                             | 1    |
| 35        | 6154570690  | Governor ass'y 6000RPM (CP3330 SALAVET & CP3330 SALAVEL) | 1    |
|           | 6154570730  | Governor ass'y 8500RPM (CP3330 SALAVAD)                  | 1    |
| 49        | 6158020720  | Spanner - 51mm (for item 23)                             | 1    |
| 50        | 6158020730  | Hex key - 5/16" (for item 30)                            | 1    |
| 51        | 6158020740  | Hex key - 5/32" (for item 48 & 45)                       | 1    |
| 52        | 8950290147  | Pin wrench 32mm / Ø3 (for item 47)                       | 1    |
| 53        | 6158020750  | Spanner - 24 mm (for item 46)                            | 1    |
| 54        |             | O-ring                                                   | 1    |
| Not shown | 2050500263  | Hex key - 4 mm (for item 12)                             | 1    |
| Not shown | 8951011470  | Hex key - 5 mm (for item 15 & 41)                        | 1    |

## Reinstating the overspeed shut-off device

- Push the ball out of the seat from the bottom to retrieve it from the cover.

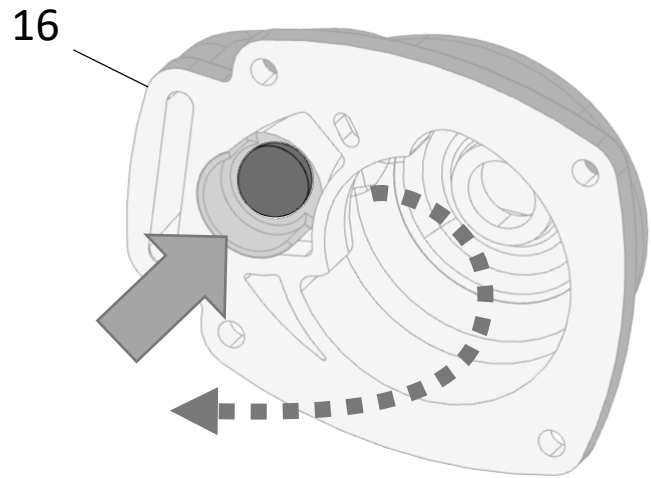

- Push the ball into the governor (in the space between the cage and the disc).  
The ball should seat in the hole of the disc (X on the picture).

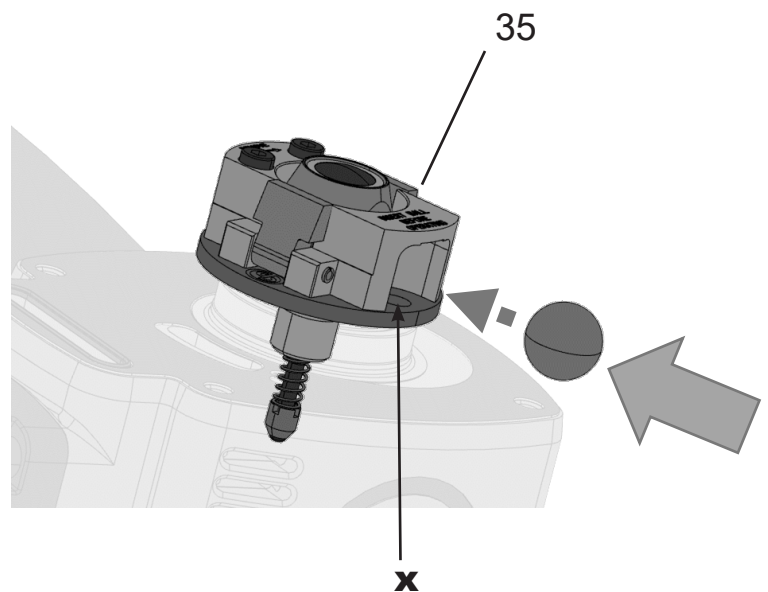

**The tool shall never be started without the ball locked in the disc groove.  
The tool shall never be started without the proper governor (35) fastened  
to the rotor (30).**