
easy2GO contents



1x AQUAvalve

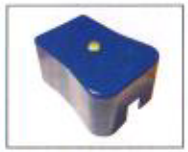

1x AQUAvalve cover
1x circular spirit level



1x 16-6mm inline filter



1x 6mm golf filter



1x 6mm top hat grommet




1 x 1.5m 6mm pipe

Suggested layouts


Using 6mm golf filter

Minimum pot size 5 litres

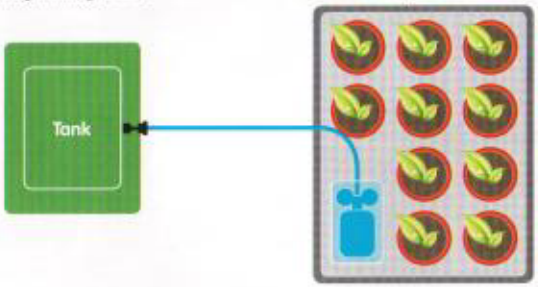

Maximum tray size 1.2m/sq

Using 16-6mm inline filter and standard hosepipe

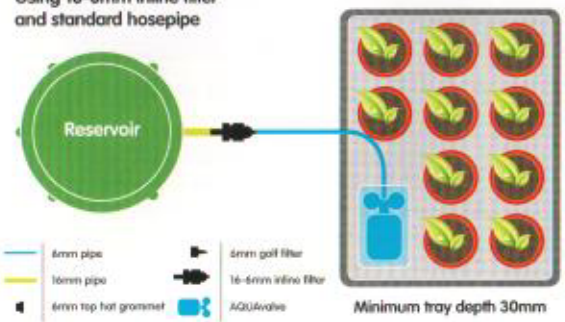

Minimum tray depth 30mm

Assembly instructions

1

For ease of assembly lay out the contents of your easy2GO kit.

Then place your flat tray into position.

Minimum recommended tray depth is 30mm.

Maximum tray size 1.2m/sq.

Ensure your tray is level.

2



Remove threaded collar from AQUAvalve.

Push one end of the 6mm pipe throughthe collar and attach the pipe to AQUAvalve nozzle.

Then replace AQUAvalve collar.

3



Place AQUAvalve cover over the AQUAvalve.

The AQUAvalve and cover should be placed directly onto the tray.

Never sit the AQUAvalve and cover on capilliary matting.

4



Ensure the circular spirit level indicates the tray is level, adjust if required.

Place plant pots into tray.

5



Cut 6mm pipe to appropriate length if required.

Connection Option 1

6



Connecting your easy2GO Kit to a simple plastic container.

Drill a hole into the side of the container, 25mm from the base. Use a 3-5mm drill bit to create a pilot hole and a 10mm drill bit for the final hole.

Insert 6mm Top Hat Grommet into 10mm hole, push 6mm pipe through the Grommet and push 6mm filter into 6mm pipe.

Connection Option 2

7



Connecting to a reservoir tap.

A 10cm length of standard garden hose is required. Push hose onto tap.

Push 16/6mm inline filter onto hose. Attach 6mm pipe to the end of filter.

Clean filter once a month by simply unscrewing and removing the internal filter, with the tap turned off.

8



Fill reservoir with water and add liquid feed if required.

Organic feeds should NOT be poured in the reservoir. Organic fertilisers should be poured directly into the pots/tray from a watering can.

Note: The easy2GO kit can be placed anywhre in the tray