

CARSON[®]

LuméSeries

AS-70

2x Aspheric COB LED Hands-Free Magnifier with 7x Spot Lens

Congratulations on selecting your new magnifier! In order to achieve optimum performance, please follow instructions for proper use and care.



PRODUCT SPECIFICATIONS


Magnification:	2x/7x Spot Lens	Dimensions:	5.5" x 0.8" x 9.5"	Batteries:	2 AAA batteries (not included)
Lens Diameter:	114mm (4.5")	Illumination:	LED		
Weight:	0.37 lbs	Accessories:	Neck Cord		

INSTALLING BATTERIES

1. Pull open battery door located on back of magnifier.



2. Insert 2 AAA batteries in the correct polarity as indicated inside battery compartment. Replace battery door when finished.

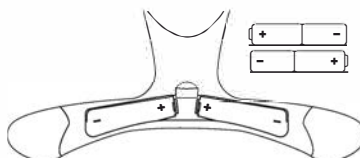


BATTERY WARNING


Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.

USING MAGNIFIER


1. Slip cord over head with magnifier hanging in front.

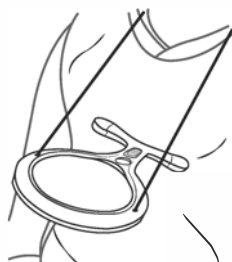

2. Slide bead to adjust cord to desired length.

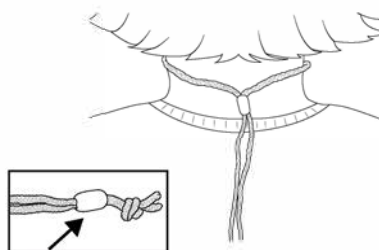

3. Slide switch up/down to turn LED light ON/OFF. Switch between two brightness settings.

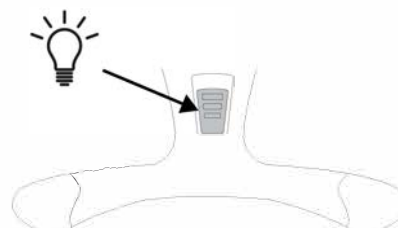

4. Place subject underneath magnifying lens.

Note: Depending on your vision, you may need to move the subject closer or further away from magnifying lens until focused.

5. To see superfine details, use the spot lens.

Note: The subject should be close to the spot lens.

CARE

Clean using microfiber lens cloth. Do not use any abrasives, chemical cleaners, or solvents.

Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.



✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

For warranty information, visit www.carson.com/warranty

www.carson.com

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000