

Neumärker

PROFESSIONAL

Lohstr. 13 - 58675 Hemer / Postfach 4063 - 58663 Hemer
Telefon: 02372/9274-0 Fax: 02372/3304
DEUTSCHLAND

Operating Manual

Rice Warmer

art.-no. 00-00339

www.neumaerker.de

1. General Information

- 1.1 Information about the instruction manual
- 1.2 Key to symbols
- 1.3 Liability and Warrantees
- 1.4 Copyright protection
- 1.5 Declaration of conformity

2. Safety

- 2.1 General information
- 2.2 Safety instructions for the commercial use of the device
- 2.3 Intended use

3. Delivery, packaging and storage

- 3.1 Delivery check
- 3.2 Packaging
- 3.3 Storage

4. Technical data

- 4.1 Technical specification
- 4.2 Overview of parts

5. Installation and operation

- 5.1 Safety instructions
- 5.2 Installation and connection
- 5.3 Operation

6. Cleaning and maintenance

- 6.1 Safety advice
- 6.2 Cleaning
- 6.3 Safety instructions for maintenance

7. Waste disposal

1. General information

1.1 Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards, which could lead to injury.

Please follow the instructions very carefully and proceed with particular attention in these cases.



WARNING! Electrical hazard!

This symbol draws attention to potential electrical hazards. If you do not follow the safety instructions, you may risk injury or death.



CAUTION!

This symbol highlights instructions, which should be followed to avoid any risk of damage, malfunctioning and/or breakdown of the device.



NOTE!

This symbol highlights tips and information, which have to be followed for an efficient and trouble-free operation of the device.

1.3 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology. If you have any questions, you should contact the manufacturer.



NOTE!

Read the instruction manual carefully before using the device. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.

The instruction manual should be kept near the device, easily accessible for anyone wishing to work with or using it. We reserve the right to make technical changes for purposes of developing and improving the useful properties.

1.4 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

1.5 Declaration of conformity

The device complies with the current standards and directives of the EU.

We certify this in the EC declaration of conformity.

If required we will be glad to send you the according declaration of conformity.

2. Safety

This section provides an overview of all important safety aspects.

In addition every chapter provides precise safety advice for the prevention of dangers which are highlighted by the use of the above mentioned symbols.

Furthermore, attention should be paid to all pictograms, markers and labels on the device, which must be kept in a permanent state of legibility.

By following all the important safety advice you gain an optimal protection against all hazards as well as the assurance of a safe and trouble-free operation.

2.1 General Information

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

Knowing the contents of the instruction manual as well as avoiding mistakes and thus operating this device safely and in a fault-free manner is very essential to protect yourselves from the hazards.

To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.

This device may only be operated in technically proper and safe condition.

2.2 Safety instructions for the commercial use of the device

The specifications regarding the industrial safety are based on the Regulations of the European Union applicable at the time of manufacturing the device. If the device is used commercially, the user is obliged to ensure that the said industrial safety measures concur with the state of the rules and regulations applicable at the time in question for the entire period of use of the device and to comply with the new specifications. Outside the European Union, the industrial safety laws applicable at the place of installation of the device and the regional territorial provisions must be complied with.

Besides the industrial safety instructions in the instruction manual, the general safety and accident prevention regulations as well as environment protection regulations applicable for area of application of the device must be followed and complied with.

- The device should be never left unattended during operation. Keep away children and other unqualified persons.
- Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device.
- Every person using the device must act in accordance to the manuals and under consideration of the safety advice.
- The device is to be used indoors only.

2.3 Intended use

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The **Rice Warmer** is designed for keeping warm rice only.

The **Rice Warmer** must not be used for:

- Keeping warm foods other than rice;
- Preparation of warm or hot water;
- Warming of fluids containing sugar, acids, leaches or alcohols;
- Filling and warming of warm, inflammable, noxious or volatilizing or similar fluids or materials.



CAUTION!

Do not use the device for anything beyond or other than its intended use.

The manufacturer and/or authorized parties do not accept any claims resulting from damage caused by using the device not according to its intended use.

The operator is totally liable for any such damage.

Observing the instructions for installation, use, maintenance and cleaning is considered part of the intended use.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt.

In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly. If required refresh or renew.


4. Technical data

4.1 Technical specification

Description:	Rice warmer
Item no.:	00-00339
Model:	Stainless steel
Temperature:	approx. 65° C
Capacity:	8,5 kg rice un boiled, 23 litres of boiled rice
Connection:	230 V 50 Hz 110 W
Dimensions:	approx. Ø 395 mm, height 372 mm
Weight:	10 kg
Accessories:	1 rice spoon, 1 stirring spoon

Changes reserved!

4.2 Overview of parts

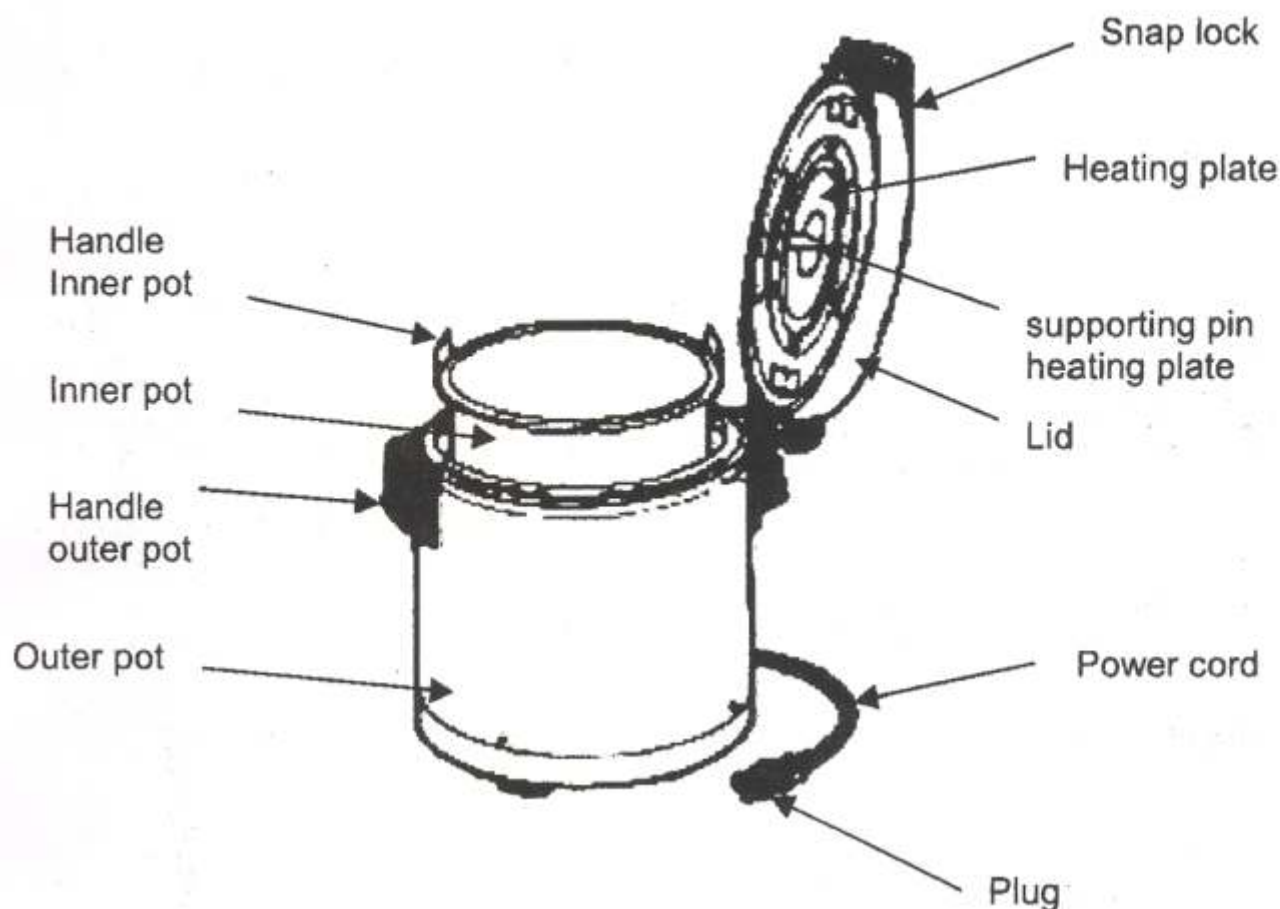

5. Installation and operation

5.1 Safety instructions



WARNING! Electrical hazard!

Connect the device to a properly installed and grounded single power socket. Never yank cord to disconnect from outlet. Cable must not touch any hot parts.

- See that the cable does not touch any heat sources or sharp edges. Do not let the cable dangle over the counter edge.



WARNING!

During operation some parts of the device become very hot. In order to avoid injuries do not touch any hot parts.

- Do not use the device in case it does not function properly, has been damaged or dropped.

- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Do not tip over the device.



WARNING! Hazard via electrical current!

The device can cause injuries due to improper installation!

Before installation the local power grid specification should be compared with that of the device (see type label).

Connect the device only in case of compliance! Take note of the security advice!

5.2 Installation and connection

- Discard the complete packing material after unpacking the device.
- Place the device on top of an even and safe surface which supports the weight of the device and is not heat sensitive.
- Not **at any time** should you place the device on an inflammable surface (such as: table cloth, carpet, etc.).
- You must not position the device near open fireplaces, electric ovens/arc furnaces, furnaces/electric heaters or other heat sources.
- Position the device in a way so that the power plug is always accessible.
- Do not move the device during operation.
- Before first use, clean the removable inner pot with a soap sud, rinse and wipe dry afterwards. Make sure that the inner pot has been completely wiped dry before inserting it into the outer pot.
- Use a soft and damp cloth in order to wipe the heating plate and dry it off afterwards.
- Wipe the outer (inside and outside) pot with a soft, damp cloth in order to remove any dust remaining from packing and transport.



CAUTION!

Not at any time the outer pot should be filled with water or other fluids.

Not at any time the outer pot should be filled with water or other fluids. See to it that the outer pot is dry and clean before inserting the inner pot.

5.3 Operating

- Place the inner pot in the outer pot and close the lid.
- Connect the plug to a grounded single-socket
- The red power control lamp on the lid of the rice warmer flashes up.

Red power control lamp



CAUTION!

Before filling in the rice, the device should always be pre-heated for approx. 30 Minutes.

- After pre-heating, fill the hot cooked rice into the inner pot and close the lid of the rice warmer.
- The rice may be kept warm at approx. 65 ° C for about 12 hours, provided that the rice had been filled in hot condition.



NOTE!

The rice warmer is not meant for the heating of cold rice!

- Do not disconnect the device from power supply (e.g. pull the plug) during operation.
- After heating/keeping warm has been finished disconnect the device from power supply by pulling the power plug from the socket.

6. Cleaning and maintenance

6.1 Safety advice

- Before beginning with repair or cleaning works make sure the device has been disconnected from power socket (pull the power plug!!!) and has cooled down.
- Do not use any acid agents and make sure no water ingresses the device.
- To protect yourself from electric shock, **never** immerse the device, its cables and the plug in water or other liquids.

6.2 Cleaning

- The device must be cleaned daily.
- Remove the inner pot from the outer pot and rinse it thoroughly with a soap sud and wipe it dry afterwards. Make sure that the inner pot has been completely wiped dry before reinserting it into the outer pot.

- Clean the heating plate thoroughly with a soft, damp cloth.
- Wipe the outer (inside and outside) pot with a soft, damp cloth. Wipe it dry afterwards.



CAUTION!

Do not use any abrasive or acid detergents as these might affect or damage the surface.

- Use soft cloth only and make sure you **never** use any kind of abrasive agents or pads, which could scratch the surface.
- After the cleaning procedure you should use a soft and dry cloth to wipe dry and polish the surface.
- Make sure the device has been cleaned properly before storing it in a dry place.

6.3 Safety instructions for maintenance

- Check the mains lead from time to time to ensure it isn't damaged in any way. Never use the device if the lead is damaged. If the lead is damaged it must be replaced by a qualified electrician.
- In case of damage or malfunction, please contact your stockist or our customer service centre.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



NOTE!



For the disposal of the device please consider and act according to the national and local rules and regulations.