



HANDLING INSTRUCTION

FIBERFOX | Fiber Chassis Connector 2 & 4-channel



CAUTION:
Laser radiation CLASS 1. Do not look directly into beam of light!

A Chassis Connector Cleaning / Inspection

Tools:

- Distilled water
- Dust remover (Air in a can)
- STICKLERS Clean STIXX MCC-EB12 - Expanded Beam Lens



NO2M4DW-FX



NO4M4DW-FX

Disconnect both cable ends for safety reasons.

Do not stare into beams or view directly with optical instruments.

Ⓐ Remove the protection cap.





Ⓑ

Ⓒ



Ⓑ Check the lenses for contamination.

Ⓒ If there is no visible contamination.
→ No cleaning necessary.

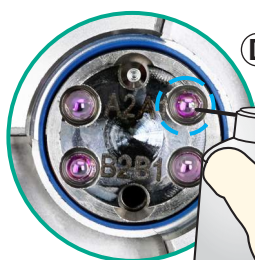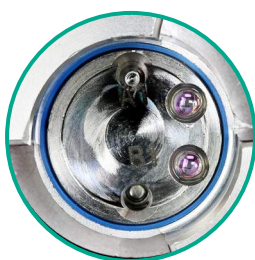

Ⓓ

Ⓓ A – small contamination:
Use the dust remover to apply air to the lenses.

