

HMa/E01

Wideband Plug-On Transmitter

With Digital Hybrid Wireless® Technology



Digital Hybrid Wireless®
US Patent 7,225,135

CE 1313 !

Fill in for your records:

Serial Number:

Purchase Date:

Thank you for selecting a Lectrosonics HMa/E01 plug-On transmitter. The unique design provides several distinct features for professional applications:

- Outstanding RF operating range
- Superb audio quality
- Corrosion-resistant housing
- Programmable compatibility modes for use with a wide variety of different receivers

The Digital Hybrid Wireless® design (US Patent 7,225,135) combines 24-bit digital audio with analog FM resulting in a system that has the same operating range as analog systems, the same spectral efficiency as analog systems, the same long battery life as analog systems, plus the excellent audio fidelity typical of pure digital systems.

The transmitter uses a standard 3-pin XLR input jack for use with any microphone with a mating XLR connector. An LCD, membrane switches and multi-color LEDs on the control panel make input gain adjustments and frequency and compatibility mode selection quick and accurate, without having to view the receiver. The housing is machined from a solid aluminum block to provide a lightweight and rugged package. A special non-corrosive finish resists salt water exposure and perspiration in extreme environments.

The DSP-based design works with all Digital Hybrid receivers, and is backward compatible for use with Lectrosonics 200 and 100 Series and IFB receivers and some other brands of analog wireless receivers. Companion receivers are covered in separate manuals.

Table of Contents

General Technical Description	4
Wideband Design.....	4
Digital Hybrid Wireless® Technology	4
No Pre-Emphasis/De-Emphasis	4
Low Frequency Roll-Off	4
Input Limiter	5
Signal Encoding and Pilot Tone	5
Microprocessor and DSP	5
Compatibility Modes.....	5
Control Panel	5
Battery Options and Operating Time	5
Frequency Blocks and Bands	5
Controls and Functions	6
LCD Screen	6
Power LED	6
Audio Input Jack.....	6
Battery Compartment.....	6
Modulation LEDs.....	6
Audio Button	6
Up/Down Arrows and Panel Lockout.....	6
Antenna.....	6
Battery Installation	7
Attaching/Removing a Microphone	7
Operating Instructions	8
Power Up and Boot Sequence.....	8
Power Down.....	8
Automatic Power Restore.....	8
Standby Mode	8
Up Button Menu	8
Down Button Menu	9
Audio Screen Menu	10
Setting Transmitter Operating Frequency.....	11
Lock/Unlock Screen	12
LectroRM	13
Special Purpose Barrel Adapters.....	14
MCA-M30.....	14
Accessories	15
Specifications and Features.....	16
EU Declaration of Conformity	17
Troubleshooting.....	18
Service and Repair	20
Returning Units for Repair	20

General Technical Description

Wideband Design

The HMa/E01 transmitter uses ± 75 kHz wide deviation for an excellent signal to noise ratio and wide dynamic range. The DSP controlled input limiter features a wide range dual envelope design which cleanly limits input signal peaks over 30 dB above full modulation. Switching power supplies to provide constant voltages to the transmitter circuits from the beginning (3 Volts) to the end (1.7 Volts) of battery life, and an ultra low noise input amplifier for quiet operation.

Digital Hybrid Wireless® Technology

All wireless links suffer from channel noise to some degree, and all wireless microphone systems seek to minimize the impact of that noise on the desired signal. Conventional analog systems use companders for enhanced dynamic range, at the cost of subtle artifacts (known as “pumping” and “breathing”). Wholly digital systems defeat the noise by sending the audio information in digital form, at the cost of some combination of power, bandwidth and resistance to interference.

Lectrosonics Digital Hybrid Wireless® systems overcome channel noise in a dramatically new way, digitally encoding the audio in the transmitter and decoding it in the receiver, yet still sending the encoded information via an analog FM wireless link. This proprietary algorithm is not a digital implementation of an analog compander but a technique that can be accomplished only in the digital domain, even though the inputs and outputs are analog.

Channel noise still impacts received signal quality and will eventually overwhelm a receiver. Digital Hybrid Wireless® simply encodes the signal to use a noisy

channel as efficiently and robustly as possible, yielding audio performance that rivals that of wholly digital systems, without the power and bandwidth problems inherent in digital transmission.

Because it uses an analog FM link, Digital Hybrid Wireless® enjoys all the benefits of conventional FM wireless systems, such as excellent range, efficient use of RF spectrum, and resistance to interference. However, unlike conventional FM systems, it does away with the analog compander and its artifacts.


No Pre-Emphasis/De-Emphasis

The Digital Hybrid Wireless® design results in a signal-to-noise ratio high enough to preclude the need for conventional pre-emphasis (HF boost) in the transmitter and de-emphasis (HF roll-off) in the receiver. This eliminates the potential for extreme distortion on signals with abundant high-frequency information.

Low Frequency Roll-Off

The low frequency roll-off can be set for a 3 dB down point at 35, 50 or 70 Hz to control subsonic and very low frequency audio content in the audio. The actual roll-off frequency will vary slightly depending upon the low frequency response of the microphone.

Excessive low frequency content can drive the transmitter into limiting, or in the case of high level sound systems, can even cause damage to loudspeaker systems. The roll-off is normally adjusted by ear while listening as the system is operating.

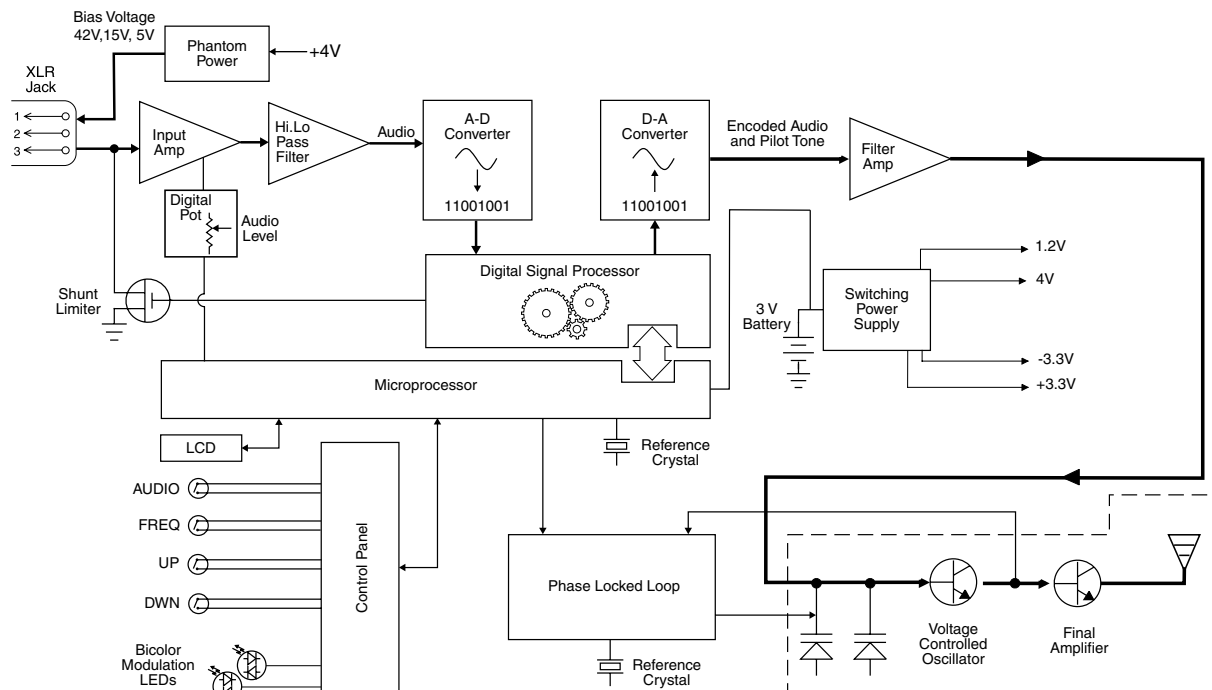

Input Limiter

A DSP-controlled analog audio limiter is employed before the analog-to-digital (A-D) converter. The limiter has a range of more than 30 dB for excellent overload protection. A dual release envelope makes the limiter acoustically transparent while maintaining low distortion. It can be thought of as two limiters in series, a fast attack and release limiter followed by a slow attack and release limiter. The limiter recovers quickly from brief transients, with no audible side effects, and also recovers slowly from sustained high levels, to keep audio distortion low and while preserving short term dynamics.

Signal Encoding and Pilot Tone

In addition to controlling the limiter, the DSP also encodes the digitized audio from the A-D converter and adds an ultrasonic pilot tone to control the receiver's squelch. A pilot tone squelch system provides a reliable method of keeping a receiver output muted (squelched) even in the presence of significant interference. When the system is operating in the hybrid mode, a different pilot tone frequency is generated for each carrier frequency to prevent inadvertent squelch problems and simplify multi-channel coordination.

Microprocessor and DSP

A microprocessor monitors user command inputs from the control panel buttons and numerous other internal signals. It works intimately with the DSP to ensure the audio is encoded according to the selected Compatibility Mode and that the correct pilot tone is added to the encoded signal.

Compatibility Modes

The transmitter was designed to operate with Lectrosonics Digital Hybrid Wirtless® receivers and will yield the best performance when doing so. However, due to the flexibility of digital signal processing, the transmitters can also operate in various compatibility modes for use with Lectrosonics Hybrid (400 mode), Mode 3 and IFB receivers. It will also work with certain non-Lectrosonics receivers. Contact your sales representative or the factory for a complete list of compatible non-Lectrosonics receivers.

Control Panel

The control panel includes four membrane switches and an LCD screen to adjust the operational settings. Multi-color LEDs are used to indicate audio signal levels for accurate gain adjustment and for battery status.

Battery Options and Operating Time

Switching power supplies convert battery voltages to operate various circuit stages with maximum efficiency.

Frequency Blocks and Bands

Lectrosonics established a "block" numbering system years ago to organize the range of frequencies available from the low 500 MHz band to the upper 700 MHz band. Each block includes 256 frequencies in 100 kHz increments. The block number is part of a simple formula to derive the frequency. The block number is multiplied by 25.6 to produce the lowest frequency in the block. For example, block 27 x 25.6 = 691.200.

The HMa/E01 transmitter features a wideband tuning range that covers three blocks. This tuning range is referred to as a **BAND** rather than a block.

Band	Tuning Range (MHz)
A1	170.100 - 534.575
B1	537.600 - 614.375
C1	614.400 - 691.175

B1 and C1 bands are compatible with Block 606 receivers via a simple process of setting the band in the menu. See **DOWN BUTTON MENU** for details.

Controls and Functions



LCD Screen

The LCD is a numeric-type Liquid Crystal Display with several screens that allow settings to be made with the AUDIO, FREQ, UP and DOWN buttons to configure the transmitter. The transmitter can be turned on in a **Standby** mode to make adjustments without the risk of interfering with other wireless systems nearby. Counters are presented on the LCD enabling this function.

Power LED

The PWR LED glows green when the batteries are good. The color changes to red when there is about 20 minutes of life left. When the LED begins to blink red, there are only a few minutes of life.

A weak battery will sometimes cause the PWR LED to glow green immediately after being put into the unit, but will soon discharge to the point where the LED will go red or shut off completely.

Audio Input Jack

The XLR input jack on the transmitter accommodates most hand-held microphones. Phantom power can be set at various levels for use with a wide variety of electret microphones.

Battery Compartment

The battery compartment door is made of machined aluminum and is hinged to the housing to prevent it being damaged or lost.

Modulation LEDs

The Modulation LEDs provide a visual indication of the input audio signal level from the microphone. These two bicolor LEDs can glow either red or green to indicate modulation levels. Full modulation (0 dB) occurs when the -20 LED first turns red.

Signal Level	-20 LED	-10 LED
Less than -20 dB	● Off	● Off
-20 dB to -10 dB	● Green	● Off
-10 dB to +0 dB	● Green	● Green
+0 dB to +10 dB	● Red	● Green
Greater than +10 dB	● Red	● Red

Audio Button

The AUDIO button is used to display the audio level setting, low frequency roll-off and phantom power mode. Repeatedly pressing the button will cycle through the available settings, allowing the UP and DOWN arrow buttons to adjust the values.

Freq Button

The FREQ Button displays the selected operating frequency and also toggles the LCD between displaying the actual operating frequency in MHz and a two-digit hexadecimal number. Frequencies can be selected in either 100kHz or 25kHz steps. The appearance of the hexadecimal number is different in the 100kHz step size mode than in the 25kHz step size mode.

NOTE: The FREQ and AUDIO buttons are used together to enter the standby mode and to turn the power on or off.

Up/Down Arrows and Panel Lockout

The Up and Down arrow buttons are used to select the operating frequency, adjust the audio level, or set the Compatibility Mode.

Pressing both arrows simultaneously enters the lock countdown. Holding the two buttons in until the countdown is completed locks the control panel buttons so they can only be used to display current settings. "Loc" is displayed to indicate the controls are locked when a button is pressed while the panel is locked.

Once locked, the buttons are unlocked by removing the battery.

Antenna

An antenna is formed between the housing and the attached microphone, operating much like a dipole type. At UHF frequencies the length of the housing is similar to 1/4 wavelength of the operating frequency, so the antenna is surprisingly efficient, which helps extend the operating range and suppress noise and interference.

Battery Installation

The transmitter is powered by two AA batteries.


Note: Standard zinc-carbon batteries marked “heavy-duty” or “long-lasting” are not adequate.



Batteries operate in series, with a connecting plate built into the battery door

To install new batteries:

1. Slide open the Battery Cover and remove any old batteries.
2. Insert the new batteries into the housing. One battery goes in positive (+) end first, the other negative (-) end first. Look into the battery compartment to determine which end goes in which side. The side with the plastic ring is the side which accepts the positive end of the battery.

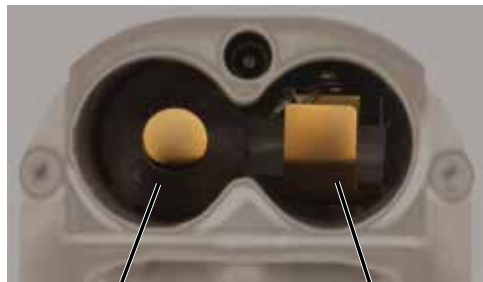

positive (+)
terminal

negative (-)
terminal

Note: It is possible to install the batteries backward and close the battery door, but the batteries will not make contact and the unit will not work.


3. Slide the Battery Cover until it snaps securely shut.

Attaching/Removing a Microphone

The spring loaded coupler under the XLR jack maintains a secure fit to the microphone jack with continuous pressure applied by an internal spring.

To attach the microphone, simply align the XLR pins and press the microphone onto the transmitter until the coupler retracts and latches. A click sound will be heard as the connector latches.

To remove the microphone, hold the transmitter body in one hand with the microphone pointing upward. Use your other hand to rotate the coupler until the latch releases and the coupler rises slightly.

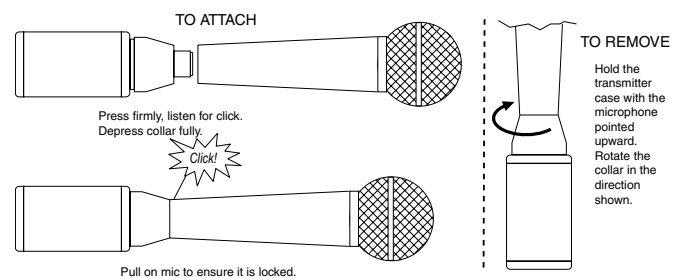

NOTE: Do not hold or apply any pressure to the microphone body while trying to remove it, as this may prevent the latch from releasing.

Operating Instructions



Power Up and Boot Sequence

- 1) Ensure that good batteries are installed in the unit.
- 2) Simultaneously press and hold the AUDIO and FREQ buttons. Continue holding the buttons until **On** and the characters **1, 2, 3** have appeared. The boot sequence will then initiate.



Initial Power On
Timer Screen

As the unit turns on, the Modulation LEDs and PWR LED all glow red, then green, and then they revert to normal operation.

The LCD displays a bootup sequence which consists of four screens:

Category:	Example
Company Name:	Lectro
Frequency Band (XX) and Firmware Version (rX.X):	A1 r1.00
Compatibility Mode:	CP 400
RF Power Output:	100
Operating Frequency	482.875

Power Down

Simultaneously press and hold the AUDIO and FREQ buttons. Continue holding the buttons until **OFF** and the countdown characters **3, 2, 1** have appeared. The unit will then power down.



Initial Power Off
Timer Screen

If the AUDIO and FREQ buttons are released before the LCD goes blank at the end of the countdown, the unit will not turn off. Instead, it will stay on and the LCD will return to the previous screen.

NOTE: If batteries are removed or reach the end of life while the unit is turned on, the unit will turn back on with a brief, simultaneous press of the AUDIO and FREQ buttons. The counting sequence will not be displayed in this instance.

Automatic Power Restore

The firmware will remember the power on/off state and the settings when batteries reach their end of life or are removed. When fresh batteries are installed, the unit will reboot and return to the previous settings without the need to press any buttons. This only works when the unit is fully on and transmitting. **It does not work in the Standby Mode.**

Standby Mode



Standby Screen

Standby Mode allows you to verify or change the transmitter's operating frequency or audio input level without transmitting a signal. Quickly press and release both the AUDIO and FREQ buttons simultaneously to enter and exit this mode. The characters **rF OFF** will appear on the LCD while the unit is in the standby mode.

Up Button Menu

Hold the UP button while powering up the unit. Then press the **AUDIO** button repeatedly to scroll through the following settings. Use the **UP** and **DOWN** arrow to select the available options under each setting.

Compatibility Mode Screen (Up Button Menu)



CP (Complativity Mode): press the **UP** and **DOWN** arrows to select one of the following:

Note: RF transmission is prevented while selecting Compatibility Modes. Also, the HM exits this screen to the Standby Mode.

- 400 - For Digital Hybrid Wireless® receivers.
- 3 - (Mode 3) For non-Lectrosonics analog receivers. Contact the the factory for details.
- IFB - For Lectrosonics IFB receivers.

While in the compatibility mode screen, pressing either the AUDIO or FREQ button exits to standby mode. To power off from the compatibility mode screen, press and hold AUDIO and FREQ together.

RF Power Output (Up Button Menu)

Pr (RF Power output) may be selected as either 100 or 50.



Selecting the Audio Polarity (UP Button Menu)



The character **P** denotes "positive" polarity and the character **n** denotes "negative" polarity.

NOTE: The audio polarity can also be reversed at the output of most Lectrosonics receivers.

Selecting Step Size mode (UP Button Menu)

The frequency increments can be set at either 25 kHz or 100 kHz. Hold the UP arrow in while powering up the unit to enter the setup screen. Press the AUDIO button repeatedly to step through the setup items to reach the Step Size Mode screen. Use the UP or DOWN arrow button to select the desired setting.

STP 100

STP 25

Down Button Menu

Hold the **DOWN** button while powering up the unit. Then press the **AUDIO** button repeatedly to scroll through the following settings. Use the **UP** and **DOWN** arrow to select the available options under each setting.

Remote Control with “Dweedle Tones” (DOWN Button Menu)

Various settings on the transmitter can be adjusted with special audio tones (“dweedle tones”) delivered to the microphone. The tones are generated by a smart phone using the LectorRM app.

LectorRM is a third party application written by New Endian for iOS and Android smart phones that generates the control tones for the remote control functions. The app is available for purchase from the App Store or Google Play for about \$20.

HMa-E01transmitter settings that can be adjusted:

- Audio input level (gain)
- Operating frequency
- Panel Lock/Unlock
- RF power output
- Low frequency roll-off filter
- Power LED on/off

Enable the remote control function by holding the DOWN arrow then pressing the **AUDIO** and **FREQ** buttons at the same time. Use the arrow buttons to select **on** to enable the function, or **off** to disable the function.

rc on rc off

If a remote control signal is detected but the function is turned off, the message **rc off** will be displayed briefly on the transmitter’s LCD to confirm that a valid signal was received, but that the control function is not enabled. If a remote control setting is delivered to the transmitter that is not available, such as SLEEP/UN-SLEEP in the HMa-E01, the display on the transmitter will show — — — — — and then return to the previous screen.

The usable distance between the microphone and the smart phone will vary with the input gain setting on the transmitter and the volume control setting on the smart phone.

NOTE: Any microphone/transmitter within range of the smart phone will “hear” and execute the remote control command. Be careful to make sure only the desired microphone/transmitter is within range when delivering the audio tone.

Power Back On (DOWN Button Menu)

PBAC (Power back on after power loss) allows the unit to either (1) turn back on after power loss or (0) remain off.

PBAC 1

PBAC 0

LCD Backlight Setting (Down Button Menu)

The LCD backlight can be set to turn off after either 5 minutes or 30 seconds or stay on continuously. Hold the DOWN arrow in while powering up the unit to enter the setup screen. Press the AUDIO button repeatedly to step through the setup items to reach the backlight settings screen. Use the UP or DOWN arrow button to select the desired setting.

bL 5

bL on

bL 30

Band/Legacy Block 606 Setting (DOWN Button Menu)

This allows access to either the full C1 band, or only a portion of Block 606. This is important if you are using this transmitter with a Block 606 receiver such as an SRb/E01-606 or a UCR411a-606, since the pilot tones must match for the receiver to recognize the signal from the transmitter.

b C1

b 606

Audio Screen Menu

Aud 12

LF 35

PH 48

The Audio Screen is used to adjust input gain and low frequency roll-off, and to turn phantom power on and off. Repeatedly pressing the AUDIO button selects the setting. Press and hold the AUDIO button and use the UP and DOWN arrows to adjust the value.

Adjusting the Input Gain (Audio Screen Menu)

The control panel Modulation LEDs indicate the modulation level and limiter activity. This gain adjustment matches the transmitter gain with the microphone's output level, the user's voice level and the position of the microphone. Once set, the transmitter's audio level setting **should not** be used to control the volume of your sound system or recorder levels. The audio input level can be set with the unit in Standby Mode or while powered up in normal operation.

Signal Level	-20 LED	-10 LED
Less than -20 dB	● Off	● Off
-20 dB to -10 dB	● Green	● Off
-10 dB to +0 dB	● Green	● Green
+0 dB to +10 dB	● Red	● Green
Greater than +10 dB	● Red	● Red

Note: Voice levels vary significantly between different people. If several different people will be using the transmitter and there is not time to make the adjustment for each individual, adjust it for the loudest voice.

- 1) With the HMa/EO1 powered off, insert the microphone plug into the XLR Input Jack, aligning the pins and ensuring that the connector locks.
- 2) Place the transmitter in the Standby Mode, or if the unit is to be powered up and adjusted, mute the main sound system prior to powering up the transmitter.
- 3) Position the microphone in the location where it will be used in actual operation.
- 4) Observe the audio level LEDs while speaking or singing into the microphone at the same voice level that will be used during use. While holding the AUDIO button, press the UP or DOWN arrows until the both the -20 and -10 LEDs glow green, with the -20 LED flickering red on louder peaks. This will optimize the signal to noise ratio of the system with full modulation and adequate headroom to prevent overload and audible compression of signal peaks.

Note: Setting the audio level too high reduces the dynamic range of the audio signal. Setting the audio level too low may cause hiss and noise in the audio.

- 5) If the unit was set up in Standby Mode, it will be necessary to turn the transmitter off, then power it up again in normal operation so the RF output will be on. Then the other components in the sound or recording system can be adjusted.

Adjusting the Low Frequency Roll-off (Audio Screen Menu)

Repeatedly press the AUDIO button until the LF roll-off adjustment screen appears. Then press and hold the AUDIO button while selecting the desired roll-off frequency with the UP and DOWN arrows.

LF 35

LF 70

The roll-off frequency can be set to 35, 50 or 70 Hz.

Selecting the Phantom Power Supply (Audio Screen Menu)

The transmitter input jack can provide phantom power for the attached microphone if needed, with voltages at 5, 15 or 48. Phantom power will consume a slight amount of battery power, so it can also be turned off. With the transmitter powered on and in the normal or standby mode, press and hold the audio button and observe the LCD. Release the button and press and hold it again. Repeat this process until the display indicates the **PH**.

PH off

Once you get to the **PH** setting, keep the **AUDIO** button pressed, then use the UP and DOWN arrow keys to cycle through the available settings (off, 5, 15, 48 volts) until the desired setting is displayed.

PH 48

When you release the **AUDIO** button, the setting will be stored to the value you selected.

About the Phantom Power Supply

Three phantom voltages are selectable from the control panel. The voltages are:

- **5 Volts** for lavalier microphones,
- **15 Volts** for some professional mics requiring high current and for many common stage mics that will operate over a wide phantom Voltage range of 12 to 48 Volts. With the proper adapter, this position can also be used with T power microphones. See our web site for details on finding or making the proper adapter.
- **48 Volts** for microphones that do in fact require a supply greater than 18 Volts. (See below for a discussion of why 42 and not a "true" 48 Volts.)

For longest battery life use the minimum phantom voltage necessary for the microphone. Many stage microphones regulate the 48 Volts down to 10 Volts internally anyway, so you might as well use the 15 Volt setting and save some battery power. If you are not using a microphone for the input device, or are using a microphone that does not require phantom power, turn the phantom power off.

Phantom power should only be used with a fully floating, balanced device such as most microphones with a 3-pin XLR connector. If you use the phantom power with an unbalanced device or if pins 2 or 3 are DC connected to ground, then you will draw maximum current from the power supply. The HM is fully protected against such shorts but the batteries will be drained at twice the normal rate.

The transmitter can supply 4 mA at 42 Volts, 8 mA at 15 Volts, and 8 mA at 5 Volts. The 42 Volts setting actually supplies the same voltage to a 48 Volt microphone as the DIN standard arrangement due to a dynamic biasing scheme that does not have as much voltage drop as the DIN standard. The 48 Volt DIN standard arrangement protects against shorts and high fault current with high resistance in the power supply feeds to pins 2 and 3. This provides protection if the supply current is accidentally shorted to ground and also keeps the microphone from being attenuated by the power supply.

The HMa/E01 improves on those functions and is able to use less power from the battery by using constant current sources and current limiters. With this dynamic arrangement the HMa/E01 can also supply more than twice the current of competing 48 Volt plug on units and provide four times the current for some very high end 15 Volt microphones.

Setting Transmitter Operating Frequency

- 1) If the LCD is displaying something other than the Frequency Screen, press the **FREQ** button on the Control Panel to enter this screen.

Note: The default display is in MHz. Pressing the **FREQ** button again displays the operating frequency as a two-digit hexadecimal number that corresponds to legacy Lectrosonics products that used two 16-position switches to set the frequency.

- 2) While holding the **FREQ** button, use the **UP** or **DOWN** arrow buttons to move the operating frequency up or down.

Note: The operating frequency displayed on the LCD wraps as it reaches the upper or lower end of its range. Thus, if you intend to move the operating frequency from the lower end of the range to the upper end, it may be faster to do this by using the **DOWN** arrow until the frequency wraps to the upper end.

Set Up in 100kHz Step Size

536.600

Frequency displayed
in MHz

c. 20.F6

Frequency displayed as
two-digit hexadecimal
number

The operating frequency can be displayed either in MHz or as a two-digit hexadecimal number. The example of the two-digit display shown here indicates **CH** (channel) and **2C** as the frequency.

The frequency can be set with the unit in standby mode or when powered up for normal operation.

Set Up in 25kHz Step Size

536.625

Frequency expressed in MHz

The hexadecimal display in the 25 kHz mode will appear with a decimal suffix to indicate the 25 kHz steps.

20.F6.25

Frequency in hex

Standard
frequency
block (20)

Frequency
in hex
code (F6)

Offset in
MHz (.25)

Examples:

47.39.75

475.875 MHz

47.C9.25

490.225 MHz

19.0C.50

487.650 MHz

19.E4.00

509.200 MHz

Lock/Unlock Screen

Simultaneously pressing and holding both the UP and DOWN arrow buttons during normal operation starts the Lock timer. The timer starts at three and counts down to zero. When the timer reaches zero, the keypad controls are locked.



The LCD will display the locked condition as long as the arrow buttons are held, then revert back to the previous screen when either button is released.

With the controls locked, the AUDIO and FREQ buttons can still be used to display current settings. Any attempt to change a setting by pressing either the UP or DOWN arrow button will result in an on-screen **Loc** reminder that the controls are locked. Remove the batteries to unlock the control panel.

Important: Once the transmitter is locked, it cannot be unlocked or powered off using the buttons. The only way to unlock a locked transmitter is to remove the batteries.

LectroRM

By New Endian LLC

LectroRM is a mobile application for iOS and Android operating systems. Its purpose is to remotely control Lectrosonics Transmitters, including:

- SM Series
- WM
- L Series
- HMa, HMa/E01

The app remotely changes settings on the transmitter through the use of encoded audio tones, which when received by the attached microphone, will alter the configured setting. The app was released by New Endian, LLC in September 2011. The app is available for download and sells for \$20 on the Apple App Store and Google Play Store.

LectroRM's remote control mechanism is the use of an audio sequence of tones (dweedles) that are interpreted by the transmitter as a configuration change. The settings available in LectroRM are:

- Audio Level
- Frequency
- Sleep Mode
- Lock Mode

User Interface


The user interface involves selecting the audio sequence related to the desired change. Each version has an interface for selecting the desired setting and the desired option for that setting. Each version also has a mechanism to prevent accidental activation of the tone.

iOS



The iPhone version keeps each available setting on a separate page with the list of options for that setting. On iOS, the "Activate" toggle switch must be enabled to show the button which will then activate the audio. The iOS version's default orientation is upside-down but can be configured to orient right-side up. The purpose for this is to orient the device's speaker, which is at the bottom of the device, closer to the transmitter microphone.

Android

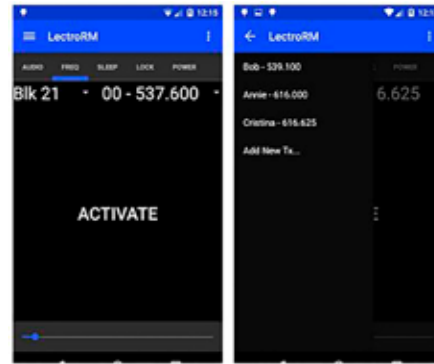

The Android version keeps all settings on the same page and allows the user to toggle between the activation buttons for each setting. The activation button must be long pressed to activate. The Android version also allows users to keep a configurable list of full sets of settings.

Activation

For a transmitter to respond to remote control audio tones, the transmitter must meet certain requirements:

- The transmitter must not be turned off; it can however be in sleep mode.
- The transmitter must have firmware version 1.5 or later for Audio, Frequency, Sleep and Lock changes.
- The transmitter microphone must be within range.
- The transmitter must be configured to enable remote control activation.

Please be aware this app is not a Lectrosonics product. It is privately owned and operated by New Endian LLC, www.newendian.com.

Special Purpose Barrel Adapters



Mic adapter for Earthworks M30 microphone with HM, HMa/E01 and UH400a/TM transmitters.

This polarity reversing adapter may be needed to correct for asymmetrical current draw in some P48 powered condenser microphones, including older Neumann 100 Series, Rode NTG3 and others. If your microphone does not power on correctly when used with these transmitters, insert the adapter between the transmitter and microphone.

MCA-M30



This adapter may be needed if you are experiencing noise or distortion with measurement microphones, particularly the Earthworks M30. The adapter has a common mode choke for suppressing RF noise. If your microphone signal exhibits the problems listed above when connected to a UH400, HM or HMa/E01 transmitter, insert the adapter between the microphone and the transmitter.

Insert the adapter between the transmitter and microphone to alleviate the problems listed above.



Accessories

PHTRAN3

Replacement leather pouch with clear plastic screen cover, rotating belt clip and snap closure. Included with transmitter at purchase.



MCA-TPOWER

This cable adapter is to be used with the UH200D, UH400, HM and HMa/E01 plug-on transmitters with T-powered microphones. It will protect a T-power mic against the 48V phantom power setting in the transmitter while allowing normal operation. The transmitter should be set to the 15V position for best operation and minimum battery drain.



MC5AX

Optional adapter for connecting a lavalier microphone to the HMa/E01 or HM transmitters. TA5M to XLR3-M connectors. Passes transmitter phantom power to bias the electret lavalier microphone. Includes zener protection to limit bias voltage to protect the microphone if transmitter phantom power is set too high.



Specifications and Features

Operating frequencies: (Frequency usage varies by country)

Band A1: 470.100 - 537.575
 Band B1: 537.600 - 614.375
 Band C1: 614.400 - 691.175

Channel Step Size:

Normal Tuning mode: 100 kHz
 Fine Tuning mode: 25 kHz

Frequency selection:

Control panel mounted membrane switches

RF Power output:

Adjustable 25/50 mW

Compatibility Modes (3)

Digital Hybrid Wireless™ (400 Series), analog mode 3 and IFB mode

Pilot tone:

25 to 32 kHz; 5 kHz deviation (in Digital Hybrid Mode)

Frequency stability:

± 0.002%

Deviation:

± 75 kHz max. (in 400 Series Mode)

Spurious radiation:

60 dB below carrier

Equivalent input noise:

-125 dBV, A-weighted

Input level:

If set for dynamic mic: 0.5 mV to 50 mV before limiting.
 Greater than 1 V with limiting.

If set for electret lavalier mic: 1.7 uA to 170 uA before limiting.
 Greater than 5000 uA (5 mA) with limiting.

Line level input: 17 mV to 1.7 V before limiting.
 Greater than 50 V with limiting.

Input impedance:

1K Ohm

Input limiter:

Soft limiter, 30 dB range

Gain control range:

55 dB

Modulation indicators:

Dual bicolor LEDs indicate modulation of -20, -10, 0, +10 dB referenced to full modulation.

Controls:

Control panel with LCD and four membrane switches.

Low frequency roll-off:

Selectable; -3dB at 35, 50 or 70 Hz.

Audio Frequency Response:

35 Hz to 20 kHz, +/-1 dB (The low frequency roll-off is adjustable)

Signal to Noise Ratio (dB):

(overall system, 400 Series mode)

SmartNR	No Limiting	w/Limiting
OFF	103.5	108.0
NORMAL	107.0	111.5
FULL	108.5	113.0

The dual envelope "soft" limiter provides exceptionally good handling of transients using variable attack and release time constants. The limiter reduces 30 dB of dynamic range into 4.5 dB, which reduces the measured figure for SNR without limiting by 4.5 dB.

Total Harmonic Distortion:

0.2% typical (400 Series mode)

Audio Input Jack:

3-pin Female XLR

Phantom Power:

- 5V @ 18 mA max.
- 15V @ 15 mA max.
- 48 V @ 4 mA max.
- OFF

Antenna:

Housing and attached microphone form the antenna

Batteries:

Two 1.5 Volt AA alkaline

Battery Life:

(Duracell Quantum alkaline)

- 16 hr. (no phantom power)
- 12hr. 45 min. (48V on)

Weight:

6.7 oz (190 grams) without batteries

Overall Dimensions:

4.25x1.62x1.38 inches

Emission Designator:

180KF3E

Specifications subject to change without notice.

EU Declaration of Conformity



P.O. Box 15900 - Rio Rancho, NM - 87174 - USA
Phone: (800)821-1121 or (505)892-4501 - Fax: (505)892-6243
web: www.lectrosonics.com - email: sales@lectrosonics.com

Declaration of Conformity

LECTROSONICS, INC.
581 Laser Road
Rio Rancho, NM 87124 USA

Declare under our sole responsibility that the following product:

HMA/E01 Wireless Microphone Transmitter

to which this Declaration relates, is in conformity with the directives and standards listed below,

Radio Spectrum R&TTE 1999/5/EEC

Standard: EN 300 422-2 v1.4.1 (2015-06)
Test report: R1509259-422

EMC Directive 2004/108/EC

Standard: EN 301 489-1 v1.9.2 (2011-09)
Standard: EN 301 489-9 v1.4.1 (2007-11)
Test report: R1509259-12

Safety/Low Voltage Directive 2006/95/EC

Standard: EN 60065-1: 2002 + A12:2011
Test report: R1509259-3
Standard: EN 62311: 2008
Test report: R1509259-SAR

and is in conformity with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 (RoHS Recast).

The product carries the CE mark:

CE1313 ⓘ

A handwritten signature in black ink, appearing to read 'R. Cummings'.

Robert Cummings
V.P. Engineering
Lectrosonics, Inc.

29 April 2016

Troubleshooting

Before going through the following chart, be sure that you have good batteries in the transmitter. It is important that you follow these steps in the sequence listed.

SYMPTOM

POSSIBLE CAUSE

TRANSMITTER PWR LED OFF

- 1) Batteries are inserted backwards or dead.
- 2) Transmitter not powered up. (See *Operating Instructions, Power UP and Boot Sequence.*)

AUDIO LEVEL LEDs NOT LIGHTING

- 1) Gain control set to minimum.
- 2) Batteries are inserted backwards or dead. Check PWR LED.
- 3) Mic capsule is damaged or malfunctioning.
- 4) Mic connector is damaged or mis-wired.

RECEIVER RF INDICATOR OFF

- 1) Transmitter not turned on, or is in Standby Mode.
- 2) Transmitter batteries are dead.
- 3) Receiver antenna missing or improperly positioned.
- 4) Transmitter and receiver not on same frequency. Check switches/display on transmitter and receiver.
- 5) Transmitter and receiver not on same frequency block.
- 6) Operating range is too great.

NO SOUND (OR LOW SOUND LEVEL), RECEIVER INDICATES PROPER AUDIO MODULATION

- 1) Receiver output level set too low.
- 2) Receiver output disconnected, or cable defective or mis-wired.
- 3) Sound system or recorder input is turned down.

DISTORTED SOUND

- 1) Transmitter gain (audio level) is far too high. Check audio level LEDs and receiver audio levels during use.
- 2) Receiver output may be mismatched with the sound system or recorder input. Adjust output level on receiver to the correct level for the recorder, mixer or sound system. (Use the receiver's Tone function to check level.)
- 3) Excessive wind noise or breath "pops." Reposition microphone and/or use a larger windscreen.
- 4) Transmitter is not set to same frequency as receiver. Check that operating frequency on receiver and transmitter match.
- 5) Receiver/Transmitter Compatibility Mode mismatched.

EXCESSIVE FEEDBACK

- 1) Transmitter gain (audio level) too high. Check gain adjustment and/or reduce receiver output level.
- 2) Talent standing too close to speaker system.
- 3) Mic is too far from user's mouth.

SYMPTOM**POSSIBLE CAUSE****HISS AND NOISE -- AUDIBLE DROPOUTS**

- 1) Transmitter gain (audio level) far too low.
- 2) Receiver antenna missing or obstructed.
- 3) Operating range too great.
- 4) Signal interference. Turn off transmitter. If receiver's signal strength indicator does not drop to nearly zero, this indicates an interfering signal may be the problem. Use a clear operating frequency.

“Loc” APPEARS IN DISPLAY WHEN ANY BUTTON IS PRESSED

- 1) Control Panel is locked. (See *Operating Instructions, Locking and Unlocking the Control Panel.*)

“Hold” APPEARS IN DISPLAY WHEN ARROW BUTTONS ARE PRESSED

Reminder that it is necessary to hold down the AUDIO or FREQ button to make adjustments to the audio gain or frequency settings.

“PLL” APPEARS IN DISPLAY

Indication that the PLL is not locked. This is a serious condition that requires factory repair. It may be possible to operate on another frequency far removed from the one that was selected when the unlocked condition was indicated.

Service and Repair

If your system malfunctions, you should attempt to correct or isolate the trouble before concluding that the equipment needs repair. Make sure you have followed the setup procedure and operating instructions. Check the inter-connecting cables and then go through the **Troubleshooting** section in this manual.

We strongly recommend that you **do not** try to repair the equipment yourself and **do not** have the local repair shop attempt anything other than the simplest repair. If the repair is more complicated than a broken wire or loose connection, send the unit to the factory for repair and service. Don't attempt to adjust any controls inside the units. Once set at the factory, the various controls and trimmers do not drift with age or vibration and never require readjustment. **There are no adjustments inside that will make a malfunctioning unit start working.**

LECTROSONICS' Service Department is equipped and staffed to quickly repair your equipment. In warranty repairs are made at no charge in accordance with the terms of the warranty. Out-of-warranty repairs are charged at a modest flat rate plus parts and shipping. Since it takes almost as much time and effort to determine what is wrong as it does to make the repair, there is a charge for an exact quotation. We will be happy to quote approximate charges by phone for out-of-warranty repairs.

Returning Units for Repair

For timely service, please follow the steps below:

- A. DO NOT return equipment to the factory for repair without first contacting us by email or by phone. We need to know the nature of the problem, the model number and the serial number of the equipment. We also need a phone number where you can be reached 8 A.M. to 4 P.M. (U.S. Mountain Standard Time).
- B. After receiving your request, we will issue you a return authorization number (R.A.). This number will help speed your repair through our receiving and repair departments. The return authorization number must be clearly shown on the **outside** of the shipping container.
- C. Pack the equipment carefully and ship to us, shipping costs prepaid. If necessary, we can provide you with the proper packing materials. UPS is usually the best way to ship the units. Heavy units should be "double-boxed" for safe transport.
- D. We also strongly recommend that you insure the equipment, since we cannot be responsible for loss of or damage to equipment that you ship. Of course, we insure the equipment when we ship it back to you.

Lectrosonics USA:

Mailing address:

Lectrosonics, Inc.
PO Box 15900
Rio Rancho, NM 87174
USA

Shipping address:

Lectrosonics, Inc.
581 Laser Rd.
Rio Rancho, NM 87124
USA

Telephone:

(505) 892-4501
(800) 821-1121 Toll-free
(505) 892-6243 Fax

Web:

www.lectrosonics.com

E-mail:

sales@lectrosonics.com

Lectrosonics Canada:

Mailing Address:

720 Spadina Avenue,
Suite 600
Toronto, Ontario M5S 2T9

Telephone:

(416) 596-2202
(877) 753-2876 Toll-free
(877-7LECTRO)
(416) 596-6648 Fax

E-mail:

Sales: colinb@lectrosonics.com
Service: joeb@lectrosonics.com

LIMITED ONE YEAR WARRANTY

The equipment is warranted for one year from date of purchase against defects in materials or workmanship provided it was purchased from an authorized dealer. This warranty does not cover equipment which has been abused or damaged by careless handling or shipping. This warranty does not apply to used or demonstrator equipment.

Should any defect develop, Lectrosonics, Inc. will, at our option, repair or replace any defective parts without charge for either parts or labor. If Lectrosonics, Inc. cannot correct the defect in your equipment, it will be replaced at no charge with a similar new item. Lectrosonics, Inc. will pay for the cost of returning your equipment to you.

This warranty applies only to items returned to Lectrosonics, Inc. or an authorized dealer, shipping costs prepaid, within one year from the date of purchase.

This Limited Warranty is governed by the laws of the State of New Mexico. It states the entire liability of Lectrosonics Inc. and the entire remedy of the purchaser for any breach of warranty as outlined above. NEITHER LECTROSONICS, INC. NOR ANYONE INVOLVED IN THE PRODUCTION OR DELIVERY OF THE EQUIPMENT SHALL BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THIS EQUIPMENT EVEN IF LECTROSONICS, INC. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE LIABILITY OF LECTROSONICS, INC. EXCEED THE PURCHASE PRICE OF ANY DEFECTIVE EQUIPMENT.

This warranty gives you specific legal rights. You may have additional legal rights which vary from state to state.



581 Laser Road NE • Rio Rancho, NM 87124 USA • www.lectrosonics.com
+1(505) 892-4501 • fax +1(505) 892-6243 • (800) 821-1121 US and Canada • sales@lectrosonics.com

5 February 2019