


SKYLORD EXP 7" / 9"

DRIVING LIGHT


WIRING INSTRUCTIONS

- RED: + POSITIVE
- BLACK: (-) NEGATIVE
- GREY: + SIGNAL WIRE FOR HIGH-BEAM*

(Connect only if controlled through the high-beam signal
Otherwise, leave disconnected.)

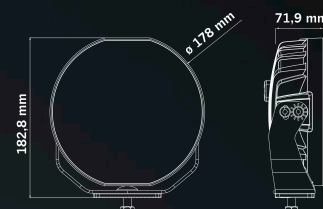

270947S1

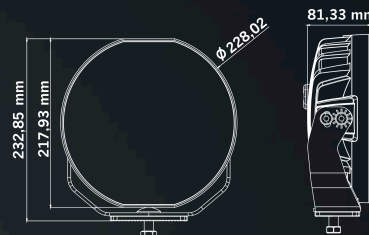

270948S1

TYPE OF CONNECTION: Loose cables (Fuse is not included), 2m cable



Please read the following instructions carefully before use.

❖**Compatibility:** The SKYLORD EXP DRIVING LIGHT only works with SKYN1 EXP wireless controller 907851S1. Make sure to purchase it separately. Light won't turn on without pairing wireless controller.

❖**Pre-installation testing is mandatory:** Make sure to connect all wires before you start pairing the wireless controller with the lights. Both the controller and the lights have Bluetooth connectivity, and the lights will only turn on using this SKYN1 EXP controller after pairing successfully. If the connection is loose, the light might not pair, so make sure the connection is correct. Always pair and test each light with the controller before final mounting, to confirm functionality and avoid disassembly later.

❖**Bluetooth Pairing and connection:** Each controller has a unique Bluetooth address code. The button's background light will remain off until the light is paired. In general, the EXP system requires connecting the positive and negative cables from each light to battery or power source (Make sure it get enough power to turn on light). For driving lights and LED bars, an additional signal cable is provided for the high beam signal or CAN bus solution. if you just need to operate with controller no need to connect signal cable. Once connection is ready light is ready to pair with SKYN1 EXP wireless controller.

Lights will pair one by one when you use several Driving lights. You can pair a new light at any time. Once the light is connected to power (battery), it will automatically search for nearby Bluetooth devices and connect to your controller.

❖**Safety Notice!** If the controller is lost or damaged, you will not be able to operate the light. For this reason, we recommend installing a safety fuse switch as a backup. Also, make sure to use a fuse before each connection if the light does not have a built-in fuse in the wiring. If a fuse is not used and the light is damaged, it may void the warranty. You can purchase a new controller it will work normally, but will need to be re-paired with the light already mounted on your vehicle.

Operation:

Once the light is connected, it can be operated using the signal cable at any time; this does not lock the high-beam function. If the controller is not paired, all light functions will remain locked.

To activate all functions, pair the wireless controller. Once paired, you can access: High-beam, E-mode, White position light, Amber position light.

Mode changes can only be made using the wireless controller there is no other way to switch modes. Check more information on page 2.

The controller has a memory function and will automatically remember the last active mode.

*After pairing, for changing modes, all button presses on the controller must be done while the background light is on or the corresponding function is active. If a button is off and you try to press it, no action will occur. Please keep this in mind when operating the controller.


Note: The signal cable will override the controller. Make sure to use it correctly.

Reset lights:

Touch the light's positive wire to the positive battery terminal 8 consecutive times (wait at least ≥ 0.5 seconds after each touch, repeating for a total of 8 consecutive times, make sure to complete reset within 40sec) to reset the light and remove it from the network.

Note: Do not touch too fast or too slow, otherwise the reset will not be successful. if you touch less than 0.5s it won't be reset so make sure to follow correct steps.



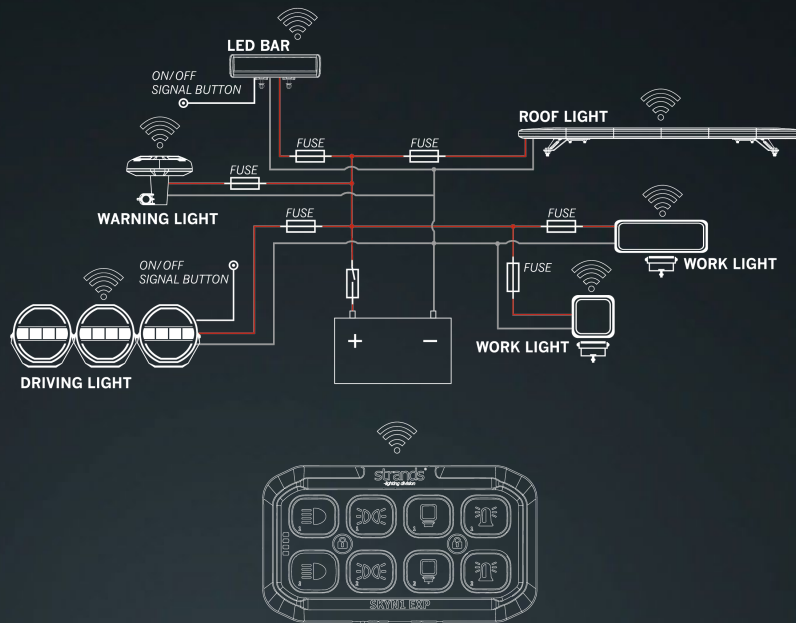

Example connection Step-by-Stepguide(Group1-Row1)

1. Make sure all lights are connected to the battery.
2. Press and hold the **Lock button (Pair) + Row 1, Button 1 together at least for 2 sec.**
3. Wait till each light takes 7–10 seconds to pair. If you have multiple lights, this may take longer.
4. Watch for confirmation:--Each light's main light will flash once it's successfully bound. --When all lights in Group 1 are bound, Row 1, Button 1 will flash amber.
5. Lights will auto-assign by type:

--Driving light/Led bar → **Button 1** (3pcs x 270948S1 SKYLORD EXP DRIVING LIGHT 9" | 1pcs x 902001S1 SKYLORD LED BAR 20")
 --Position lights → **Button 2** (WHITE/AMBER POS. LIGHT FROM LED BAR AND DRIVING LIGHT)
 --Work light → **Button 3** (1pcs X 906011S1 SKYLORD EXP QB WORK LIGHT | 1pcs x 906012S1 SKYLORD EXP DUO REVERSE)
 --Warning light → **Button 4** (1pcs x 905022S1 SKYLORD EXP WARNING LIGHT BEACON POLE MOUNT | 1PCS x 906012S1 SKYLORD EXP DUO WARNING LIGHT FUNCTION | 1 pcs ROOF BAR).

If a light doesn't bound(pair) simply retry 2–3 times until successful.

Note: A light that's already bound must be unbound first before it can be paired again.

BUTTON OPERATION:

HIGH-BEAM OR E-MODE (DRIVING LIGHT / LED BAR):

--Single press: Turn the light on/off

--Double press: Switch between Xperience / E-mode

(High and low intensity button background light according to mode: E-mode will have low-intensity white light, and Experience mode will have high-intensity white light.)

POSITION LIGHT (POS. LIGHT WHITE / AMBER):

--Single press: Turn the light on/off

--Double press: Switch Pos. light colors

(If the amber position light is selected, the background light will change to amber; the same applies when white is selected, the background light will be white.)

Pairing (Bind) instruction:

Press the **Lock button (pair) + Row 1, Button 1 together at sametime** for 2 sec to group all Skyn1 EXP lights that are connected to the battery and need to be assigned as Group 1. They will be assigned to all four buttons in the first row. All light types will automatically be assigned to their designated button:

Driving light → Row 1, Button 1; Position light (whether from an LED bar or driving light) → Button 2; Work light → Button 3; and Warning light → Button 4. Currently, these are the product categories it supports, so the system will automatically find and pair each light type accordingly.

Each Bluetooth light requires 7–10 seconds to complete pairing. The more lights in the same group, the longer the process will take. Once a light is successfully bound, its main specific light will flash to indicate success, and if Group 1 is successfully bound, the first button in Row 1 will flash amber. Once a light is bound, it cannot be bound again unless it is unbound first.

If a light fails to pair during a group pairing operation, you may retry the pair 2–3 times until it is successful. (if it still fails, reset light by flashing 8 time on positive terminal)

The same process applies to Row 2. Connect your Group 2 lights to the battery and follow the same steps as above. But press **Row 2, Button 1 + lockbutton(pair)**. For more information please refer to manual for Controller 907851S1.

Unpair (Unbind):

Press the **Unlock button (Unpair) + Row 1, Button 1 together at same time** for 2 seconds to unbind all Skyn1 Experience lights connected to Group 1 on the battery. All lights will be unbound and will flash to indicate successful unpairing. Follow the same steps for **Row 2, Button 1 + Unlock button**. To reconnect the lights again, follow the instructions for pairing. If there are a large number of connected lights, you may not be able to remove all bindings at once. Similar to the bounding process, tap 2 to 3 times repeatedly.



FAQ

FAQ and troubleshooting for SKYN1 EXP system as below:

Q: I'm planning to mount multiple lights. What should I be careful about?

A: When mounting multiple lights, ensure each light is connected to the correct group and button during the pairing process. Always follow the pairing steps carefully for each light before mounting. When working in a workshop, make sure not to pair many controllers at the same time, as this can cause interference. If a light has power, it might connect to a different wireless controller box instead of the intended one.

Q: What should I do if a light is broken and needs to be replaced?

A: If a light is broken or not able to pair, mount the new replacement light and pair it again following the same pairing procedure used for the original light. Make sure the old, broken light is unbound from the system before pairing the new one.

Q: Can I test a light without the controller?

A: No. Lights cannot be tested without the controller. You must pair the light with the controller first and test it to confirm it is working correctly before mounting it permanently. This helps avoid the need for rework after installation.

Q: How many lights can I mount, and how are they arranged?

A: You can mount 32 lights max as needed across the two available rows (Row 1 and Row 2), as long as each light is correctly paired to its designated group and button. If you mount more than that connection will be unstable. You can also purchase another controller and connect rest of the light accordingly.

Q: What happens if a light is not connected/paired?

A: If a light is not connected or paired, its corresponding button on the controller will not light up. Only buttons with successfully paired lights will illuminate.

Q: If I only connect one type of light (e.g., only a warning light) to Row 2, will all buttons on Row 2 work?

A: No. Only the button corresponding to the connected light type will work. For example, if Row 2 only has a warning light connected, only the warning light button will illuminate and function — the remaining buttons on that row will not activate, since no lights are paired to them.

Q: Can I customize which button controls which light type?

A: No. The Skyn1 EXP system follows a fixed protocol where each button is pre-assigned to a specific light type (e.g., Driving light, Position light, Work light, Warning light). This assignment cannot be modified or customized — the system must be used as defined.

Q: Can I still choose where to mount specific light types?

A: Yes. While the button-to-light-type assignment cannot be changed, you can choose how to distribute the same light type across the two

rows based on your mounting needs. For example:

Left work light → Row 1

Right work light → Row 2

The same flexibility applies to other light types, such as roof lights and grille lights — you can decide their row placement according to your choice.

Q: What should I do if a light or the system isn't working properly?

A: Maybe Bluetooth mesh network has interruption and due to that some light may have issue so simply touch the light's specific wire to the positive battery terminal 8 consecutive times, with each touch ≥ 0.5 seconds (Must be between 0.5sec to 0.8sec). Try pairing that same light again with the controller. If the issue persists after resetting and re-pairing the light, check all wiring and follow reset method carefully.

If above solution not solve the issue then reset the controller as well, and repeat the full pairing process from the start. Make sure to never disconnect the wire from a light after it has been paired. Always unbind the light first, then disconnect it — otherwise, the light will not pair again until it has been reset. Always unbind a light if you do not want to use it or if you plan to replace it.

Q: Can I mix light types within the same row?

A: No. Each row's four buttons are fixed to specific light types (Driving, Position, Work, Warning) as defined by the Skyn1 EXP protocol. You cannot reassign a button to a different light type.

Unbound before replacement: When replacing a broken light, always unpair the old light first (if still bound) to prevent conflicts before pairing the new one.

*More FAQ will be added on website manual, Please also visit our YouTube channel for the operation video.

SKYN1 EXP Lighting voltage protection information:

1. When the SKYN1 EXP wireless box controls the switching of lights, it will notify all lights in the system of the current state whether some lights are on or all lights are off.

2. When all lights in the system are off and the detected voltage is below 12.4V, a timer automatically starts counting down for 2 hours before entering low-power mode. (If any Bluetooth light is on, the system will not enter low-power mode, in order to avoid affecting normal user commands.)

3. If, during the countdown, a Bluetooth light is turned on or the voltage rises above 12.4V, the timer will be cleared and the timing process will exit. The system will then wait until all lights are off again and the voltage drops below 12.4V before restarting a new round of timing.

4. As long as any light detects a voltage above 12.4V, low-power mode is deactivated.

Note: Based on our new circuit test, when the lights are off and have not entered low-power mode, the current consumption is approximately 12mA



INCLUDED IN PACKAGE:

- Rubber pad: Yes
- Top stabilizer hole: M4
- Cable specification: Red,Black: 2 mm² / Grey: 0.5 mm²

- | | |
|-------------------------|-----------------------|
| • For bracket 270947S1: | For bracket 270948S1: |
| • 1 x M10*30 Screw | 1 x M12*35 Screw |
| • 1 x M10 Nut | 1 x M12 Nut |
| • 1 x M10 Washer | 1 x M12 Washer |
| • 1 x M10 Spring Washer | 1 x M12 Spring Washer |
| • For housing: | For housing: |
| • 4 x M8*20 Screws | 4 x M8*20 Screws |
| • 4 x M8 Washer | 4 x M8 Washer |
| • 4 x M8 Spring Washer | 4 x M8 Spring Washer |

READ ALL THE INSTRUCTIONS AND STUDY THE DIAGRAMS BEFORE INSTALLING NEW LIGHT!

LEGAL MOUNTING

- Please check state and local laws for proper usage and mounting. Strands will not be responsible for products mounted incorrectly or in violation of local laws (e.g., ECE R48 regulation for the EU)

PRODUCT CARE

- Clean the product with lukewarm water and an alkaline degreaser. Avoid strong chemicals; rinse immediately if exposed. Do not use a pressure washer for cleaning.
- Take care if your light has a breather. Ensure it is protected against rain and dust, especially if it has a sticker breather. Damage to the breather due to incorrect installation will void the warranty.
- Internal moisture is normal and will dissipate through the breather vent after several days of use.
- We do not recommend painting the product housing. If paint is still applied, please ensure the breather is protected and an oven is not used for curing the paint. Otherwise, the warranty might be void.

INSTALLATION

- Ensure power is turned off during installation.
- Do not cut the connector cable to less than 50 cm. If the original cable is already shorter than 50 cm, leave it as is. Otherwise, the warranty will be void.
- Make sure to use only the correct accessories included in the package. Installation errors may void the warranty.
- Tighten screws, washers, and nuts to prevent them from loosening or chafing. Do not overtighten screws to avoid damaging the product's protective components.
- Use a watertight solution for wiring connections.

WARNING!

- For safe operation, use only the voltage specified in the product description. This light becomes hot under continuous use. Do not remove or touch the casing for at least 30 minutes after turning the lamp off



Contact us if you need support: support@strands.se or +46(0)320-450450
Please also refer to the FAQ section on our website for more information.

www.strandseurope.com



strands®
-lighting division